



PRODUCT MANUAL



HDRG-100 Hot Dog Roller Grill





General Safety Precautions

1. This manual will outline safety warnings and precautions, operating, inspection, maintenance and cleaning procedures. The warnings and instructions reviewed in this manual cannot cover all possible conditions and situations that may occur. Factors such as caution and common sense cannot be built into this product and it is trusted the operator will follow these measures.
2. This hot dog roller grill must never be modified and should only be used for its intended purpose.
3. Always check that this hot dog roller is plugged into a grounded outlet with the appropriate electrical supply. The grounding pin should NEVER be removed or manipulated, and ensure that the wall outlet being used is properly grounded. If it is not, or you must install a grounded outlet. Have the work performed only by a certified electrician who is properly qualified to meet local safety and electrical codes.
4. The rollers get hot. **DO NOT** touch hot rollers, this can cause severe burns or other injuries.
5. Ensure that the power outlet, plug and cord being used are in good, working condition. Damaged components should be repaired by a certified electrician who is qualified to meet local safety and electrical codes. **DO NOT** use this product with extension cords or 3 prong adaptors. Even with a properly functioning power cord, keep water away from the cord and avoid letting your power cord run over carpets or heating devices.
6. If missing or broken components are found, leave the roller **TURNED OFF**. Do not attempt to use the roller. Contact a qualified service technician to make all repairs.
7. Never install the roller in an enclosed space; it is designed for freestanding, **INDOOR use ONLY**. This machine should remain upright at all times – when in use or when in transport.
8. Use in the presence of flammable liquids, gases, dust or other explosive situations should be avoided.
9. Always clean the rollers, make sure not to leave any grease or any other type of material that can catch on fire near or on the machine.
10. **DO NOT** allow untrained personnel, the public and especially children to operate or have direct physical contact with the machine. **FOR COMMERCIAL USE ONLY**. All person operating this machine must be 18 years or older.



Storage and Transportation

The Rollin' Dog Roller must remain upright at all times, and should never be turned sideways or upside down for storage. All power to the roller must be disconnected for proper storage. A cover for the machine is recommended to avoid dust buildup, and the roller should be stored in an area away from flammable materials and moisture.

Similar to storage, the roller should remain upright during all transportation. Avoid vibration for long periods of time.

Operation and Maintenance

NOTE: Before the first use with your Rollin' Dog Roller, lubricate the rollers to ensure they continue to turn smoothly. This can easily be done by applying vegetable oil to the ends of the rollers. Avoid non-stick sprays, which can hinder your machine's performance because of buildup on the rollers.

To Use Your Machine:

1. Turn the Power switch to On.
2. Adjust the standard temperature controls to choose your desired cooking preference. Turn dials clockwise to reach the highest cooking settings, preferred for fast cooking. Turn the dials counter-clockwise for slower cooking, or to hold cooked hot dogs on a warm setting.
 - ** The Front dial will set the temperature for all rollers. The Back dial will set the temperature for the last rollers, if so desired, so you can hold product on a warming setting while quickly cooking other hot dogs on a hotter setting.
 - ** Green indicator lights will stay lit while the rollers are warming to your desired temperature. When that designated temperature has been reached, the light will go out.
3. Make sure to turn off the machine when not in use. Leaving the machine on overnight or while not attending it could cause a fire or serious damage.



Cleaning and Maintenance

At no point in the cleaning process should the Rollin' Dog Roller or any part of it, be submerged in water. Rollers will be very hot, so turn the machine off prior to cleaning or maintenance and allow proper time for the machine to cool.

The Rollin' Dog Roller will work at an optimal level, and increase the longevity of the machine, if proper cleaning and maintenance guidelines are followed.

To clean your machine:

1. Turn the Power switch to Off. Let the rollers cool down. Never touch or wipe hot rollers.
2. Gently wipe the rollers with a clean, soft cloth. Never use metal of any form to clean the rollers, as you will quickly damage them. If a strong buildup or food would get stuck to the machine, use a wooden utensil to remove before applying the clean cloth. The natural oils from the products you cook will keep the machine lubricated.

Always clean the machine after use. Leaving grease on the machine and turning the machine on could cause a fire.

1 Year Replacement Warranty

This warranty is not effective if damage occurs because of accident, carelessness, improper installation, lack of proper set-up, abuse, water damage, or if the equipment is installed or operated in any manner contrary to the installation and operating instructions. Work performed by unauthorized personnel or unauthorized service agencies voids this warranty. This warranty does not apply to any warranty claims made on products sold or used outside of Canada.

To purchase supplies for your Rollin' Dog Hot Dog Roller please visit www.popcornmachine.ca