

INSTALLATION

1. TURN OFF THE POWER AND INSTALL THE LINEAR LIGHT TO THE CEILING GRID AND TIGHTEN THE TWO END NUTS.



2. SECURE THE JUNCTION BOX TO THE LINEAR LIGHT AND TIGHTEN THE TWO END NUTS.



3. CONNECT THE LINEAR LIGHT UNIT TO THE OUTPUT CONNECTOR OF JUNCTION BOX. ONE DRIVER CAN SUPPORT A MAXIMUM OF THREE UNITS.



4. OPEN THE JUNCTION BOX AND WIRE

