

COMPATIBLE BALLAST LIST

LR34192

COMPATIBLE BALLASTS*

BRAND	BALLAST DESCRIPTION			1 LAMP LOAD		2 LAMP LOAD		3 LAMP LOAD		4 LAMP LOAD	
	PART NUMBER	START METHOD	# OF LAMPS	INPUT VOLTAGE		INPUT VOLTAGE		INPUT VOLTAGE		INPUT VOLTAGE	
				120V	277V	120V	277V	120V	277V	120V	277V
STANDARD	E232PI120L	IS	2	•	-	•	-	-	-	-	-
	E232T8IS120/N/AS	IS	2	•	-	•	-	-	-	-	-
	E432T8IS120/H	IS	4	-	-	-	-	X	-	•	-
	E432T8IS120/L/AS/BULK	IS	4	-	-	-	-	•	-	•	-
	E432T8IS120/N/AS/BULK	IS	4	-	-	-	-	•	-	•	-
ADVANCE	ACT4P32ISUNV	IS	4	-	-	-	-	•	•	•	•
	ICN-2P32-N	IS	2	X	X	•	•	-	-	-	-
	ICN-2P32-SC	IS	2	•	•	•	•	-	-	-	-
	ICN-2S40-N	IS	2	•	•	•	•	-	-	-	-
	ICN-4P32-N	IS	4	-	-	-	-	•	•	•	•
	ICN-4P32-SC	IS	4	-	-	-	-	•	•	•	•
	ICN-1P32-N	IS	1	•	•	-	-	-	-	-	-
	IOPA-1P32-N	IS	1	•	•	-	-	-	-	-	-
	IOPA-2P32-N	IS	2	X	X	•	•	-	-	-	-
	IOPA-1P32-LW-N	IS	1	X	X	-	-	-	-	-	-
	IOPA-2P32-LW-N	IS	2	X	X	•	•	-	-	-	-
	IOPA-4P32-LW-N	IS	4	-	-	-	-	•	•	•	•
	IOPS-1P32-N	IS	1	•	•	-	-	-	-	-	-
	IOP-4P32-LW-N	IS	4	•	•	•	•	•	•	•	•
	RCN-2S32-SC	PS	2	-	-	•	-	-	-	-	-
	REZ-2S32-SC	PS	2	-	-	•	-	-	-	-	-
	REL-2P32-SC	IS	2	•	-	•	-	-	-	-	-
REL-4P32-RH-TP	IS	4	-	-	-	-	•	•	•	•	
RELB-2S40-N	RS	2	•	-	•	-	-	-	-	-	
ESPEN	VE232MVHIP	IS	2	•	•	•	•	-	-	-	-
	VE232MVHIPE	IS	2	•	•	•	•	-	-	-	-
	VE232MVHIPHE	IS	2	X	X	•	•	-	-	-	-
	VE232MVHIPL	IS	2	•	•	•	•	-	-	-	-
	VE432MVHIP	IS	4	-	-	-	-	•	•	•	•
	VE432MVHIPE	IS	4	-	-	-	-	•	•	•	•
	VE432MVHIPHE	IS	4	-	-	-	-	•	•	•	•
FULHAM	NPY-120-232-LT8	PS	2	•	-	•	-	-	-	-	-
	NPY-120-432-T8-B	IS	4	-	-	-	-	•	-	•	-
	NPY-120-432-T8-S	IS	4	-	-	-	-	•	-	•	-
	WHCG3-120-T8-IS	IS	3	-	-	•	-	•	-	-	-
	WHCG5-120-T12-RS	RS	2	•	-	•	-	-	-	-	-
	WHL-120-L	IS	2	•	-	•	-	-	-	-	-
	WH5-120-L	IS	2	-	-	X	-	-	-	-	-
FUSION	FB232MVE	IS	2	•	•	•	-	-	-	-	-
	FB232MVE-HE	IS	2	•	•	•	-	-	-	-	-
	FB232MVE-LHE	IS	2	•	-	•	-	-	-	-	-
	FB232MVE-PPS-HE	PS	2	•	•	•	-	-	-	-	-
	FB332MVE	IS	3	-	-	•	•	•	•	-	-

BALLAST DESCRIPTION				1 LAMP LOAD		2 LAMP LOAD		3 LAMP LOAD		4 LAMP LOAD	
BRAND	PART NUMBER	START METHOD	# OF LAMPS	INPUT VOLTAGE		INPUT VOLTAGE		INPUT VOLTAGE		INPUT VOLTAGE	
				120V	277V	120V	277V	120V	277V	120V	277V
	FB432MVE	IS	4	-	-	-	-
	FB432MVE-HE	IS	4	-	-	-	-
	FB432MVE-PPS-HE	PS	4	-	-	-	-
GE	GE 232-120RES-DIYB	IS	2	.	-	.	-	-	-	-	-
	GE 232-120-PS-N	PS	2	.	-	.	-	-	-	-	-
	GE232MAX-G-N	IS	2	-	-	-	-
	GE232MAX-N	IS	2	-	-	-	-
	GE232-MVPS-L	PS	2	-	-	-	-
	GE232-MV-N	IS	2	-	-	-	-
	GE-232-MVPS-H	PS	2	x	x	.	.	-	-	-	-
	GE332MAX90-V60	IS	3	-	-	x	x	.	.	-	-
	GE332MV-N-DIY	IS	3	-	-	-	-
	GE432MAX-H-42T	IS	2	-	-	-	-
	GH2P59ISUNV	IS	2	x	x	.	.	-	-	-	-
GREEN HILL	GH4P32ISUNV	IS	4	-	-	-	-
HALCO	EP232IS/H/MV/HE	IS	2	x	x	.	.	-	-	-	-
	EP332IS/L/MV/HE	IS	3	-	-	-	-
	EP332IS/MV/MC	IS	3	-	-	-	-
	EP432IS/L/MV/HE	IS	4	-	-	-	-
	EP432IS/MV/MC	IS	4	-	-	-	-
KEYSTONE	KTEB-232-UV-PS-VDIM	PS	2	-	-	.	.	-	-	-	-
OSRAM	QHE 2x32T8/UNV DIM-TC	PS	2	-	-	.	.	-	-	-	-
	QHE 4*32T8/UNV PSN-SC	PS	4
HOWARD	EP4/32IS/MV/MC/HE	IS	4	.	-	.	-
	EPL3/32IS/MV/SC/HE	IS	3	-	-

*The presence of a ballast on this chart is not a guarantee of the compatibility of the bulb in any particular installation. Absence of a ballast on this chart does not imply incompatibility. Please reference the ballast manufacturer's instructions for installation and further information.

IS= INSTANT START
 PS= PROGRAMMED RAPID START
 RS= RAPID START

. = YES
 - = N/A
 x = NO