

LED HIGH OUTPUT OUTDOOR WALL SCNCE - UP/DOWN CCT & WATTAGE SELECTABLE LR40347


CAUTION

IN ORDER TO PREVENT POSSIBLE SHOCK, TURN OFF THE MAIN POWER AT THE CIRCUIT BREAKER BEFORE INSTALLING THE LIGHT FIXTURE.

WARNING

ALL ELECTRICAL CONNECTIONS MUST BE IN ACCORDANCE WITH LOCAL AND NATIONAL ELECTRICAL CODE (N.E.C.) STANDARDS. IF YOU ARE UNFAMILIAR WITH PROPER ELECTRICAL WIRING CONNECTIONS HIRE A QUALIFIED ELECTRICIAN. REMOVE THE FIXTURE AND THE MOUNTING PACKAGE FROM THE BOX AND MAKE SURE THAT NO PARTS ARE MISSING BY REFERENCING THE ILLUSTRATIONS ON THE INSTALLATION INSTRUCTIONS.

BOX CONTENTS

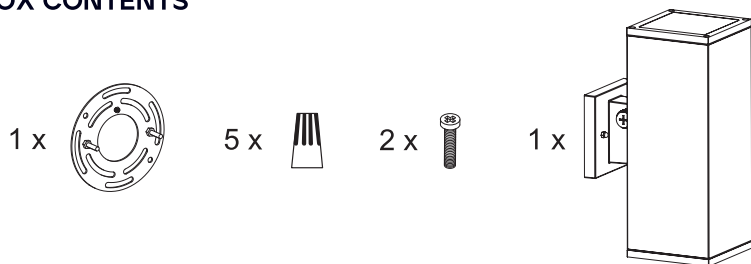

TOOLS NEEDED

(NOT INCLUDED)



Phillips screwdriver

INSTRUCTIONS

1

2

3

4

5

6

7

8

ONCE INSTALLED, USE WATERPROOF SILICONE (NOT INCLUDED) TO SEAL BETWEEN THE EDGES AND THE FIXTURE.

1	2	CCT	3	4	POWER	5	PHOTOCELL
↑	↓	OFF	↑	↓	40W	↑	ON
↑	↓	3000K	↑	↓	30W	↑	OFF
↑	↓	4000K	↑	↓	20W		
↑	↓	5000K	↑	↓	10W		

SLIDE	LIGHT DIRECTION
←	UP LIGHT
→	UP-DOWN LIGHT