

50W & 150W FLOOD LIGHT LR40350, LR40351, LR40355, LR40356, LR40357, LR40358

SAFETY INFORMATION

READ CAREFULLY BEFORE INSTALLING FIXTURE AND KEEP FOR FUTURE REFERENCE.

Fixtures must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

WARNING - MAKE SURE POWER IS OFF BEFORE INSTALLING OR MAINTAINING FIXTURE.

INSTALLATION MUST BE CARRIED OUT BY A QUALIFIED ELECTRICIAN.

LR40350- 30W/40W/50W





LR40355 - 80W/100W/150W





 


WIRING


TURN OFF THE POWER

Connect AC wire, black wire to L, white wire to N, and green wire to E. 1-10V dimmer connection (with dimmable driver)

- 1. Compatible with 0-10V Dimming
- 2. Connect wires as shown below, purple wire is D+, gray wire is D-.



 PHOTOCEL WIRING CONNECTION (ONLY FOR 80W-150W)




INSTALLATION

KNUCKLE


1. Use screw key to ope the junction-box 2. Put the wires of lamp into the J-box




3. Screw up the knuckle mount into junction box

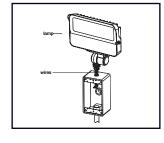


4. Use wire-nuts to connect the wires of lamp and J-box

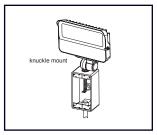


5. Lock the junction box with screw key

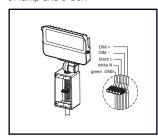

6. Use hex-key to screw off the hex screw in knucklemount

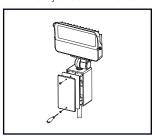

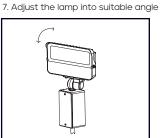


7. Use hex-key to tighten up the screw




732-882-1500 ♦ luxrite.com

LUXRITE®


KNUCKLE

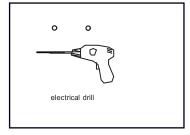


1. Mark the position of the fixing holes with fold light bracket, then drill fixingholes

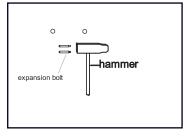


2. Drive in the bolts to the pre-drilled holes with thread outside, as shown below

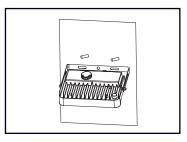


3. Make the bracket face tightly to the wall through the thread

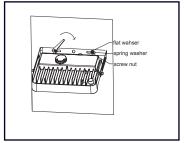

4. Fasten the screw nut clockwise with provided wrench

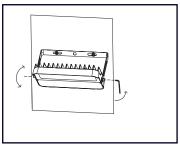


5. Rotate the light to the proper angle and fasten the screws

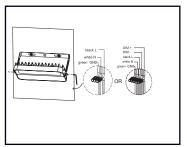


6. Fasten the screw both sides with allen driver


SLIPFITTER

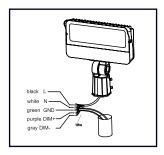

1. Loosen the 4 screws on the lamp holder, connect the wires correctly and put the wires into the lamp pole

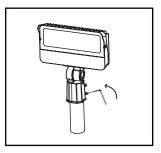

2. Tighten the screws to secure the lamp on the lamp pole

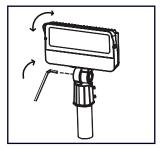

3. Adjust the lamp into desired angle



4. Use hex-key to screw up the hex-screw.

 ${\tt NOTE: Locking \ bolt \ can \ be \ only \ compatible \ with \ a \ lamp \ pole \ with \ an \ outer \ diameter \ of \ 60. \ Adjustable \ angle \ is \ 0-90^\circ$

CCT SWITCH

Select desired color temperature and slide switch.

5000K 50K 50W 50W 40W 40W 3000K 30W 30W

LR40355

