



Chronograph

Watch Instruction Manual

(Sylvi NitroNeon)



www.sylvi.in




Index

No	Subject	Page
1.	Brief Introduction	03
2.	Operation Instruction	04
	How to set Date & Time How to Use Stopwatch Set Stopwatch Hands' Reset Position	04 04 05
3.	Battery Instruction	06
4.	Water Resistant	07
5.	Warranty Instruction	80
6.	Claim Warranty	09
7.	Contact Us	09



Brief Introduction

Function Instruction

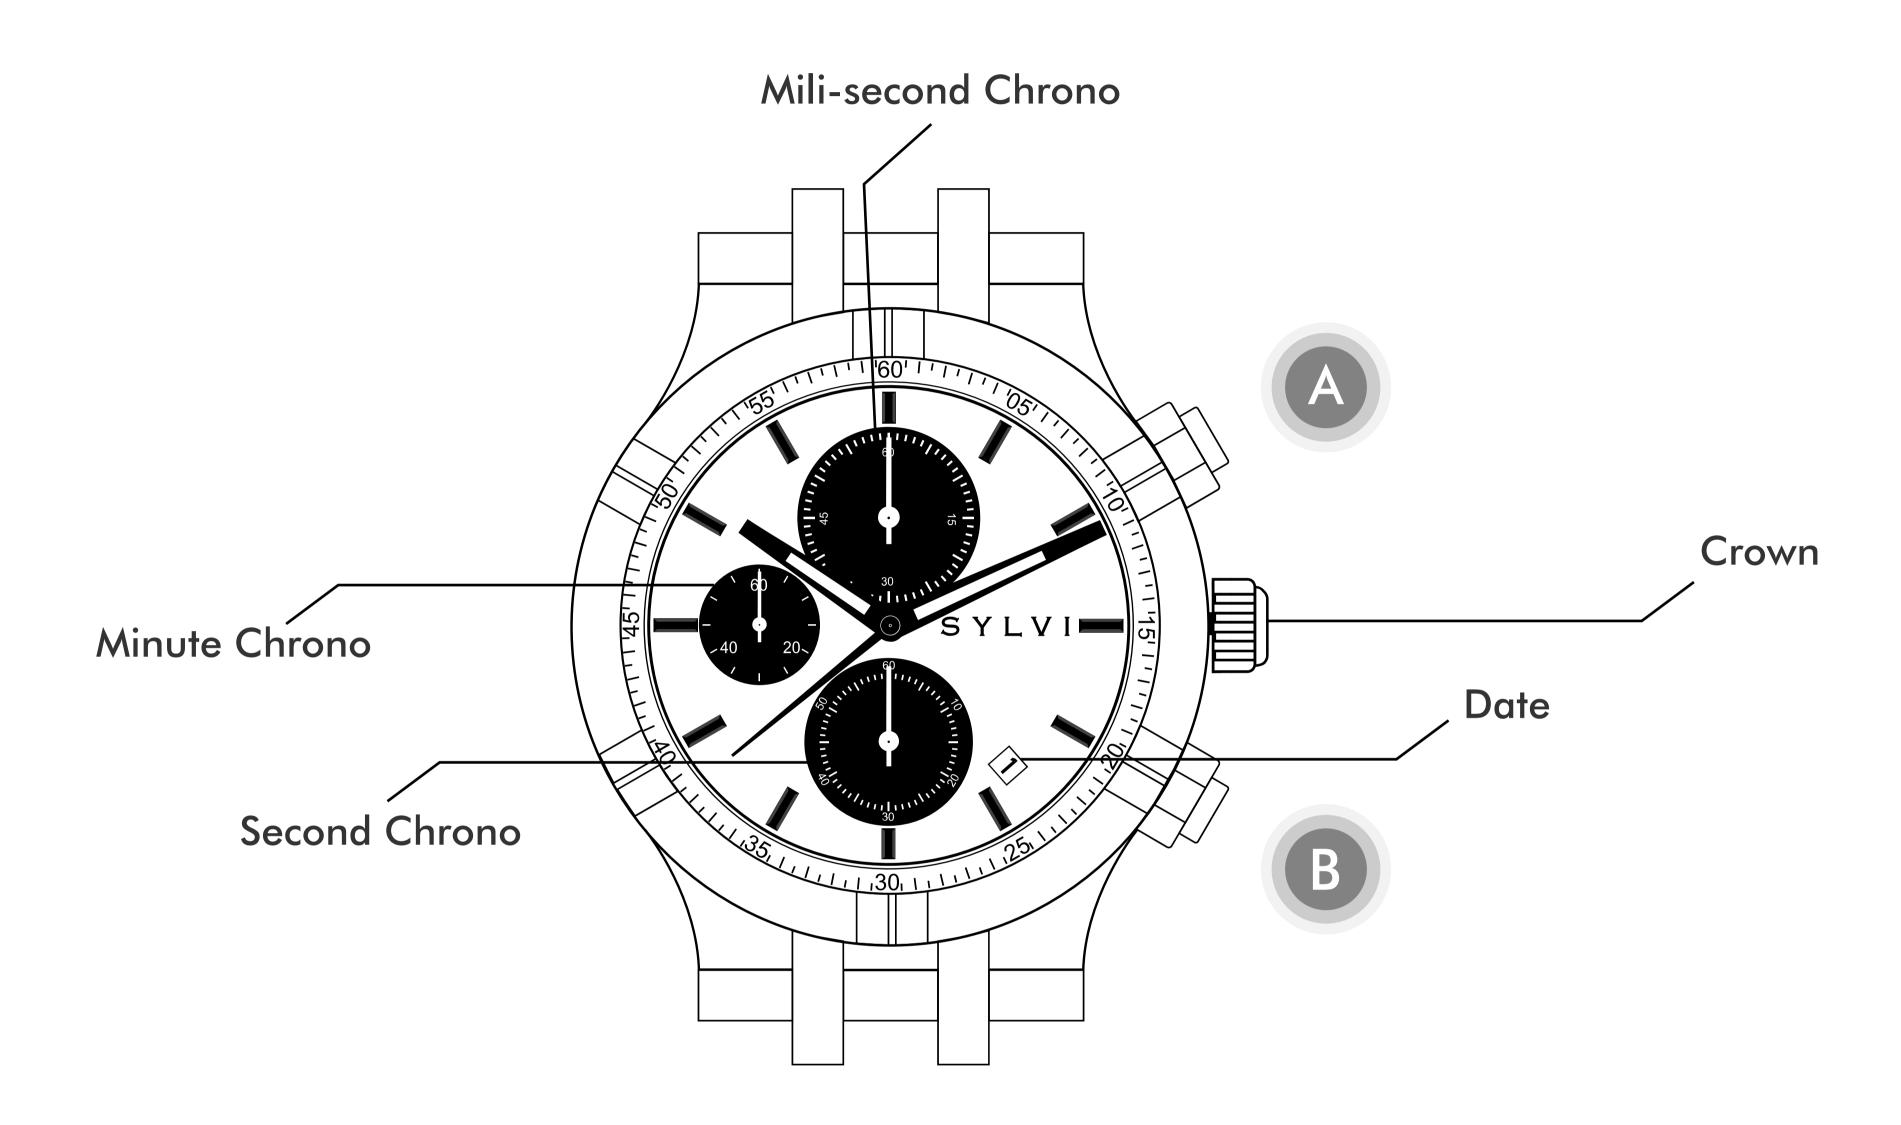

Watch Dial

- Diameter : 34mm

Watch Case

- Height : 49mm

- Diameter : 46mm

- Thickness: 12mm

Strap

- Width: 24mm

- Thickness: 4mm

A Start/Stop Button

B Reset Button

Water Resistant


3 ATM



Operation Instructions

How to Set Date & Time:-

- 1. Pull out the crown to position B.
- 2. Turn crown either way to correct date.
- 3. Pull out the crown to the position C.
- 4. Turn crown either way to correct time.
- 5. Push in the crown to the position A (Normal).

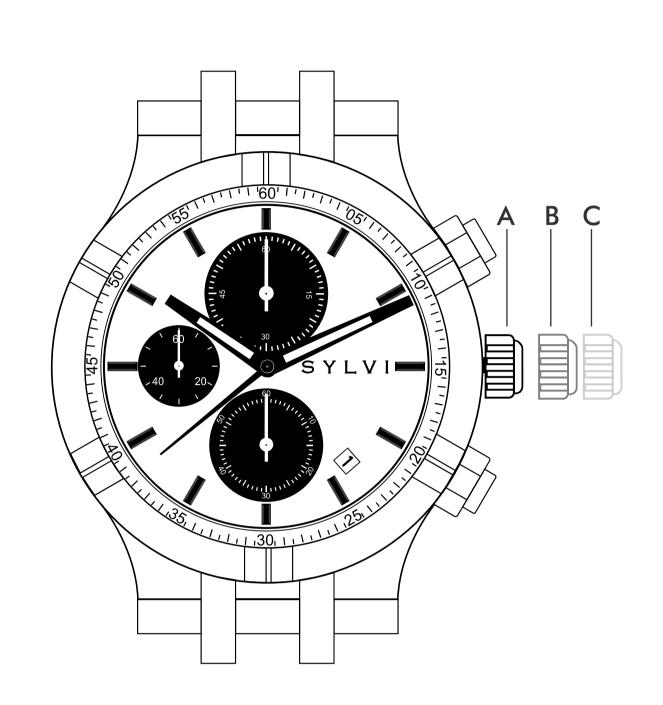


How to use Stopwatch:-

- 1. Ensure the crown is in position A (pushed in).
- 2. Press button A once to start the stopwatch.
- 3. Use button A to pause or resume stopwatch.
- 4. To reset the stopwatch, pause the stopwatch by pressing button A. Then, press button B to reset the stopwatch.

Note:

Do not operate a stopwatch with the crown pulled out.

A stopwatch will stop automatically at the end of 59 minutes 59 seconds

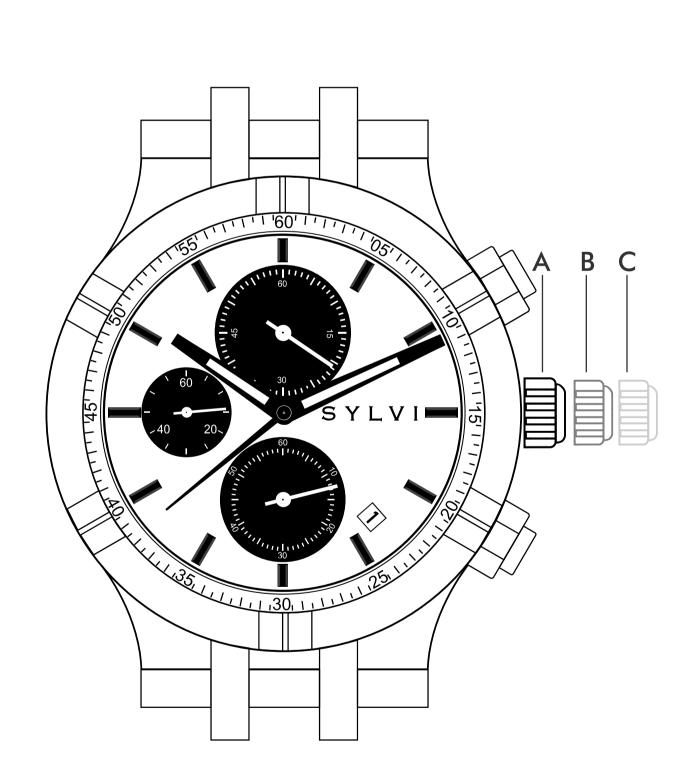



Set Stopwatch Hands' Reset Position

If the subdials of your watch are not at their proper reset position, you can adjust them by following these steps:

- 1. In normal mode, pull the crown out to position C.
- 2. Press button A repeatedly until the second hand is set to the 0 position. (Press and hold for faster rotation

of hands)


- 3. Press button B repeatedly until the minute and hour hands are set to the 0 position. (Press and hold for faster rotation of hands).
- 4. Push the crown back into its original position.

Note:

Timekeeping will stop while the crown is pulled out. Correct the current time after performing the above operation.




Battery Instructions

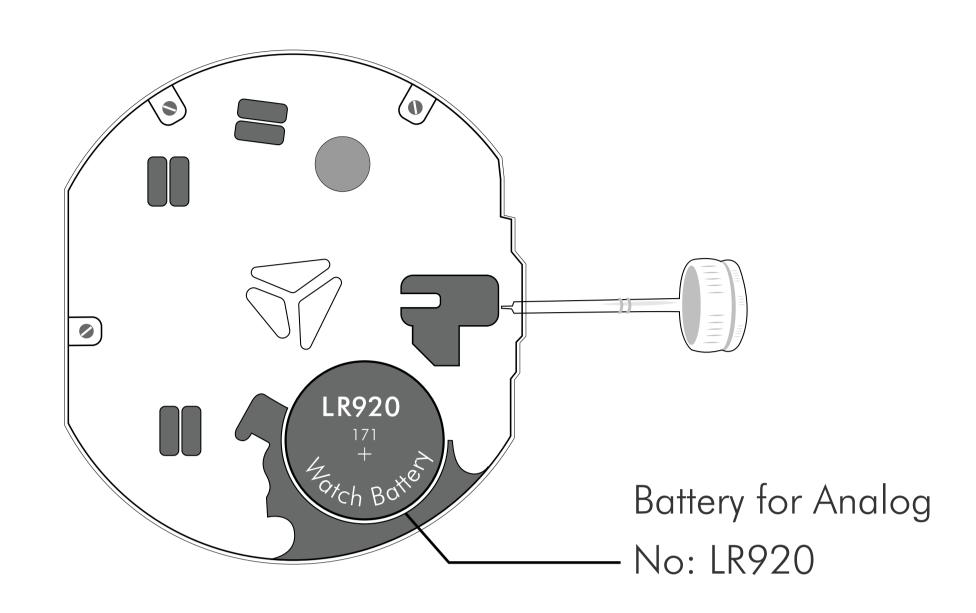

A LR920 battery cell for the chronograph watch

Strap Instructions

PU Strap

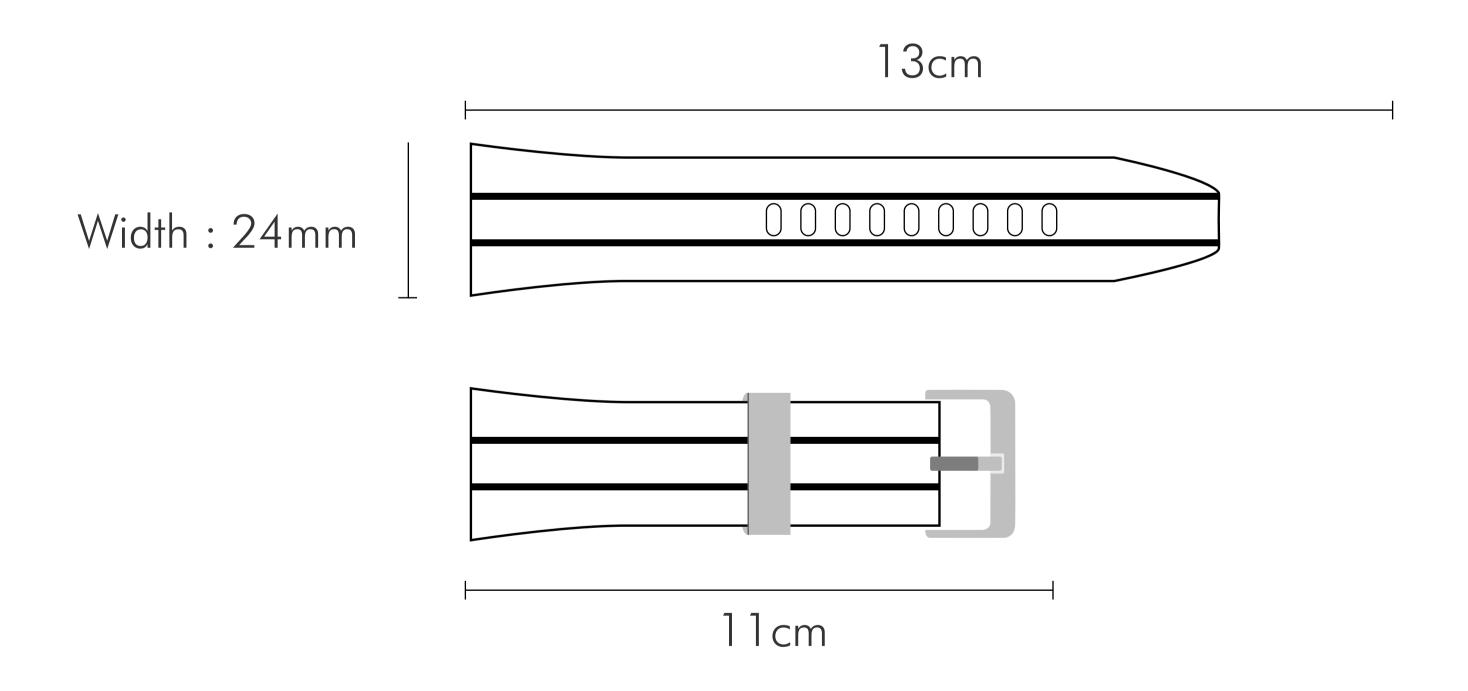

- The strap with 13cm at tail side and 11cm at buckle side.
- The strap with 24mm width.
- A replacement belt of lug size 24mm is suggested for this watch



Water Resistant

For information about the water-resistant rating of Sports, Casual, Chronograph, and Slim watches please refer to page 3.

The water resistant rating provides guidelines for appropriate water-related exposure to avoid damage to internal watch components. Please see the chart for recommended usage guidelines.

To ensure water does not enter the watch and cause damage to it, please follow the instructions listed below:

- Do not adjust the crown while the timepiece is in contact with water.
- Ensure the crown is in the closed position before contact with water. For timepieces with screw-down crowns, ensure the crown is completely tightened before contact with water.
- For timepieces with pusher-enabled functionality, do not engage the function underwater.
- Exposure to the extreme atmosphere is not recommended (i.e. hot water, saunas, or steam rooms).
- Avoid exposure to water moving with force (i.e. water running from a faucet, ocean waves, or waterfalls).
- Avoid long exposure to saltwater. After contact with salt water, rinse the watch under tap water
- If rated 5ATM or higher and wipe dry with a soft cloth.

Recommendations For Water-Related Use						
Indication	SPLASH RESISTANT	SUBMERSIBLE	SHALLOW DIVING	SCUBA DIVING		
None	(Hand Washing)	(Swimming)	(Snorkeling)	(Not Deep Sea)		
3 ATM • 30 Meters						
5 ATM • 50 Meters						
10 ATM • 100 Meters						
20 ATM • 200 Meters						



Warranty Instructions

Your watch is warranted for six (6) months from the original date of purchase under the terms and conditions of the warranty. The warranty covers manufacturing defects, i.e. the watch movement, hands, and dial only. The covered components will be repaired or the watch will be replaced free of component and labor charges if it proves to be defective in material or workmanship under normal use.

- In case of replacement, we cannot guarantee that you will receive the same model watch. If your model is not available, a watch of equal value and similar style will be provided.

This warranty does not cover:

- Any defect in materials and workmanship of battery, case, crystal, button, crown, strap, or bracelet; including plating on the case and/or bracelet.
- Damage resulting from improper handling, lack of care, accidents, normal wear and tear or aging.
- Water damage if care instructions for the product's water resistance levels (as per the product specification) were not followed.
- Products that are not purchased from an authorized retailer.
- This warranty is void if the watch has been damaged by accident, negligence of persons other than authorized sales or service agents, unauthorized service, or other factors not due to defects in materials and workmanship. This warranty is void if the serial number or product date codes or other tracking marks have been removed, altered, or obliterated.

Get Additional Warranty





or

https://support.sylvi.in/warranty-registration

Click Here to Open



How to Claim Warranty?

Step 1:

Contact customer care and report your problem. An RMA ID will be generated (Without RMA ID, warranty cannot be claimed)

Step 2:

The product will have to be sent to service center including the following information.

RMA ID - Given by customer care executive

Name

Full address

Daytime contact mobile number

Email address

Where your item was purchased from

Model reference of the item (Found on the back of your watch)

Full description of the work required

A copy of your proof of purchase

How to Reach Us?

For any service-related inquiries and feedback, call our number +919687660234 Monday to Saturday, 10:00 am to 6:00 pm. (closed on National and Festival holidays).

If you are unhappy for any reason, please mail us at <u>customercare@sylvi.in</u>. We promise to reply by the next working day.

