



**SYLVI**

RACE WITH TIME

 


# Analog + Digital

Watch Instruction Manual

---

(Sylvi Rig One 'O One - WT Max)

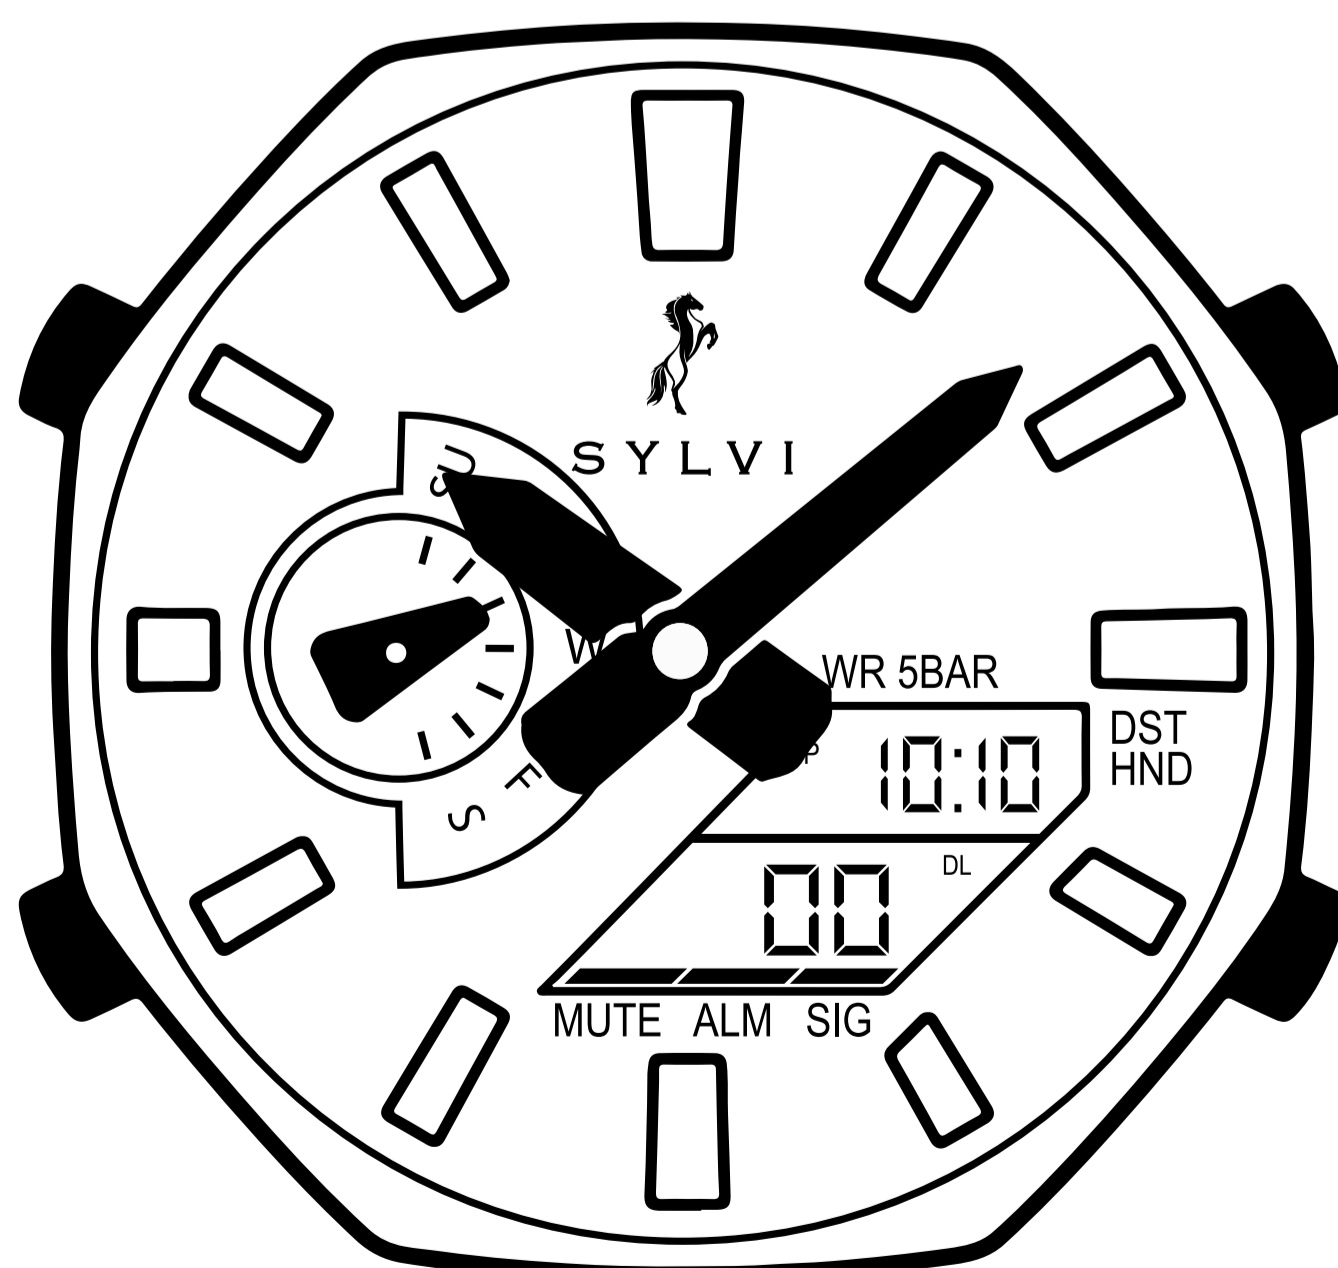


[www.sylvi.in](http://www.sylvi.in)

# Index
 
| No | Subject                       | Page |
|----|-------------------------------|------|
| 1. | Brief Introduction            | 03   |
| 2. | Operation Instruction         | 04   |
|    | How to set Time               | 04   |
|    | How to set Date & Day Setting | 05   |
|    | How to set Alarm              | 05   |
|    | How to set Stopwatch          | 06   |
|    | How to set Countdown Timer    | 06   |
|    | How to set Keytone Setting    | 07   |
|    | How to check World Time       | 07   |
|    | How to set Light Setting      | 08   |
|    | How to Reset Watch            | 08   |
| 3. | Betry Instruction             | 09   |
| 4. | Water Resistant               | 10   |
| 5. | Warranty Instruction          | 11   |
| 6. | Claim Warranty                | 12   |
| 7. | Contact Us                    | 12   |

# Brief Introduction

## Function Instruction

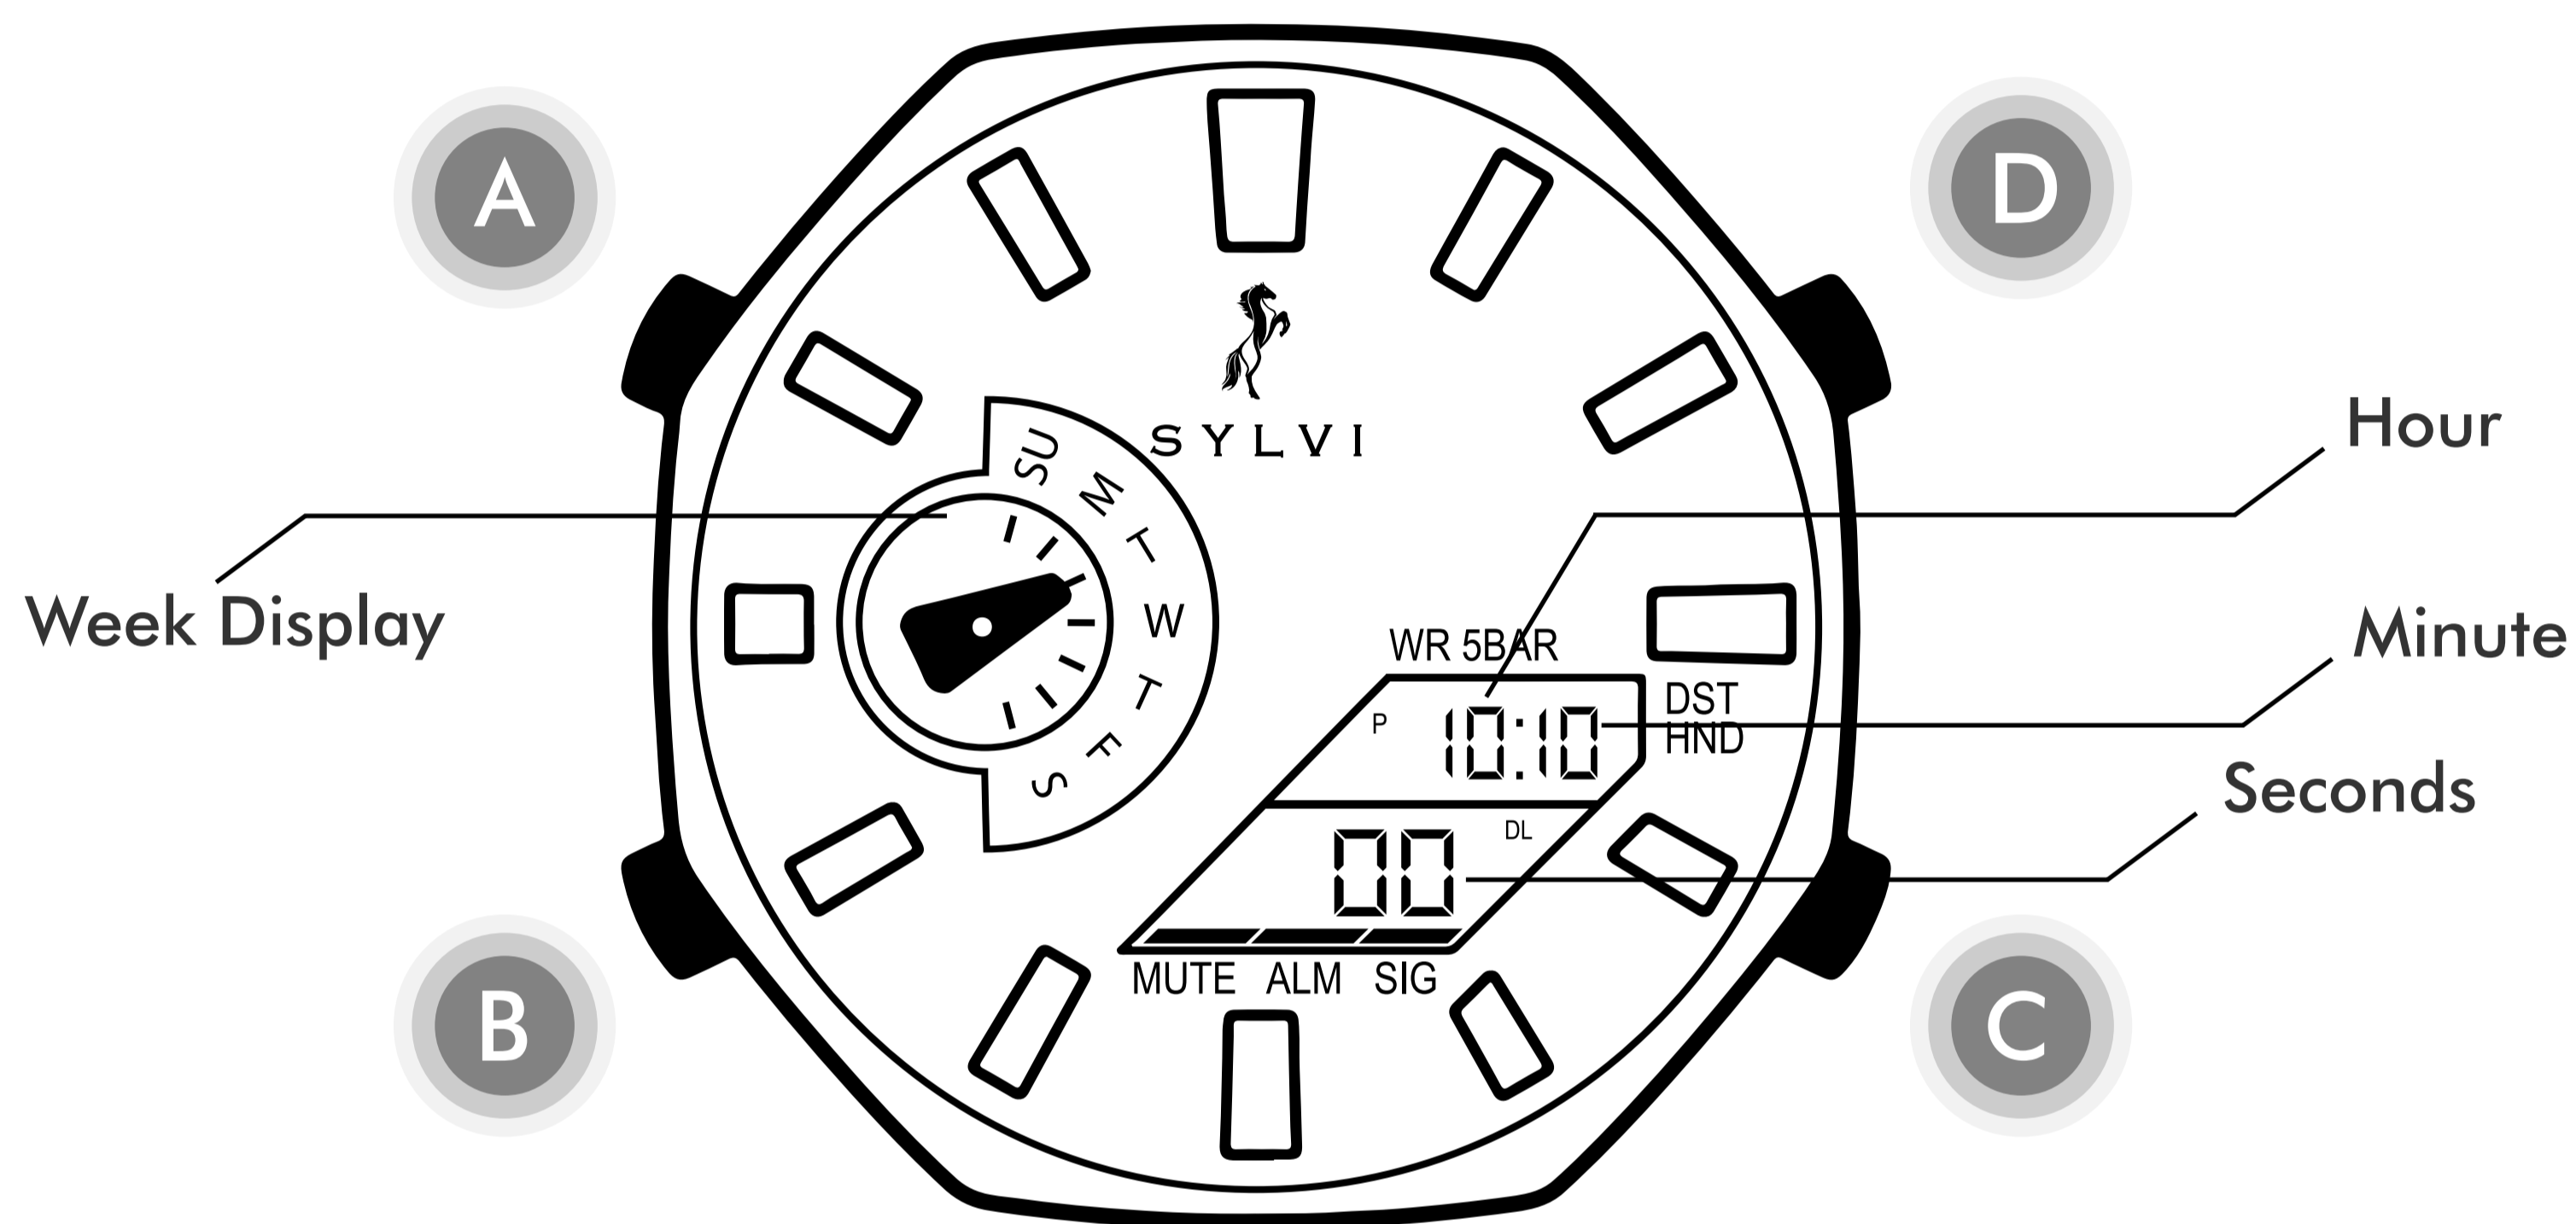

### Watch Dial

- Diameter : 32mm

### Watch Case

- Hight : 52mm  
 - Diameter : 42mm  
 - Thickness : 13mm

### Strap

- Width : 25mm  
 - Thickness: 4mm

 
- A** Adjust Analog Time
- B** Mode Change
- C** Adjust Digital Time
- D** LED Light Button

**Water Resistant**

3 ATM



# Operation Instructions

## How to Set Time

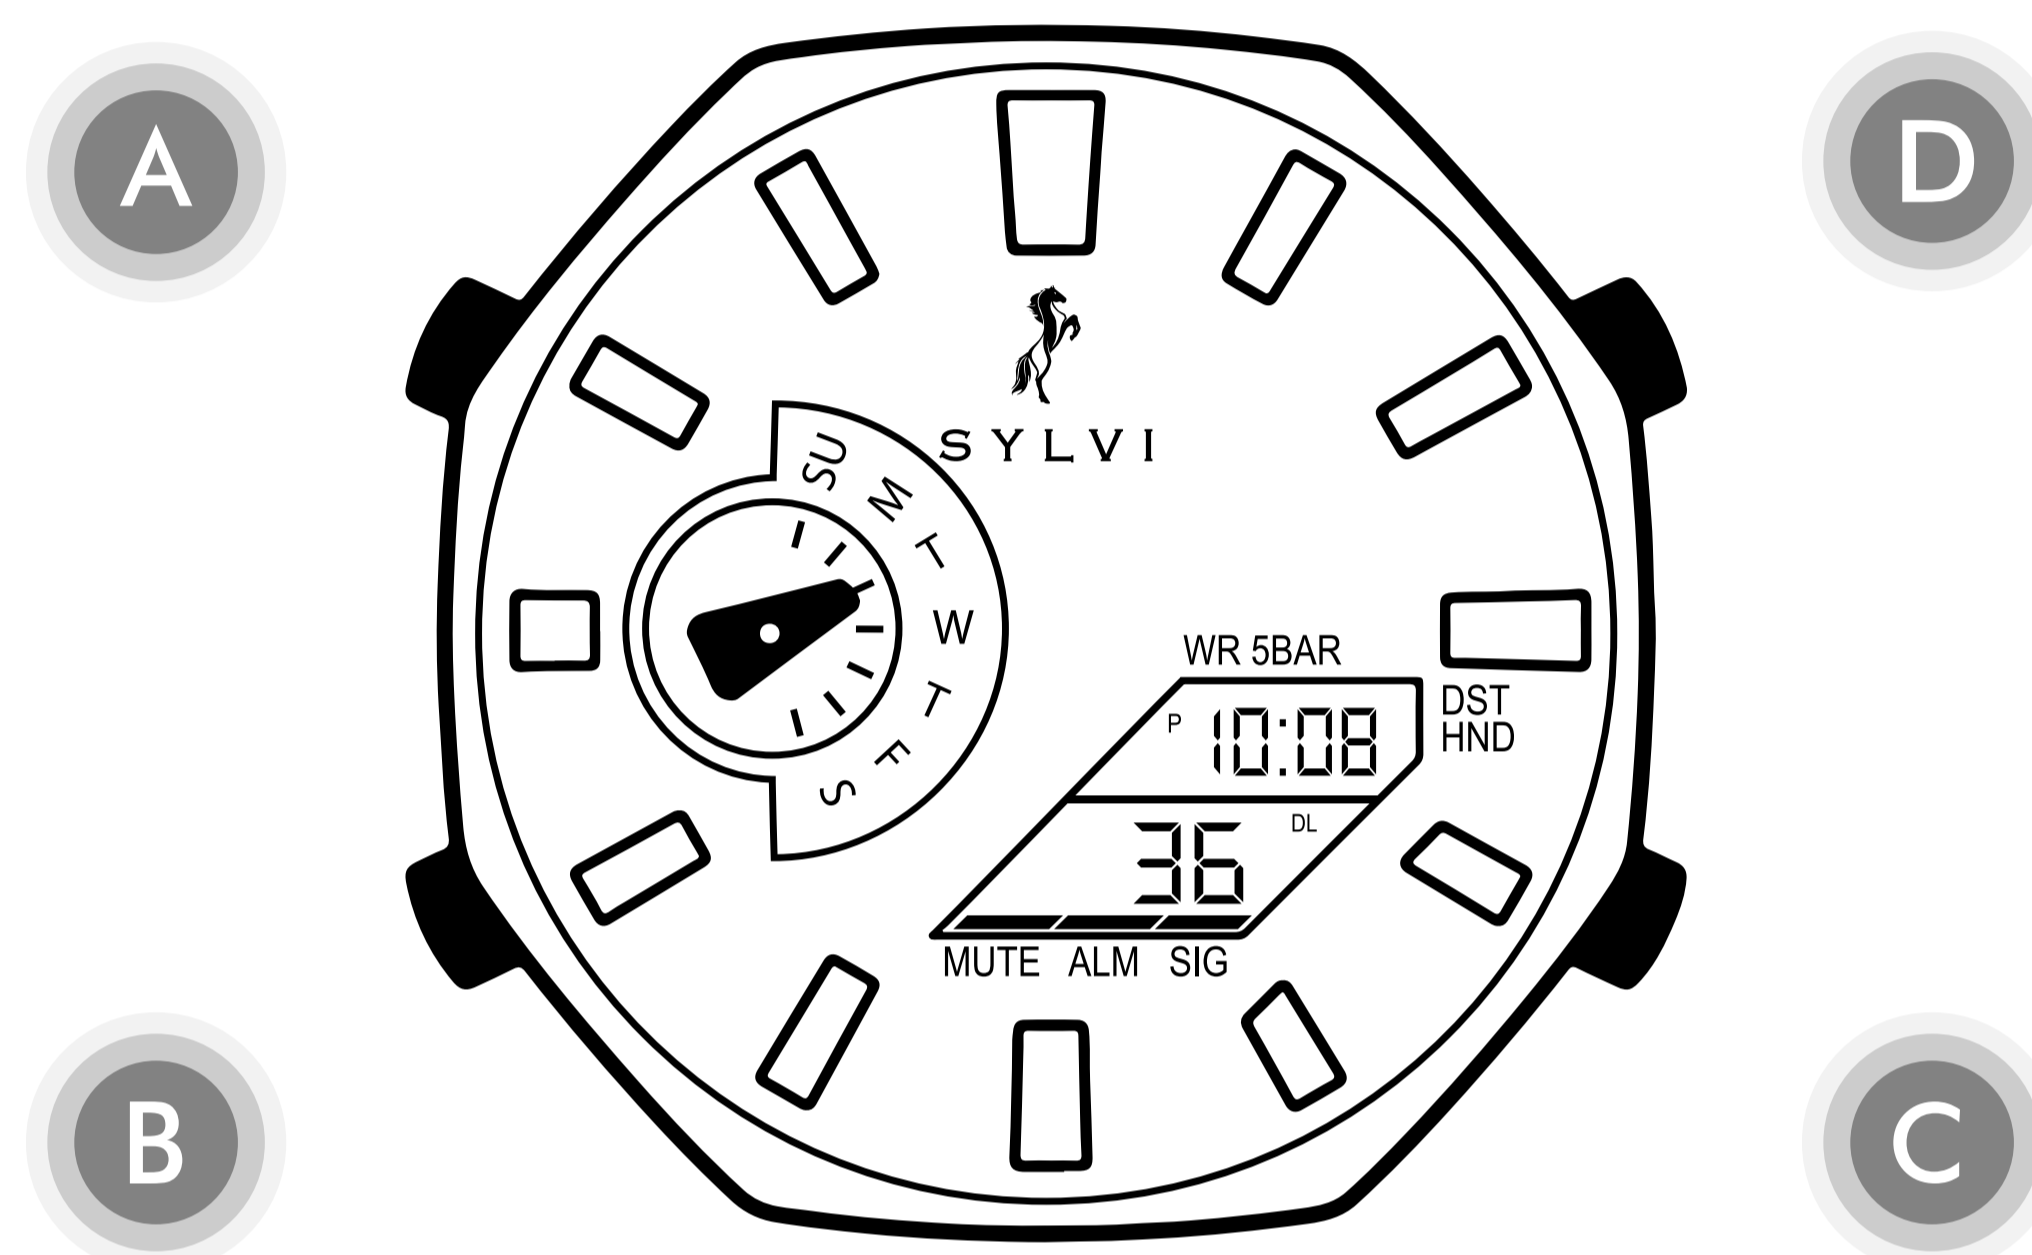

1. In Time mode, press and hold button A for 3 seconds until you hear a “beep” sound. This indicates that you are now in Time Edit mode.
2. Navigate through the local city options using the C and D buttons. Once your desired city is selected, press button B.
3. This is the DST setting. Choose between “ON” or “OFF” for DST. Use the C and D buttons to toggle between options. Press button B to confirm your selection.
4. Choose your preferred time format between “12H” or “24H.” Use the C and D buttons to toggle between formats. Press button B to confirm your selection.
5. Now, the seconds’ digits will be blinking. Use the C button to set them to “0.” Press button B to proceed.
6. The blinking digits now represent hours. Use the C and D buttons to adjust the correct hours. Once the hours are set, press button B.
7. The blinking digits now represent minutes. Use the C and D buttons to adjust the correct minutes. After setting the minutes, press button B.
8. To save the newly configured time, press button A.
9. Once the digital settings are configured, the analog time will automatically align with the set parameters

## How to set Date & Day Setting

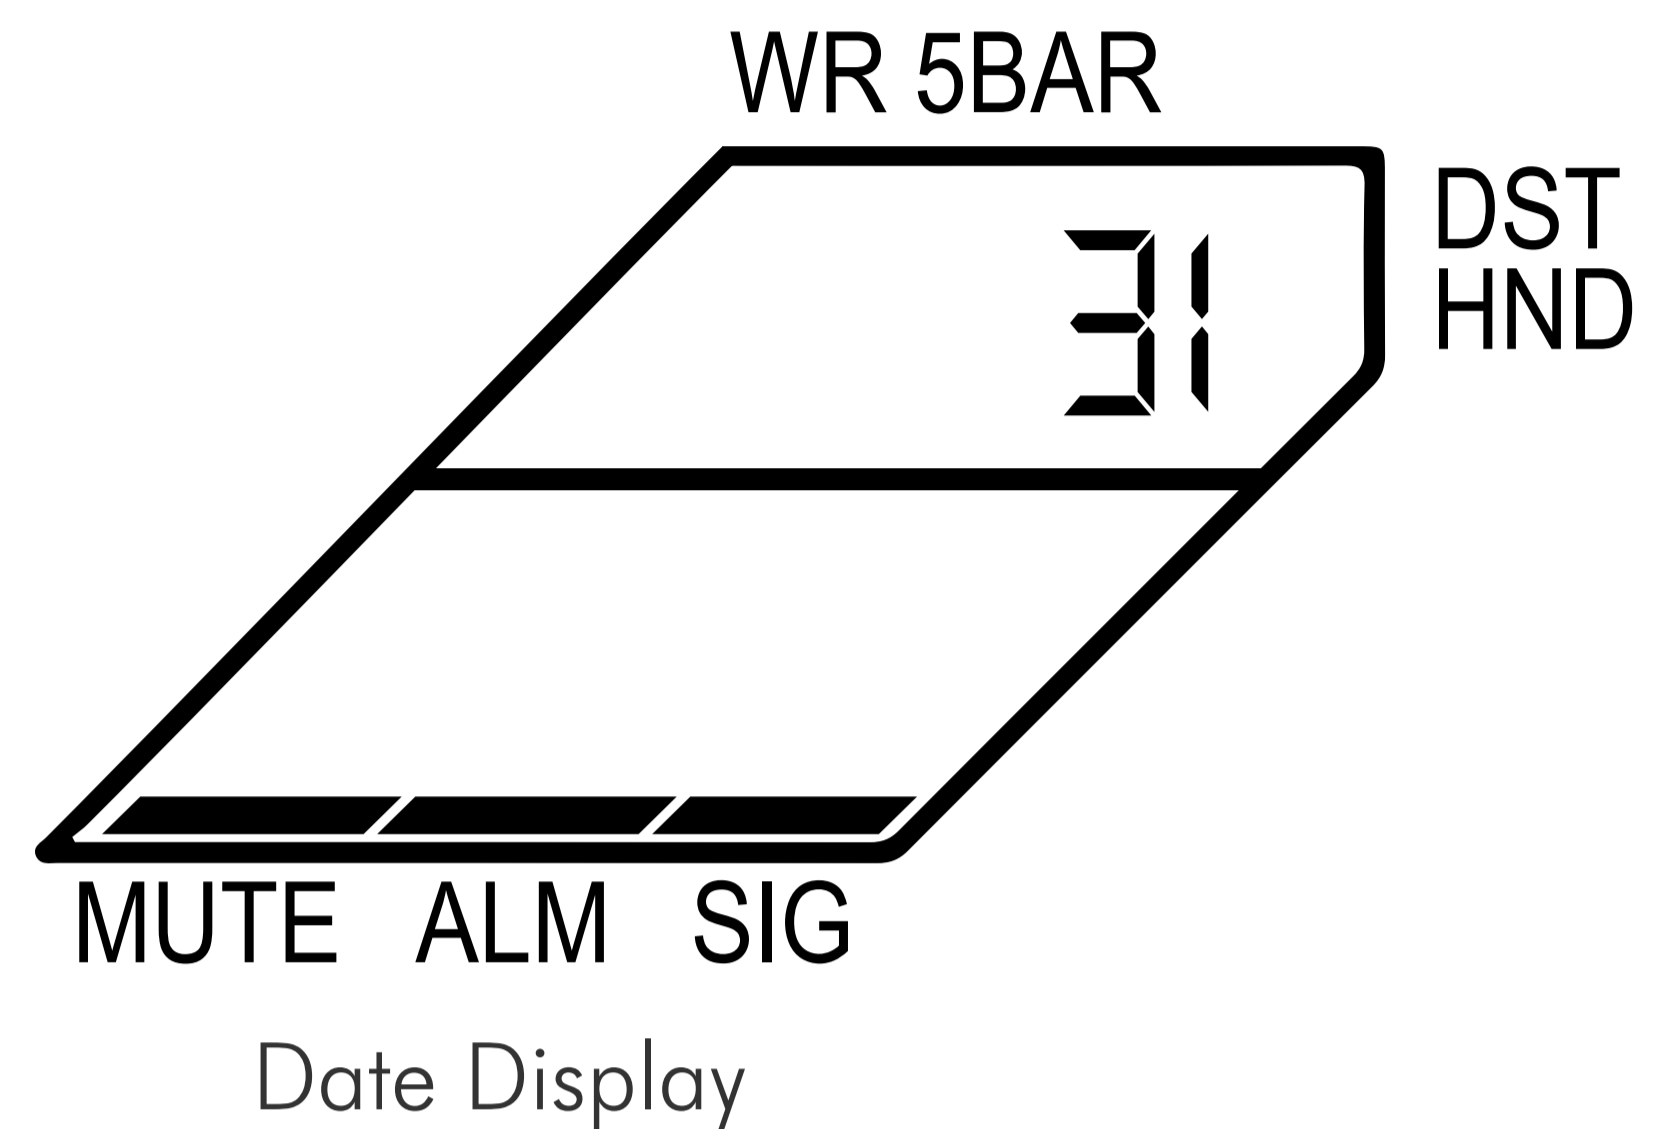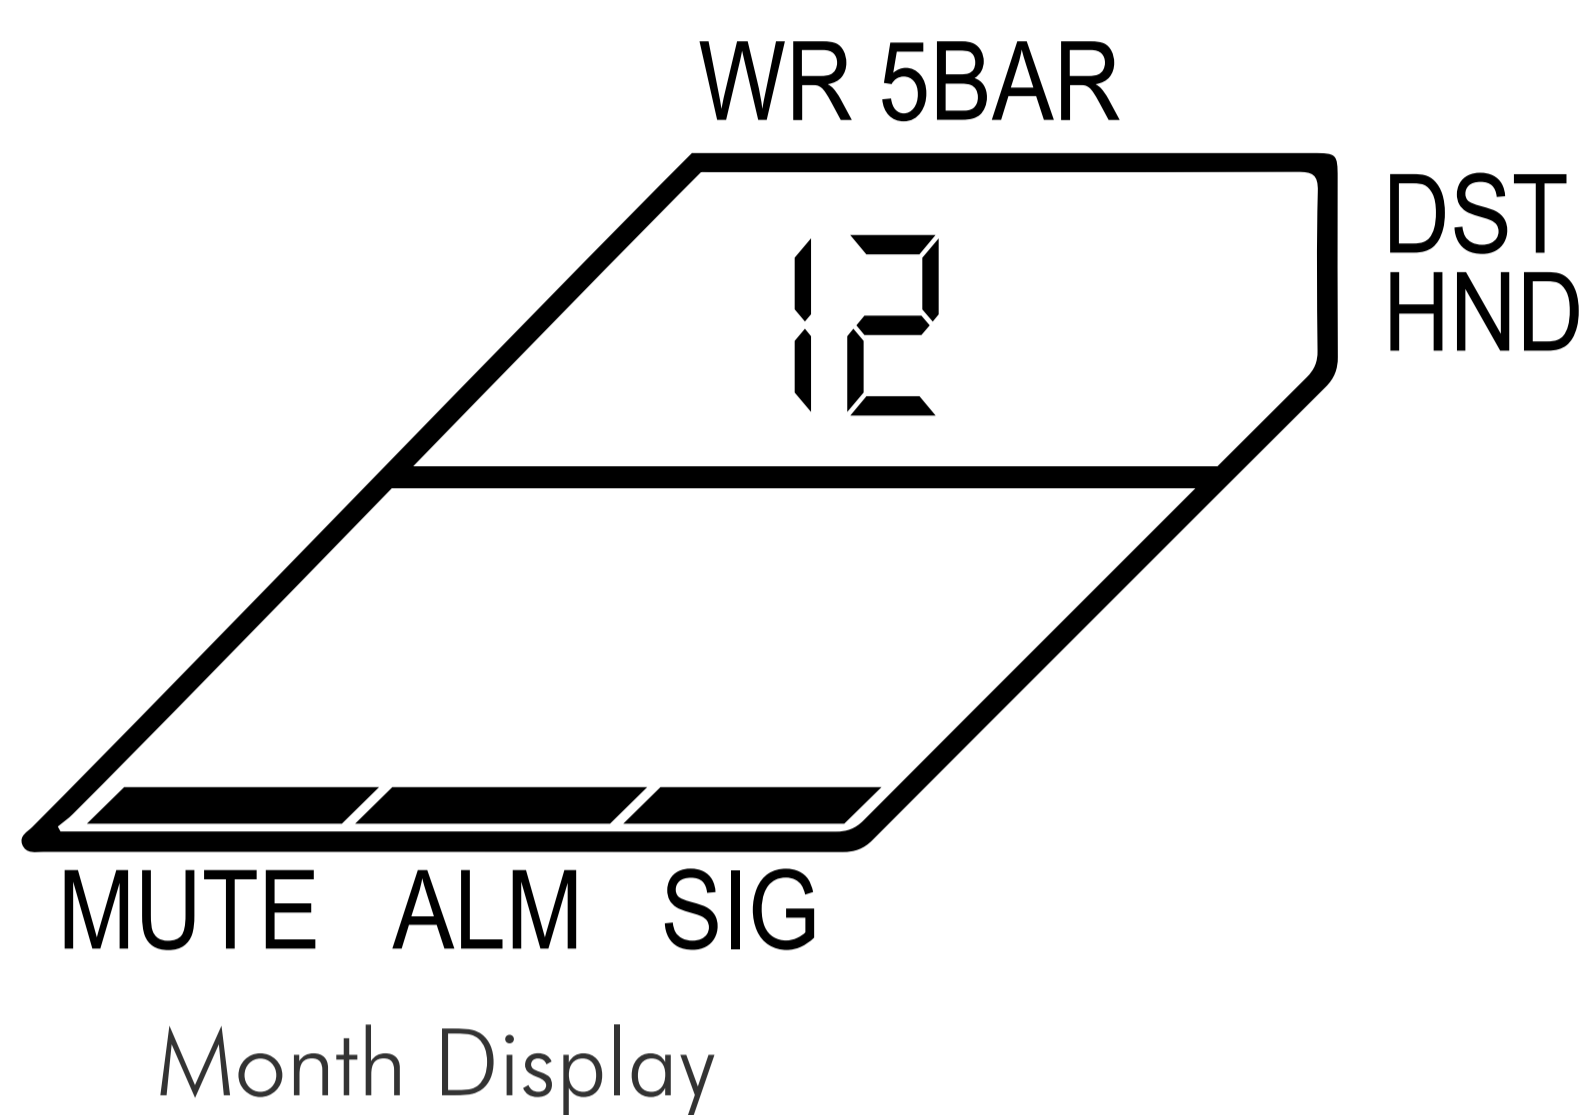  


1. Enter in Time Edit mode by press and holding button A for 3 seconds.
2. Now press button B six times.
3. This digit represents the year. Use buttons C and D to select the correct year, then press button B.
4. The blinking digit indicates the month. Adjust it using buttons C or D, and confirm by pressing button B.
5. Now, select your desired date by using buttons C or D. Set the date and confirm by pressing button B.
6. To save the new date settings, press button A.
7. Once you set all correct details in digital, it will be automatically set in analog.


## How to set Alarm



 Time Setting

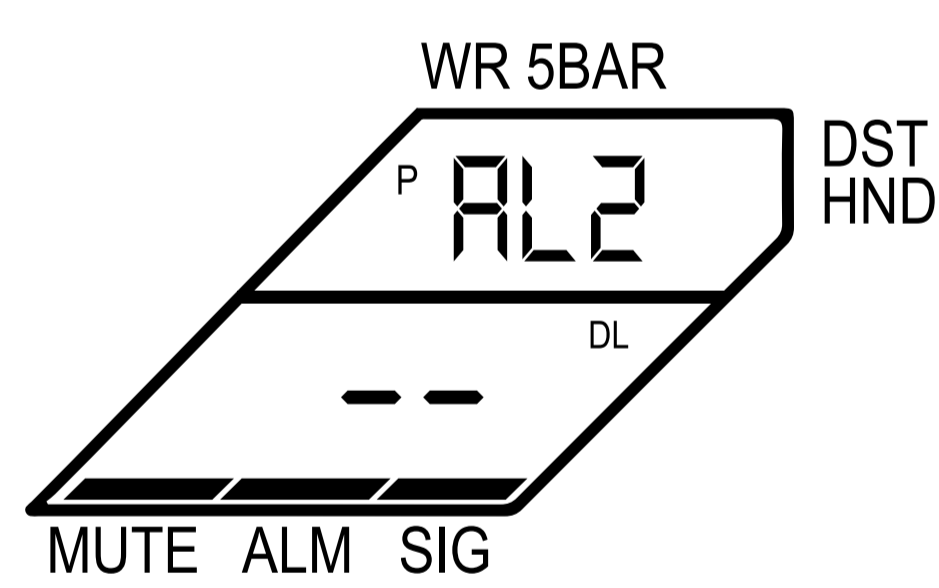

Alarms

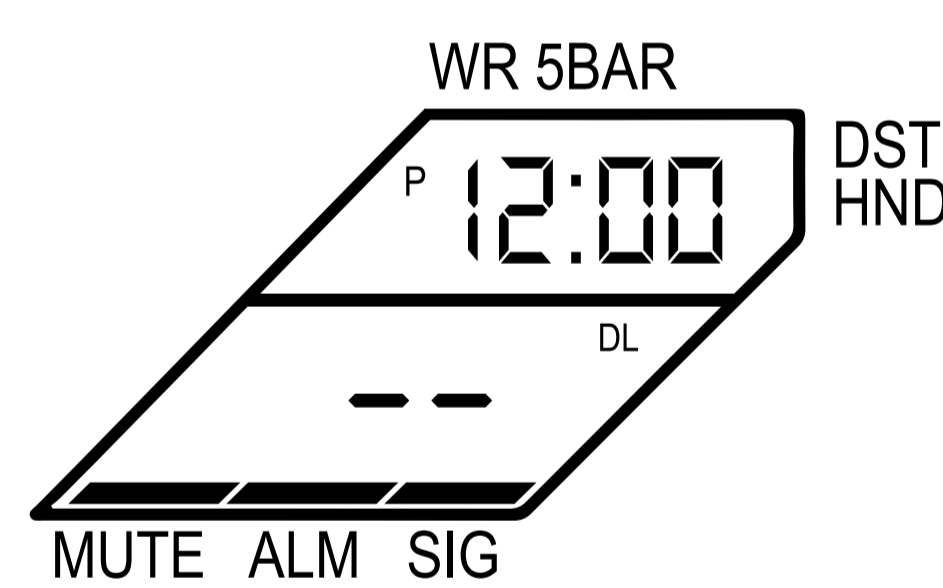 

Alarm Off




Alarm On

1. In Time Mode, press the B button four times to access the alarm setting mode.
2. Press and hold Button A for 3 seconds to enter the alarm-setting interface.
3. Adjust the desired time for the alarm using the available buttons.
4. Once the desired time is set, press Button A to confirm and save the alarm time.
5. You can set 5 alarms on this watch. To set different alarms, enter alarm mode by pressing the C button. Navigate through alarms labelled as "AL1," "AL2," etc., displayed on the screen.
6. Choose the specific alarm you wish to set by selecting it, and follow the above steps to set the alarm.
7. To turn off the alarm, access alarm mode and select the alarm you want to turn off. Then press button A. On the display screen, you will find an indicator below the alarm time denoted by "--." If the display reads "ON," the alarm is currently activated. Conversely, if the display shows "--," the alarm is deactivated.

## How to set Stopwatch

 
1. In time mode, press the B button twice to enter Stopwatch Mode.
2. To start the stopwatch, press button C. Use the same button C to pause and resume the stopwatch.
3. For lap timing, press the A button, and the stopwatch will pause. Pressing the A button again will resume from the elapsed time.
4. To reset it, pause the stopwatch and press button A in Stopwatch Mode. The display will show "00" indicating the stopwatch has been reset.

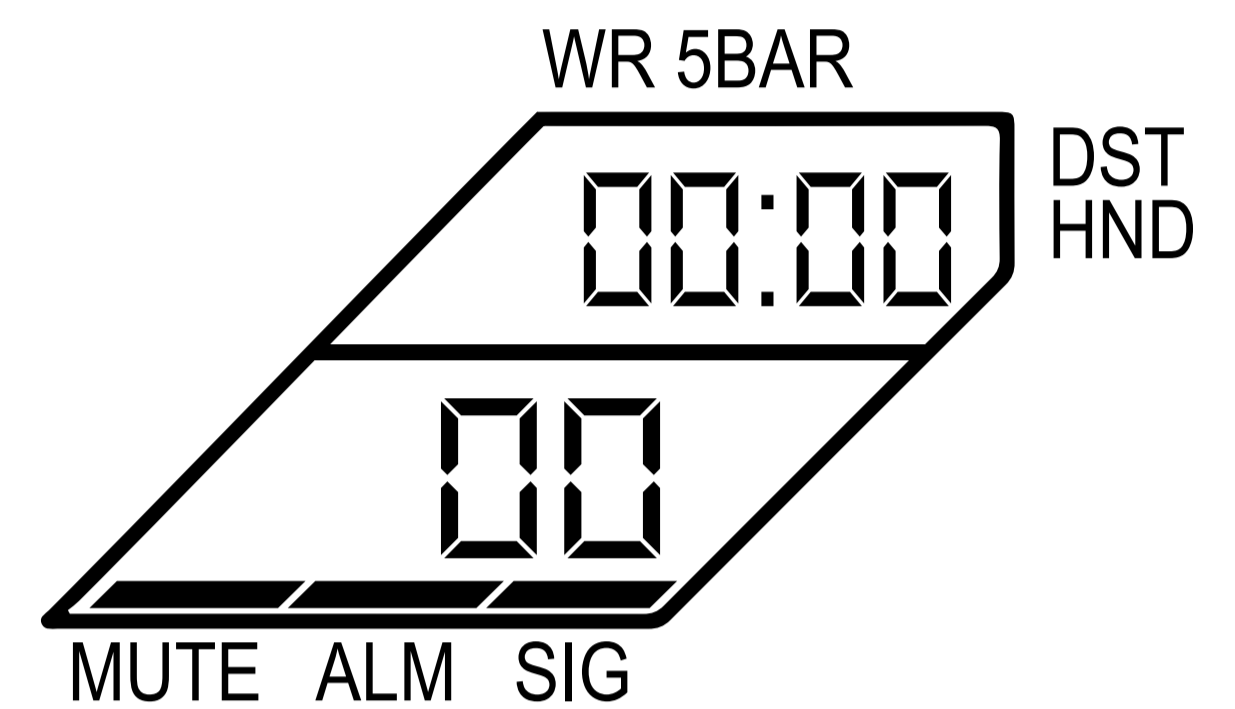

Stopwatch Display

## How to set Countdown Timer

 1. In Time Mode, press the B button three times. Next, press and hold the A button to enter the Timer Setting Mode.
2. While in Timer Setting Mode, set your desired time. Press the A button to save the timer settings.
3. After setting the timer, press the C button to initiate the countdown. You can use button C to pause and resume the countdown.
4. To reset the timer, pause its operation and press button A while in Timer Mode. The display will indicate "00:10," confirming that the timer has been successfully reset.

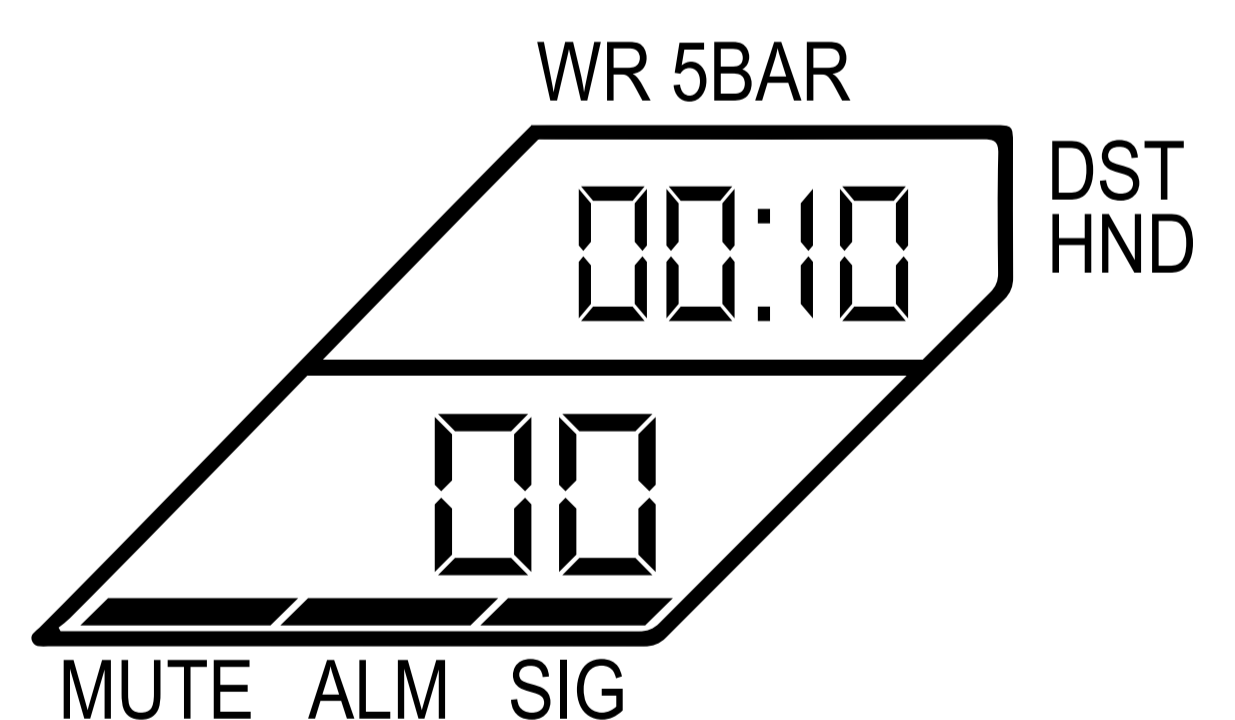


Countdown Timer Display




## How to set Key Tone Setting

 1. In Time mode, press and hold Button A for 3 seconds until a distinct “beep” sound is heard.
2. Press Button B nine times until “Key” is displayed on the screen.
3. Use button C to navigate through options. Choose “Key” to enable the key tone or switch to “Mute” to disable it.
4. Save your selection by pressing button A.
5. If you set the key tone “Mute”, the alarm and countdown will not ring

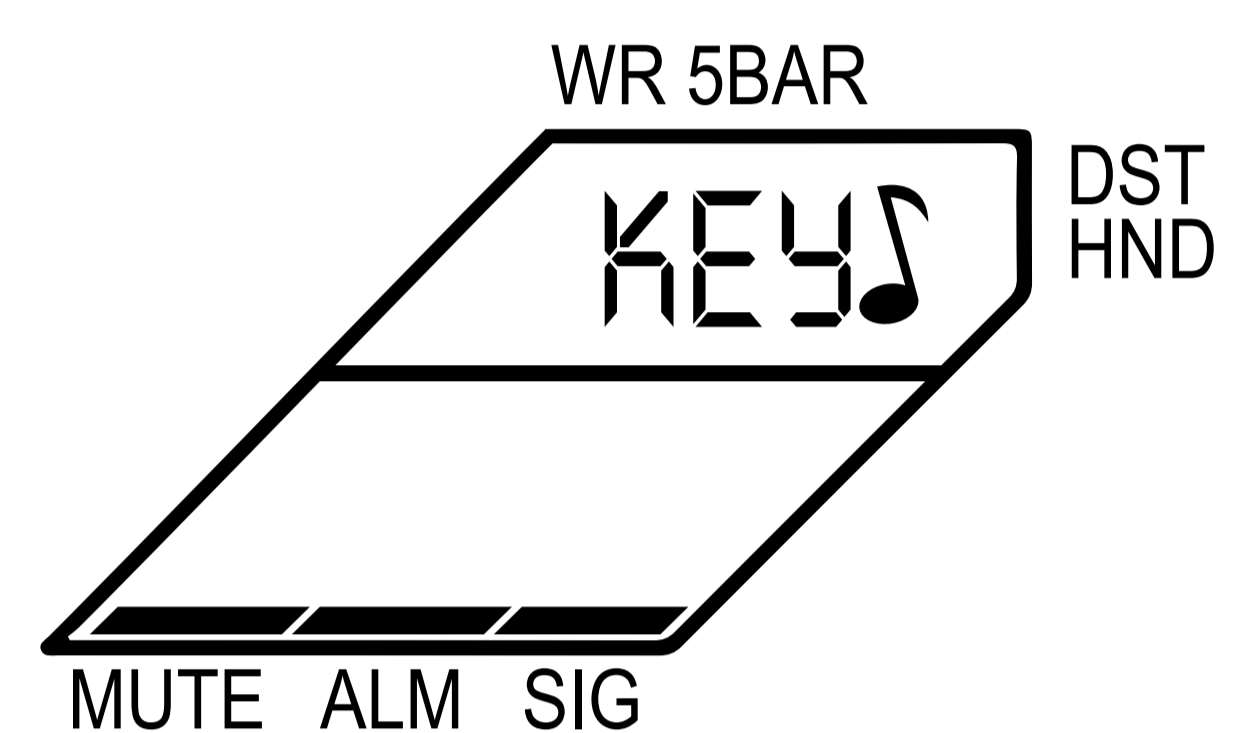

Key Tone Display

## How to Check World Time?

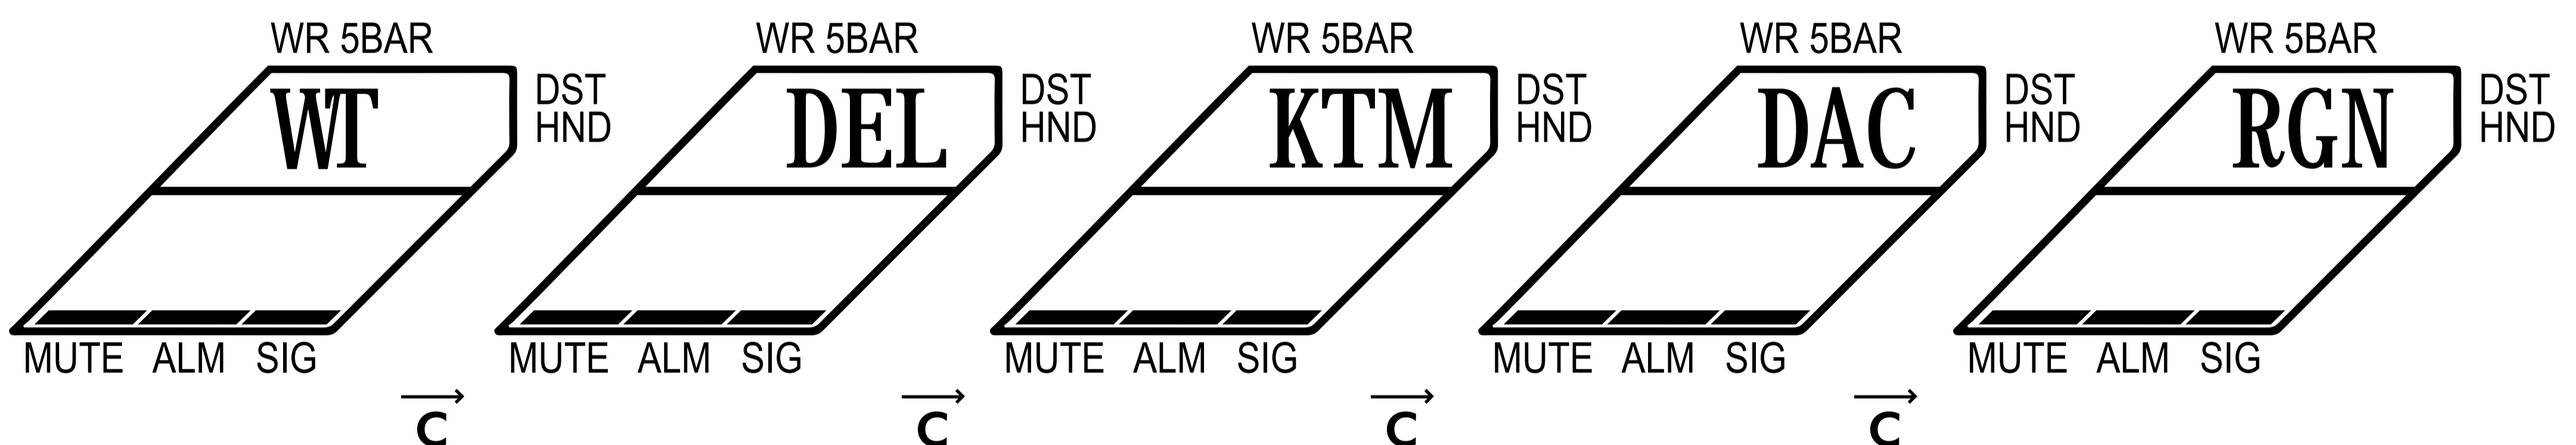 


World Time Display

- Step-1: In normal timekeeping mode, press the B button once. Boom! You’re now in world time mode.
- Step-2: Right here, you can see your home time while keeping an eye on another time zone of your choice.
- Step-3: Now, let’s customize it. Press the C button to select your desired city.
- Step-4: With a wide range of cities to choose from, you can find just about anywhere in the world. Found your city? Excellent! Press the A button to lock it in.
- Step-5: Your watch is now set to display the time for your home city and your chosen world city simultaneously. It’s like having two time zones at your fingertips.

## How to Set Light Setting

 
1. In Time mode, press and hold Button A for 3 seconds until a distinct “beep” sound is heard.
2. Press Button B ten times until “LIGHT” is displayed on the screen.
3. Use Button C or Button D to toggle between 1 second or 3 seconds.
4. After selecting the desired option, press Button A to save the setting.
5. To turn the automatic LED light on: In time mode, press and hold button D for 3 seconds.
6. Look for “LT” near the second digit, indicating that the automatic LED light is now activated.
7. The LED light will now turn on automatically when your hand moves

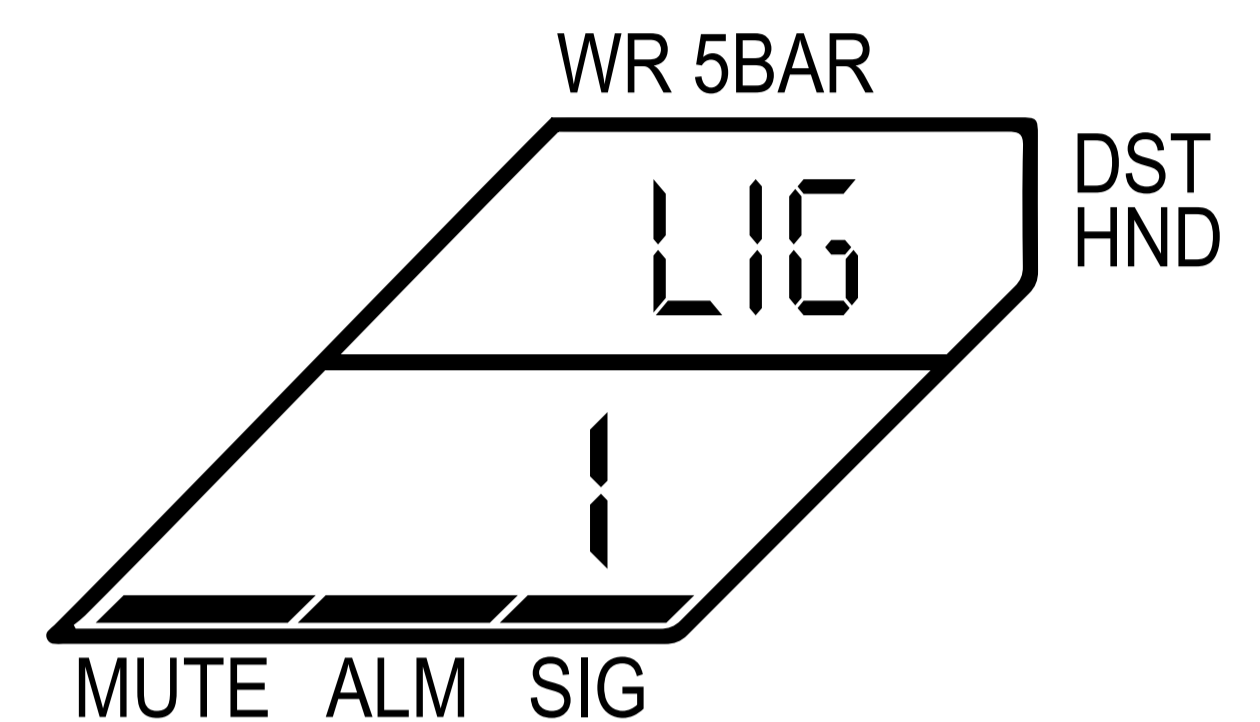

Light Display


## How to Reset Watch

 1. To reset your watch, simultaneously press all four buttons. The watch will restart, and you will hear a long beep sound.
2. Observe the display where “SUB” is displayed and blinking.
3. Now, press button C until the day hand aligns with Sunday “SU.”
4. Subsequently, press the B button once. This action will display “00:00” on the watch. Adjust the hour and minute hands to the 12:00 position using button C.
5. After completing the above steps, press button A.
6. And done, your watch has been successfully reset.
7. To set time, date, and day, follow the “Adjust Time” and “Adjust Date & Day” instructions

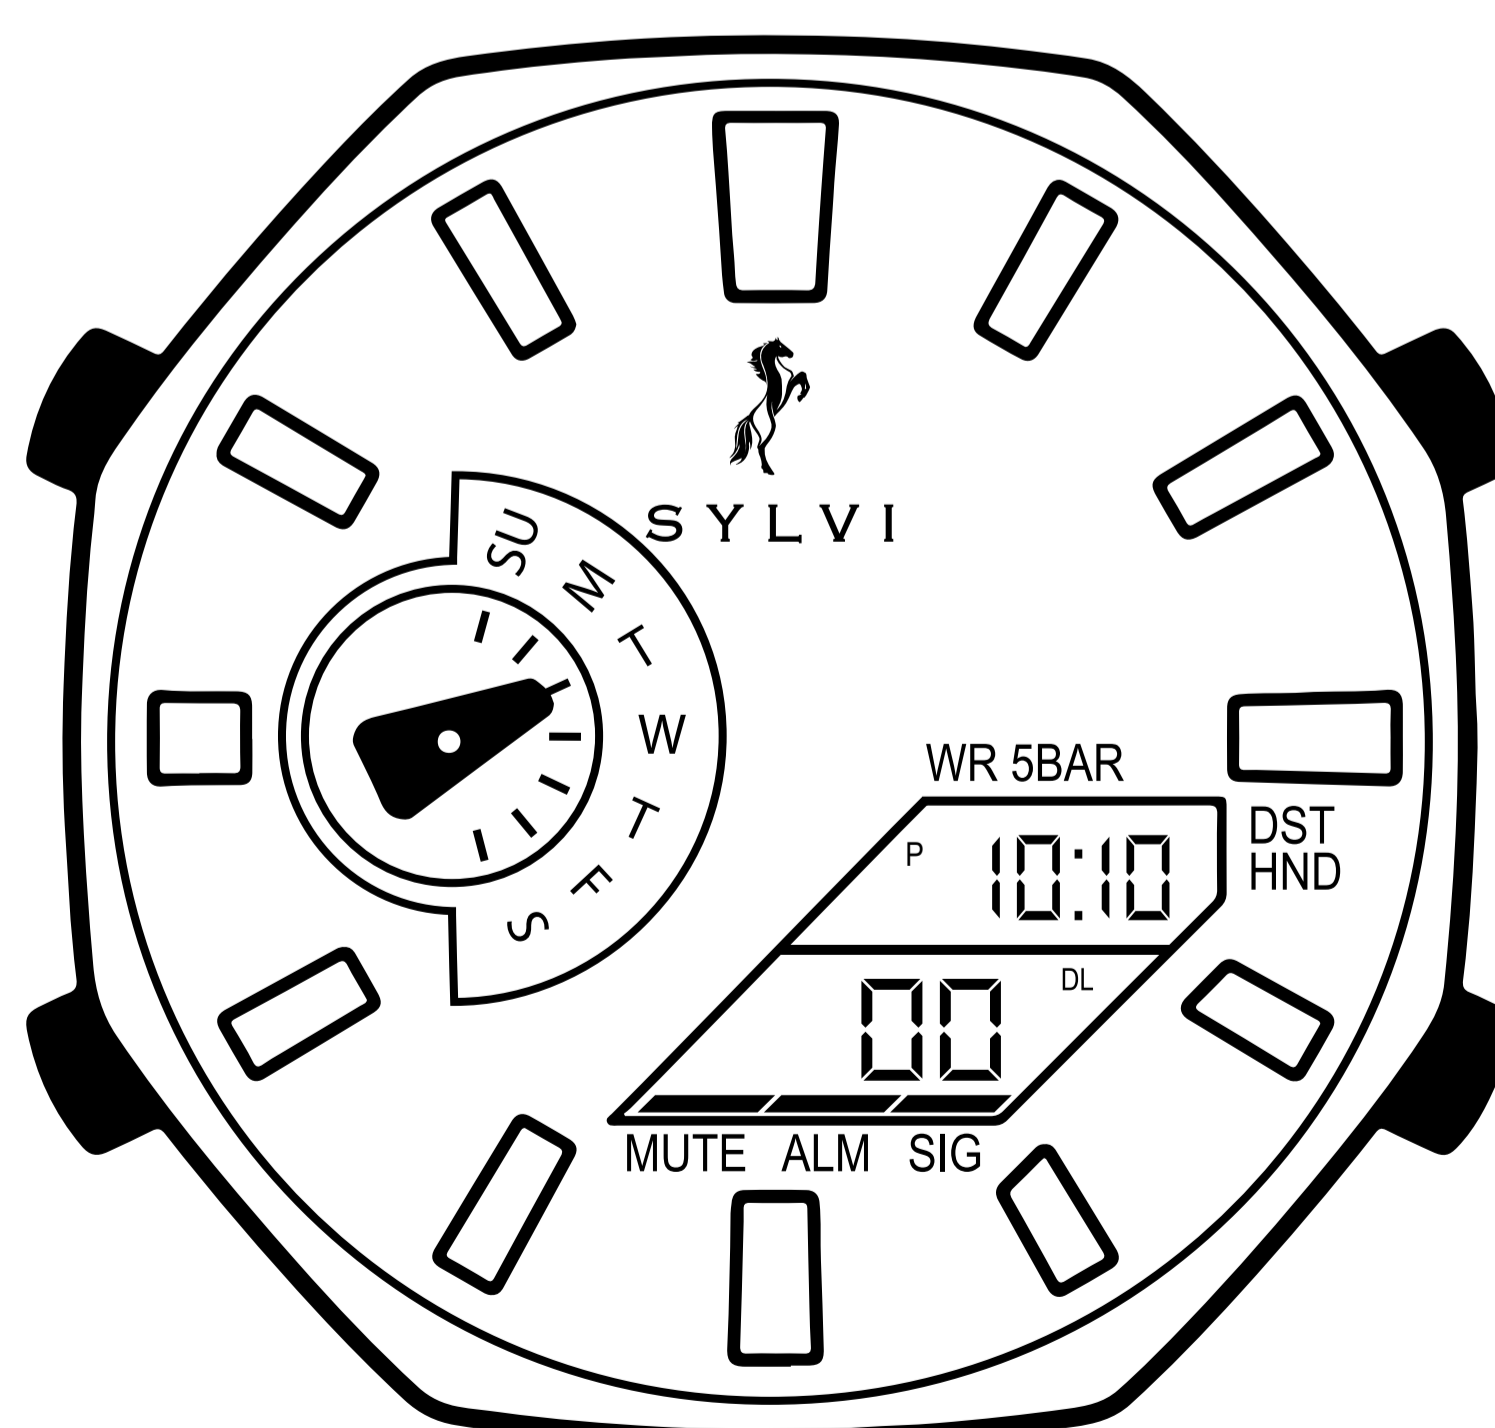




## Betry Instructions

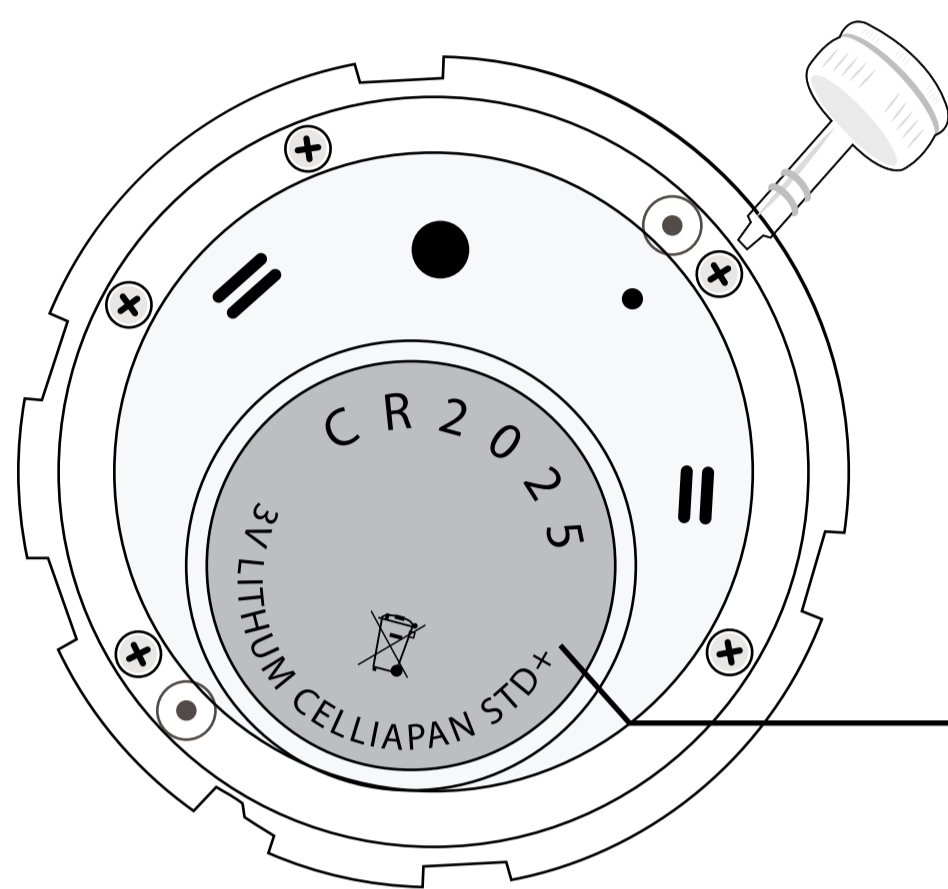 

Battery For Digital  
No.: CR2025

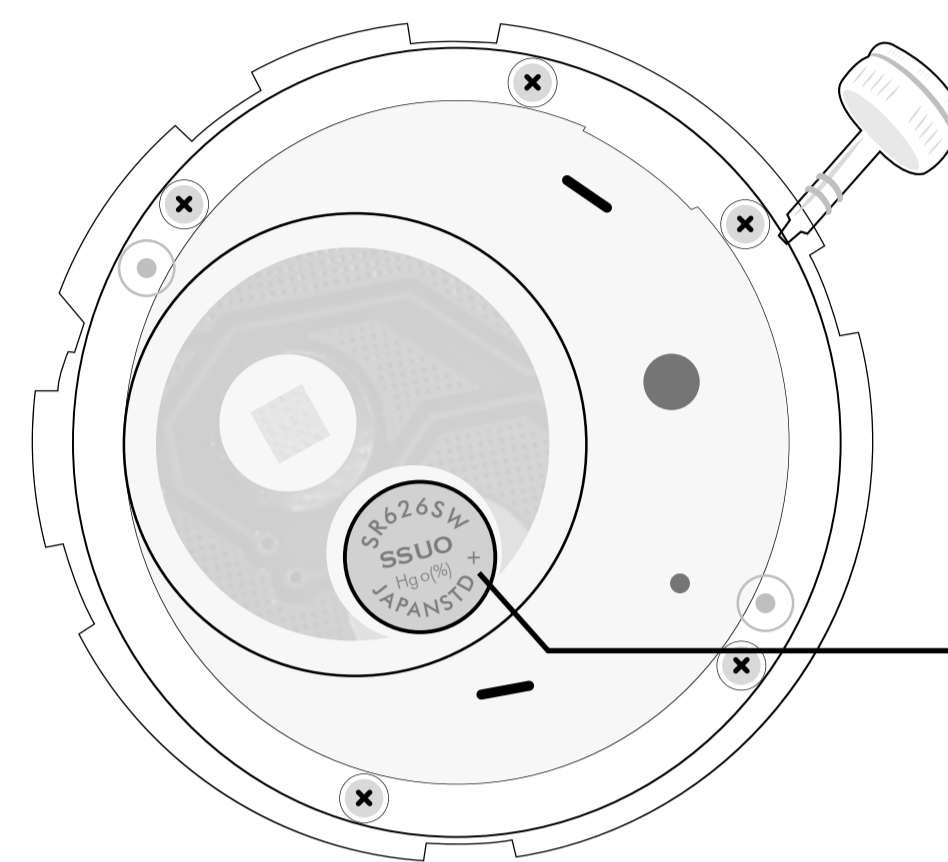 


Battery For Analog  
No.: LR626

A CR2025 batery cell for Digital and LR626 for Analog display.

## Strap Instructions
 
### Silicon Strap

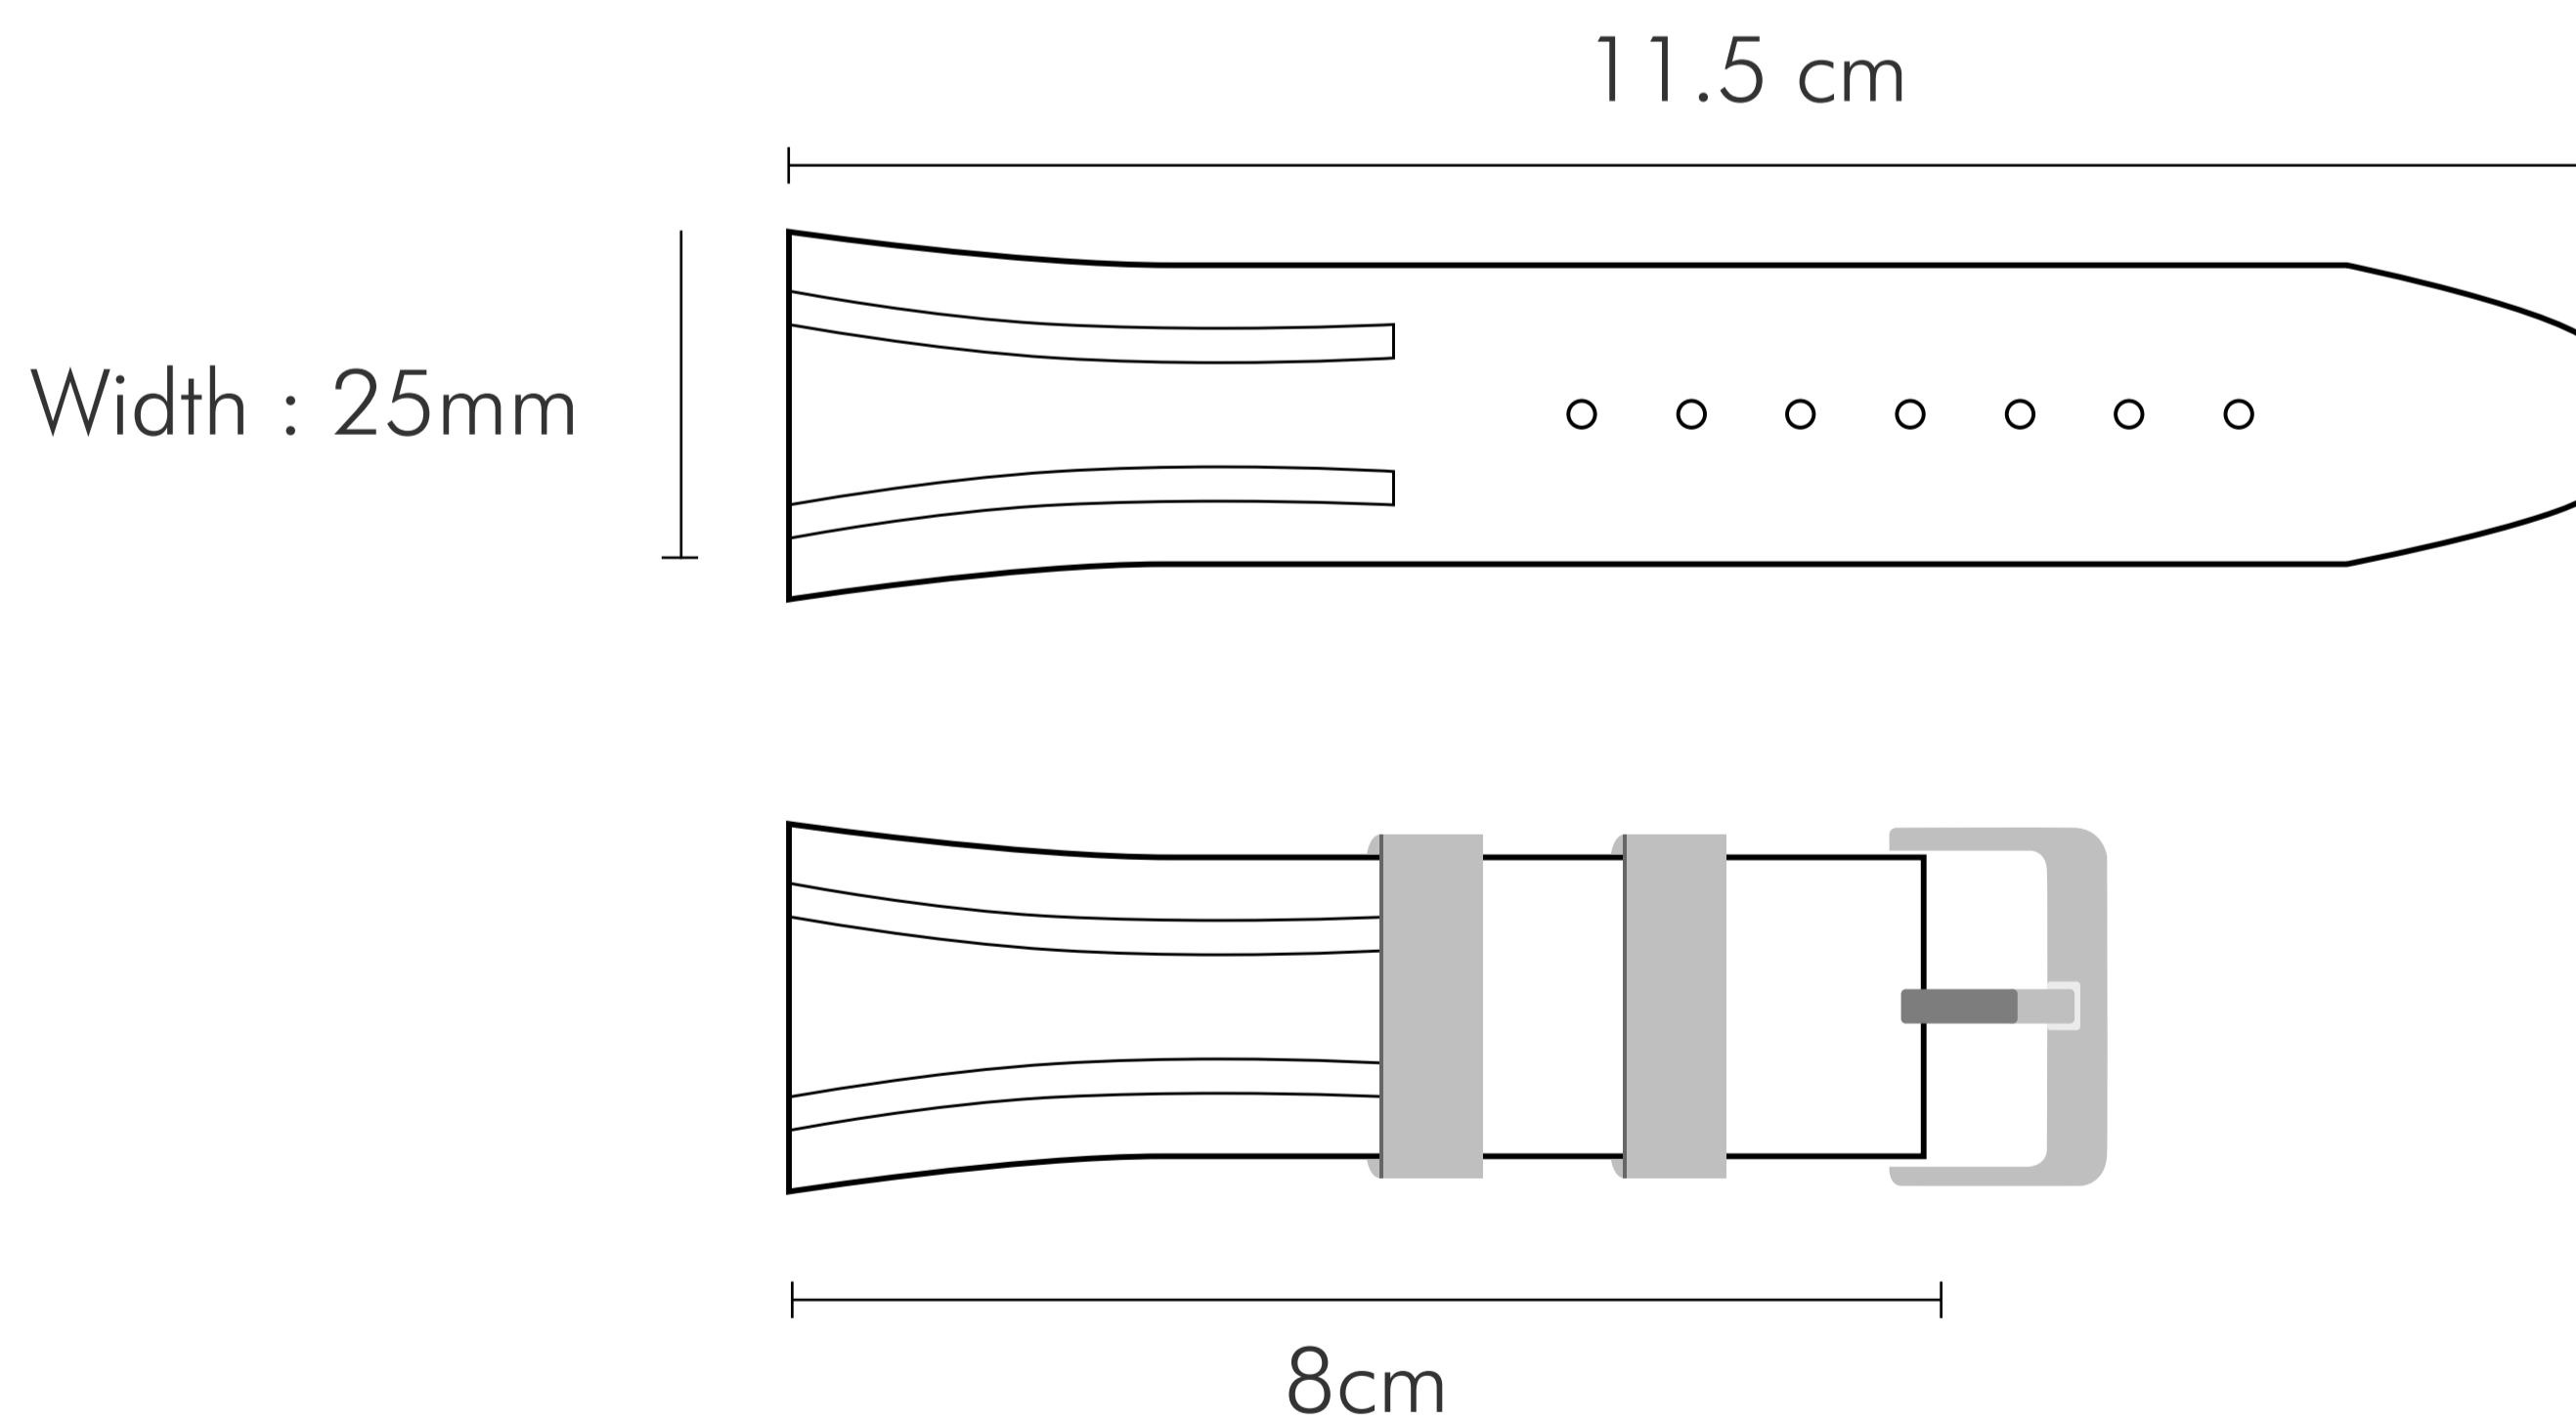

- The strap with 11.5cm at tail side and 8cm at buckle side.
- The strap with 25mm width.
- A replacement belt of lug size 25mm is suggested for this watch

## • Water Resistant




*For information about the water-resistant rating of Sports, Casual, Chronograph, and Slim watches please refer to page 3.*

The water resistant rating provides guidelines for appropriate water-related exposure to avoid damage to internal watch components. Please see the chart for recommended usage guidelines.

*To ensure water does not enter the watch and cause damage to it, please follow the instructions listed below:*

- Do not adjust the crown while the timepiece is in contact with water.
- Ensure the crown is in the closed position before contact with water. For timepieces with screw-down crowns, ensure the crown is completely tightened before contact with water.
- For timepieces with pusher-enabled functionality, do not engage the function underwater.
- Exposure to the extreme atmosphere is not recommended (i.e. hot water, saunas, or steam rooms).
- Avoid exposure to water moving with force (i.e. water running from a faucet, ocean waves, or waterfalls).
- Avoid long exposure to saltwater. After contact with salt water, rinse the watch under tap water
- If rated 5ATM or higher and wipe dry with a soft cloth.

### Recommendations For Water-Related Use

| Indication          | <br>SPLASH RESISTANT<br>(Hand Washing) | <br>SUBMERSIBLE<br>(Swimming) | <br>SHALLOW DIVING<br>(Snorkeling) | <br>SCUBA DIVING<br>(Not Deep Sea) |
|---------------------|---|--|---|---|
| None                |   |  |   |   |
| 3 ATM • 30 Meters   | ✓   |  |   |   |
| 5 ATM • 50 Meters   | ✓   | ✓  |   |   |
| 10 ATM • 100 Meters | ✓   | ✓  | ✓   |   |
| 20 ATM • 200 Meters | ✓   | ✓  | ✓   | ✓   |

## Warranty Instructions

 
 
Your watch is warranted for six (6) months from the original date of purchase under the terms and conditions of the warranty. The warranty covers manufacturing defects, i.e. the watch movement, hands, and dial only. The covered components will be repaired or the watch will be replaced free of component and labor charges if it proves to be defective in material or workmanship under normal use.

- In case of replacement, we cannot guarantee that you will receive the same model watch. If your model is not available, a watch of equal value and similar style will be provided.

### **This warranty does not cover:**

- Any defect in materials and workmanship of battery, case, crystal, button, crown, strap, or bracelet; including plating on the case and/or bracelet.
- Damage resulting from improper handling, lack of care, accidents, normal wear and tear or aging.
- Water damage if care instructions for the product's water resistance levels (as per the product specification) were not followed.
- Products that are not purchased from an authorized retailer.
- This warranty is void if the watch has been damaged by accident, negligence of persons other than authorized sales or service agents, unauthorized service, or other factors not due to defects in materials and workmanship. This warranty is void if the serial number or product date codes or other tracking marks have been removed, altered, or obliterated.

**Get Additional Warranty**

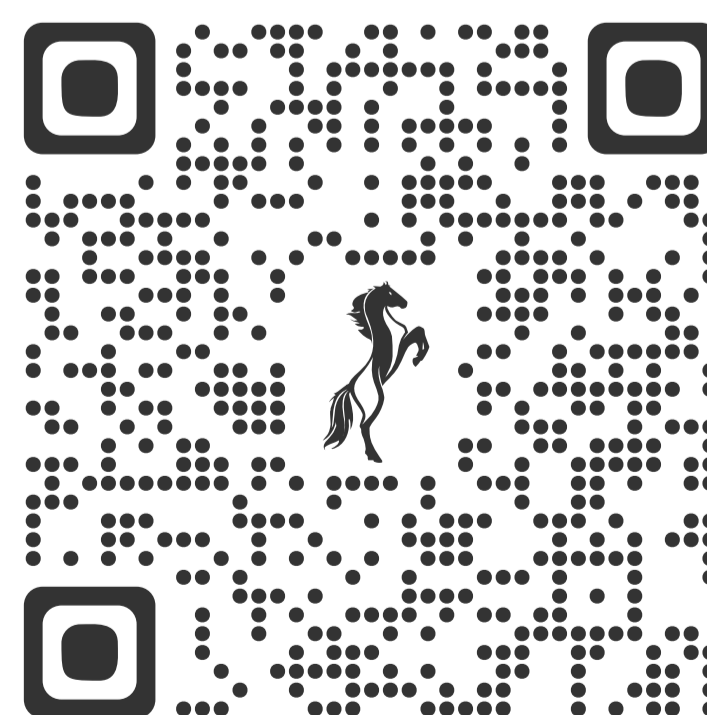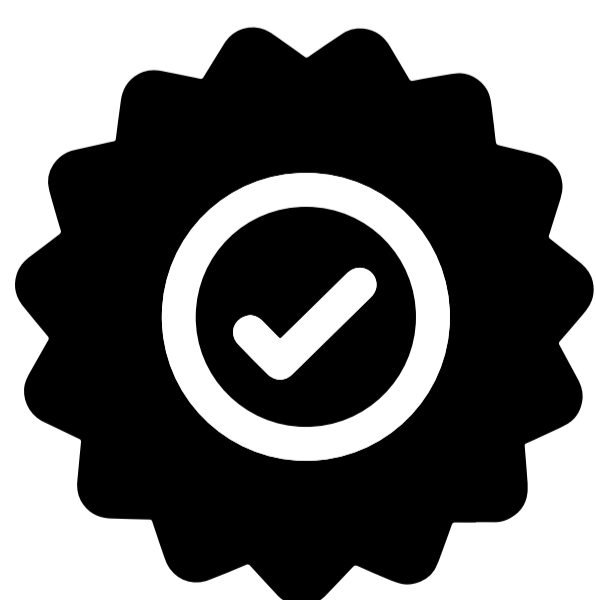

or

<https://sylvi.in/warranty-registration>

**Click Here to Open**



## How to Claim Warranty?

### Step 1:

Contact customer care and report your problem. An RMA ID will be generated (Without RMA ID, warranty cannot be claimed)

### Step 2:

The product will have to be sent to service center including the following information.

**RMA ID** - Given by customer care executive

**Name**

**Full address**

**Daytime contact mobile number**

**Email address**

**Where your item was purchased from**

**Model reference of the item (Found on the back of your watch)**

**Full description of the work required**

**A copy of your proof of purchase**

## How to Reach Us?

For any service-related inquiries and feedback, call our number [+919687660234](tel:+919687660234) Monday to Saturday, 10.00 am to 7.00 pm. (closed on National and Festival holidays).

If you are unhappy for any reason, please mail us at [customercare@sylvi.in](mailto:customercare@sylvi.in). We promise to reply by the next working day.

