

Footvibe Deluxe

MASSAGING FOOTREST



Thank you for purchasing the Footvibe Deluxe. Please read this instruction manual before use. This product is intended for consumer use only.

SAVE THESE INSTRUCTIONS

Use this product only as described in this manual. Use of this product in any way other than that which is described is not recommended by the manufacturer and may cause damage, malfunction, or risk of fire, electric shock, or injury to persons. Remember to please keep this operation manual in an accessible place for future reference.

CONTENTS

IMPORTANT SAFETY PRECAUTIONS.....	1
PARTS.....	2
CONTROL PANEL.....	3
REMOTE CONTROL.....	3
USING THE FOOTVIBE DELUXE	4
TECHNICAL SPECIFICATIONS.....	5
WARRANTY.....	6

IMPORTANT SAFETY PRECAUTIONS


WARNING

- Before use, please make sure that you have read these instructions fully and that you understand them.
- Check whether the power supply cord or any circuitry appear damaged and if so return product for a replacement. Do not use product if the electrical components or cord appears damaged.
- Determine the proper voltage of the product and provide an appropriate power supply for the product.
- Choose a suitable massage mode, time, and targeted area according to your body's condition. Do not use on injuries, wounds, or sensitive areas. Discontinue use if you feel any pain or irritation.
- Do not overuse or apply massage to one area for too long or injury may occur.
- When not in use, power down the unit and unplug the power supply.
- Let the massage machine cool down after 20 minutes of continuous use or overheating may occur.
- For your safety, do not service the machine or use it if it has been opened or otherwise disassembled. Only the original manufacturer can open and repair the product.
- If you have any medical conditions or are undergoing treatment for illness or disease please consult your doctor before using this product.

PARTS




▶ CONTROL PANEL

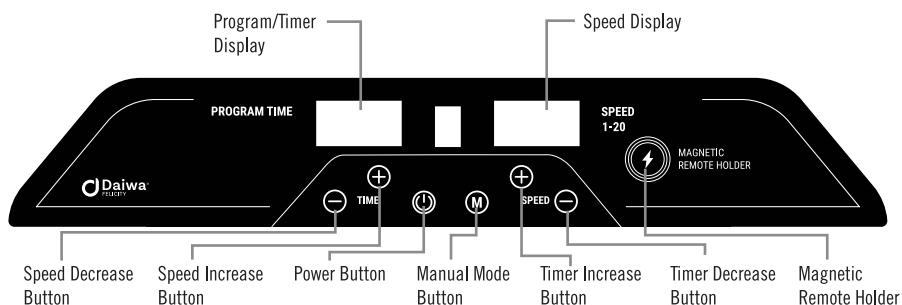

▶ REMOTE CONTROL

Display Screen

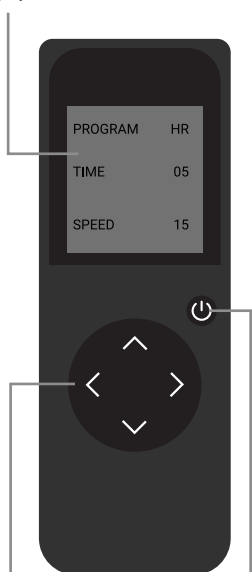

Selection Dial

Power Button

CONTROLLER INSTRUCTIONS

DISPLAY SCREEN

Program: Displays which automatic program you are using (P0 through P9) or displays "HR" when you are making manual adjustments.

Time: The minutes remaining until auto shutoff. The default timer is 15 minutes but you can change the runtime to any duration (1-15 mins).

Speed: Displays the current speed level (1-20). Note, the speed will change itself throughout an automatic massage program.

SELECTION DIAL

Up/Down: Scroll through the three functions: Program, Speed, Time.

Left/Right: Scroll through the function options (programs, speeds, minutes).


▶ USING THE FOOTVIBE DELUXE

⚠ NOTE: Please follow all safety precautions when using this product.


The Footvibe Deluxe is a versatile foot and leg massager that is designed to tilt. It can be used from two directions.

Most users will prefer to use the Footvibe Deluxe barefoot. If the vibration is strong, you may wear socks or even shoes during use to suit your preference.


FOR FEET, HEELS AND TOES:

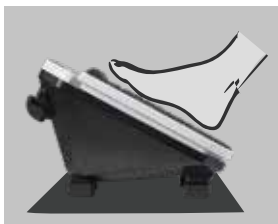

- Place the Footvibe Deluxe onto a stable, flat surface on the ground. Place the foam pad underneath to dampen any sound from the vibration.
- Sit in front of the Footvibe Deluxe so that the textured rubber platform is facing you and so that the LCD panel at the top is right-side up. Place one or both of the soles of your feet flat against the textured rubber platform. Find a comfortable position.

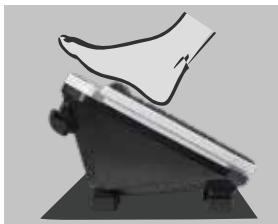


- Using the remote controller or the control panel on the machine, select an Auto Program or choose the Manual setting to set the speed yourself. The auto programs will cycle through a pre-programmed massage and will vary the speeds throughout.
- As the massage runs, move your feet around so that the vibration massage hits all areas that you wish to be massaged.

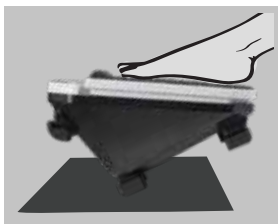

- Target your toes and the arches of your feet by placing them against the rubber bar along the top of the machine.
- If you wish, push your feet against the platform until it begins to tilt, and as it balances on the central feet you can use it like a vibrating footrest.

► USING THE FOOTVIBE DELUXE

FOR CALVES AND LEGS

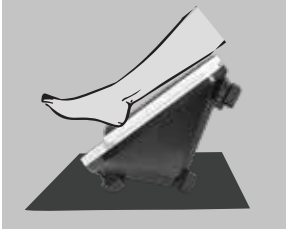

- With your feet, gently push the top of the Footvibe Deluxe until it tips back and gently let it fall forward so that the panel faces away from you and the LCD screen is upside down.
 - Allow your feet to hang over the Footvibe Deluxe and let your calves rest against the textured rubber platform.
- As the vibration massage runs gently twist your legs from side to side to allow it to reach all sides of your calf

► TECHNICAL SPECIFICATIONS

Product Name: _____ Footvibe Deluxe Massaging Footrest
Model Number: _____ USJ-888
Voltage: _____ 110-240V 50/60Hz
Input Power: _____ 48W
Weight: _____ 11 lbs
Size: _____ 15" x 12" x 8.5"
Timer: _____ 15 min auto shutoff

USJ-888 FOOTVIBE DELUXE

Consumer Limited Warranty: ONE-YEAR WARRANTY

This warranty guarantees that the product purchased is to be free from defects in material and workmanship under normal usage and local voltage for a period of one year. This warranty expires in **TWO (2) years on parts, and ONE (1) year on labor** after the date of purchase.

U.S. Jaclean, Inc. (referred to as "the Warrantor") will repair this product with new or rebuilt parts in case of defects in material or workmanship, free of charge, in the USA provided that:

- 1) The product is operated in accordance with the printed instructions supplied.
- 2) The product is used under normal conditions for which designed.
- 3) The product is not subjected to misuse, negligence, or accident.
- 4) The product receives proper care, protection, and maintenance.

This warranty is extended to the original end-user when purchased from an authorized U.S. Jaclean, Inc. distributor. A purchase receipt or other proof of date of the original purchase is required for service and parts replacement under this warranty. This warranty does not cover shipping charges for defective items if a claim is made more than 30 days after the date of purchase.

This warranty only covers failures due to defects in materials and workmanship, and does not cover normal wear or cosmetic damages. This warranty does not cover damages which occur in shipment, or failures which result from: accident, misuse (including, without limitation, failure to comply with instructions and use limitations contained in the Operating Instructions), abuse, neglect, mishandling, faulty installation, set-up adjustments, improper operation or maintenance, alteration, modification, power line surge, lightening, improper line voltage, commercial use such as hotel, office, restaurant, or other business or rental use of product, service by anyone other than from U.S. Jaclean, Inc., or damage that is attributable to "acts of God."

Continued use of this product after discovering a defect voids this warranty. This warranty shall be governed by the state of California, United States of America.

IMPORTANT: DO NOT return defective product to the store.

Contact U.S. Jaclean, Inc. for repair services.

Please retain this Warranty Certificate, together with the original purchase receipt, and present it to our technician for inspection during service.

For assistance and more information, please contact U.S. Jaclean, Inc.