

MAX PRO

Professional Model



Remote Control Included

SAVE THESE INSTRUCTIONS

Thank you for purchasing the Max Pro.
Please read this manual carefully to ensure optimum performance and safety.

INSTRUCTION MANUAL

THE FIRST STEP TO A HEALTHY LIFE

Thank you for purchasing the USJ-330 Max Pro. Please read these instructions carefully before operating this machine. Please keep this instruction manual in a safe place, along with the warranty, purchase receipt, and carton for future reference.

Note: Due to constant upgrades, you may find slight differences between the design and functions stated in this manual and those on the actual U.S. Jaclean, Inc. device.

CONTENTS

- | | |
|-----------------------|--------------------------|
| 1. SAFETY PRECAUTIONS | 5. MAINTENANCE & STORAGE |
| 2. PRODUCT FEATURES | 6. SPECIFICATIONS |
| 3. PART NAMES | 7. WARRANTY |
| 4. OPERATION | |

IMPORTANT SAFETY PRECAUTIONS

To avoid burns, fire, electric shock, or other injuries to the user, read the following instructions before using the unit.

DANGER – To avoid the risk of electric shock:

Always unplug the unit from the electrical outlet immediately after use, and before cleaning.

WARNING – To reduce the risk of burns, fire, electrical shock, or personal injury:

1. Never leave the unit unattended when it is plugged in, nor during assembly, when parts are unattached.
2. Whenever the unit is not in use, switch the power OFF, and disconnect the power plug.
3. Do not operate this unit underneath a blanket or pillow. Excessive heating may occur, leading to fire, electric shock, or personal injury.
4. This massager is NOT suitable for use by persons undergoing the following conditions:
 - Women who are pregnant
 - Persons suffering any bone fractures
 - Patients recovering from surgery
 - Individuals with a heart condition
5. In the case of malfunction, do not attempt to repair or take apart any portion of the unit. Instead, contact the manufacturer for assistance.
6. Close supervision is necessary when the unit is used by, on, or near children, invalids, or disabled persons.
7. Use this unit under its intended purposes only, as described in this manual. Do not attach any components that are not specifically made for this product.
8. Never operate this unit if the cord or plug is damaged, or if the unit itself is not working properly.
10. Never carry or drag the unit by its cord. Do not use the cord as a handle.
11. Keep the cord away from heated surfaces at all times.

PRODUCT FEATURES

- Heavy-duty chrome construction
- Variable-speed dial
- Three different sets of message attachments included
- Round, sturdy handle for a secure grip
- Can be applied to the back, feet, legs, shoulders, or arms
- Convenient handheld controller

PART NAMES



OPERATING INSTRUCTIONS

The **Max Pro** can be applied to specific muscles throughout the body. It is especially effective on the neck, shoulders, arms, thighs, legs, back, and foot soles.

1. Make sure that the speed dial, located on one side of the unit's top panel, is in the OFF position.
2. Insert the power plug into an electrical outlet.
3. If desired, screw the desired set of node attachments onto the four screw holes located on the massage pad. The round and pinpoint attachments can be screwed directly onto these holes.
To use the spread attachments, screw in a set of pinpoint attachments, first. Press the spread attachments onto them until each pinpoint pokes completely through the hole in the center of each spread message node.
4. Place your body in a position that provides the **Max Pro** easy access to the muscles you wish to massage.
5. Grasp the handle of the **Max Pro** with both hands. Lower its massage pad onto the muscle(s) you wish to relieve.

OPERATING INSTRUCTIONS

6. To start the massage, rotate the speed dial to the L (low), M (medium) or H (high) setting, according to your personal preference. You can also use the remote control to adjust the speed.
7. If desired, place a towel or soft cloth over the knob attachments to soften the effects of the massage.
8. To end your massage session, turn the speed dial back to the OFF position. Disconnect the power plug from its wall outlet.



Thighs & Legs



Upper & Lower Backs



Feet



Arms, Neck & Shoulders

MAINTENANCE AND STORAGE

1. Disconnect the power plug from the wall socket before cleaning the unit.
2. Wipe the entire unit with a soft, damp cloth.
3. Do not immerse the unit into any liquid for cleaning.
4. When this unit is not being used, store it in a dry location.
5. Do not store this unit near intense heat or an open flame.
6. Do not leave this unit under direct sunlight for prolonged periods of time.
7. Do not twist or wrap the power cord around the unit.
8. Keep the unit out of the reach of pets and young children.

SPECIFICATIONS

Product Code:	USJ-330
Product Name:	Max Pro
Power Consumption:	120V – 60 Hz 40W
Dimensions:	12W x 11H x 6D inches
Weight:	7 lbs.

MAX PRO

Consumer Limited Warranty: ONE-YEAR WARRANTY

This warranty guarantees that the product purchased is to be free from defects in material and workmanship under normal usage and local voltage for a period of one year. This warranty expires in **TWO (2) years on parts, and ONE (1) year on labor** after the date of purchase.

U.S. Jaclean, Inc. (referred to as “the Warrantor”) will repair this product with new or rebuilt parts in case of defects in material or workmanship, free of charge, in the USA provided that:

- 1) The product is operated in accordance with the printed instructions supplied.
- 2) The product is used under normal conditions for which designed.
- 3) The product is not subjected to misuse, negligence, or accident.
- 4) The product receives proper care, protection, and maintenance.

This warranty is extended to the original end use purchase from an authorized U.S. Jaclean, Inc. distributor. A purchase receipt or other proof of date of the original purchase is required for service and parts replacement under this warranty. This warranty does not cover shipping charges for defected items 30days after the date of purchase.

This warranty only covers failures due to defects in materials and workmanship and does not cover normal wear or cosmetic damages. The warranty does not cover damages which occur in shipment, or failures which result from accident, misuse (including, without limitation, failure to comply with instructions and use limitations contained in the Operating Instructions), abuse, neglect, mishandling, faulty installation, set-up adjustments, improper operation or maintenance, alteration, modification, power line surge, lightening, improper line voltage, commercial use such as hotel, office, restaurant, or other business or rental use of product, or service by anyone other than from U.S. Jaclean, Inc.

Continued use of this product after discovering a defect voids warranty. This warranty shall be governed by the state of California, United States of America.

**IMPORTANT: Do NOT return merchandise to the store.
Contact U.S. Jaclean, Inc. for repair services.**

Please retain this Warranty Certificate, together with the original purchase receipt, and present it to our technician for inspection during service.

For assistance and more information, please contact U.S. Jaclean, Inc.