

## R16

### INSTRUCTIONS TO PROGRAM A REMOTE:



1. Locate the garage receiver and determine the location of the LEARN button on your opener.

2. Push the learn button on the opener. Light will blink.

3. Press any button you wish to program on GD-R16

4. Light on opener will stop blinking.

5. The remote is now programmed.

6. \*Follow these same steps to program multiple openers to a multi-button remote.

7. Step away from all moving parts and doors and test the function.

### **⚠ WARNING**

In order to prevent possible **SERIOUS INJURY or DEATH** from a moving gate or garage door:

- keep remote controls out of the reach of children.
- Only use the remote control when the gate/garage door can be seen clearly, is properly adjusted, and there are no obstructions to door travel.
- Keep the gate/garage door in sight until it is completely closed. Do not allow anyone to cross paths with the gate/garage door while moving or operating the remote control.