



### INSTRUCTIONS TO PROGRAM A REMOTE:

1. Locate the garage receiver and determine the unique 8 digit code. You may set a new code at this time. Keep note of the unique code. The receiver should be close to the opener in your garage.

TIP: Use a random sequence of numbers to make the code as secure as possible! Avoid easy to guess sequences.

2. Remove the front panel from the remote control which will expose the 8 digit code selector.



3. Using a paper clip or pen match the code to your receiver which was determined in step 1. The switch has an on and off position which is selected by gently pressing up or down.

\*Repeat steps 1-3 for any additional remotes you wish to program. The 8 digit code on all remote controls must match what was selected in step 1!

4. Replace front panel and test operation. Stand back approximately 50 ft (away from all moving parts and doors, see warning below) and press the transmit button. The door should open and close at this time. If it does not confirm the remote control has a functioning battery and the 8 digit code matches the receiver.

### INSTRUCTIONS TO ERASE A REMOTE CONTROL TRANSMITTER:

You may erase a transmitter by selecting a new unique code on your receiver. Alternately you can alter the 8 digit code on the transmitter so it DOES NOT match the receiver.

### **⚠ WARNING**

In order to prevent possible **SERIOUS INJURY** or **DEATH** from a moving gate or garage door:

- keep remote controls out of the reach of children.
- Only use the remote control when the gate/garage door can be seen clearly, is properly adjusted, and there are no obstructions to door travel.
- Keep the gate/garage door in sight until it is completely closed. Do not allow anyone to cross paths with the gate/garage door while moving or operating the remote control.