

## UNIVERSAL GARAGE DOOR OPENER REMOTE CONTROL



Read instruction thoroughly **BEFORE** beginning.

Start with garage door closed. Identify garage door opener - Smart/Learn button or DIP Switch. Smart/Learn button or DIP Switches are located on motor unit or external receiver. Refer to owner's manual if necessary.

Proceed with instructions according to your type of garage door opener.

## SMART / LEARN BUTTON


**1** See Chart A to determine # of times to press button and write in blank on Step 5.



CHART A (Press # 1-9x)				
# Times to Press Program button	Compatible Brand	Learn/Zip Code	Year Range	Mhz
1	Linear	Mega-Code	1987-Present	318
2	LiftMaster Craftsman Chamberlain	Orange Red	1987-2003	396
3	LiftMaster Craftsman Chamberlain	Purple	2008-Present	315
4	LiftMaster Craftsman Chamberlain	Green	1993-1996	380
5	Genie Overhead Door	IntelliCode	1995-Present	315
6	Genie Overhead Door	IntelliCode	1995-Present	396
7	Marantz	Multi Bit Code	1987-Present	315
8	LiftMaster Craftsman Chamberlain	Yellow	2011-Present	210/215/390
9	Wayne Dalton	Rolling Code	1990-Present	372.5

CHART B (Press # 10-18x)				
# Times to Press Program button	Compatible Brand	Learn/Zip Code	Year Range	Mhz
10	LiftMaster Craftsman Chamberlain	9 Dip Position	1990-1992	396
11	LiftMaster Craftsman Chamberlain	9 Dip Position	1993-1999	315
12	Genie	12 Dip Position	1980	390
13	Linear Multicode	10 Dip Position	1976	390
14	LiftMaster Craftsman Chamberlain	8 Dip Position	1993-1999	390
15	Stanley Multicode	10 Dip Position	1976	310
16	Genie	9 Dip Position	1980	390
17	Linear Moore-D-Static	8 Dip Position	1976	310
18	LiftMaster Craftsman Chamberlain	7 Dip Position	1993-1999	390

SMART/LEARN BUTTON OR DIP SWITCH

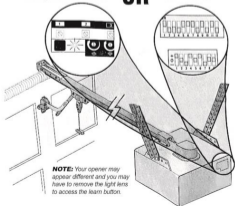

**NOTE:** Your opener may appear different and you may have to remove the light lens to access the learn button.

## WARNING

To prevent **SERIOUS INJURY** or **DEATH** from a moving gate or garage door:

- ALWAYS keep remote controls out of reach of children. NEVER permit children to operate, or play with remote control transmitters.
- Activate gate or door ONLY when it can be seen clearly, is properly adjusted and there are no obstructions to door travel.
- ALWAYS keep gate or garage door in sight until completely closed. NEVER permit anyone to cross path of moving gate or door.

## DIP SWITCH

**1** See Chart B to determine # of times to press button and write in blank on Step 5.





**5**

Select a button to program. Press button \_\_\_\_\_ times ensuring LED stops flashing after each press. Code is accepted when one of the following occurs:



**NOTE:** If there are problems programming to button 1, program to button 2.

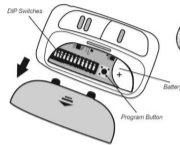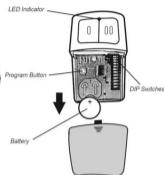

**5**

Select a button to program. Press button \_\_\_\_\_ times ensuring LED stops flashing after each press. Code is accepted when door activates.



## REMOTE CONTROL BATTERY

### WARNING

To prevent **SERIOUS INJURY** or **DEATH:**

- NEVER allow small children near batteries.
- If battery is swallowed, immediately notify doctor.

To Reduce risk of fire, explosion or chemical burn:

- Replace **ONLY** with 3V2032 coin batteries.
- **DO NOT** recharge, disassemble, heat above 100 C°(212 F) or incinerate.

#### NOTE:

**2 Position DIP Switch:** If programming fails reverse DIP switches (OFF to ON and ON to OFF)



#### \*\*3 Position DIP Switch:

For Chamberlain remotes **DO NOT** use the "0" position, use "+" or "-". If you already have a 3-button remote, DIP switch #1 must be set to "-" if necessary to program original remote controls.



Dispose of batteries properly. Replace **ONLY** with 3V2032 coin batteries.