

R39

R39 Programming Instructions


This transmitter works for both 9 and 12 dip switch receivers.



1. Using your original transmitter remove the panel to identify the switch pattern. You can also match the switch pattern to the back of the operator hanging in your garage.
2. Remove the programming panel from your new transmitter.
3. Using a small tip tool (ie ballpoint pen) match the switch pattern to your new transmitter. - If your transmitter/operator has 9 switches , from left to right, set the first 9 using the switch pattern and the last 3

to the OFF position

4. Replace the programming panel and test operation. Repeat these steps for any additional transmitters.

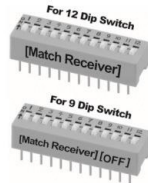

⚠ WARNING

- In order to prevent possible **SERIOUS INJURY** or **DEATH** from a moving gate or garage door:
- keep remote controls out of the reach of children.
 - Only use the remote control when the gate/garage door can be seen clearly, is properly adjusted, and there are no obstructions to door travel.
 - Keep the gate/garage door in sight until it is completely closed. Do not allow anyone to cross paths with the gate/garage door while moving or operating the remote control.