

R40

1. Enter programming mode

Simultaneously press and hold any two buttons on the remote control until the LED indicator lights up and then release it (about 5 seconds). At this time, the remote control enters the programming mode. (automatically exits after 60 seconds).



2. Compatible with multiple learn functions. Pair with the specific color of the learn button found on the back of the overhead garage door opener.

In programming mode, press the button to be programmed repeatedly to switch the function of this button. The selection mode is as follows: 4

function cycles YELLOW->PURPLE->RED->GREEN... (then back to yellow), each time you press the button in programming mode The LED of the programmed button will flash first and then stay on. When the desired function is selected, press any other button once, and the LED will turn off to indicate that the selected function has been saved and can be used normally.

⚠ WARNING

- In order to prevent possible **SERIOUS INJURY** or **DEATH** from a moving gate or garage door:
- keep remote controls out of the reach of children.
 - Only use the remote control when the gate/garage door can be seen clearly, is properly adjusted, and there are no obstructions to door travel.
 - Keep the gate/garage door in sight until it is completely closed. Do not allow anyone to cross paths with the gate/garage door while moving or operating the remote control.