


Set Up Instructions

OneFabric 10ft Straight Display


Step 1: Carefully remove frame and graphic from nylon bag.



Step 2: Ensure “adjustable feet” of frame are on the floor. Pull up display into upright position.

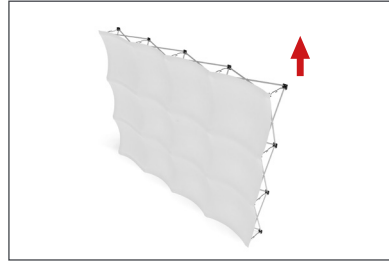

Step 3: Lock all hooks between front and back hubs.

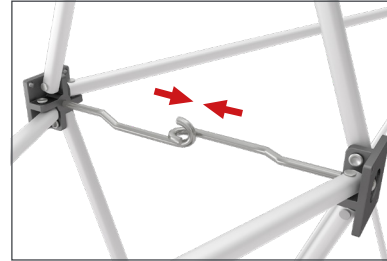

Step 4: If supplied with fabric end caps, wrap Velcro fabric edges around all end cap brackets on both sides. Pull past edge if needed to make taut.



WARNING BEFORE COLLAPSING THE FRAME:

Step 1: Both graphic end caps must be detached from end cap brackets before collapsing frame.


Step 2: **To avoid damage to the frame**, all hooks must be unhooked and separated from each other.

Once this is done the frame should begin to collapse under its own weight without much effort.



LIGHTS:


(OPTIONAL) Attach lights to top of frame by sliding the plastic “x block” under the rear pole and over the front pole.

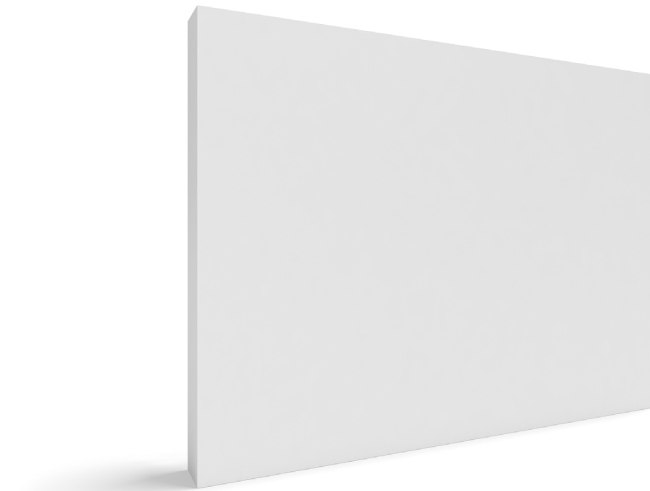


Set Up Instructions

OneFabric Graphic Installation


Step 1: Assemble frame and lay flat on its back. Remove existing graphic.

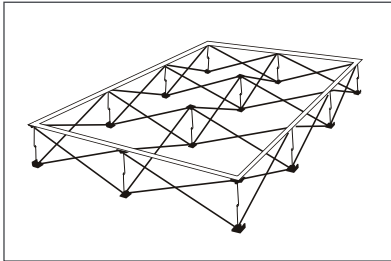


Step 2: Starting at one corner, attach Velcro on the graphic to Velcro on the frame. Note: Velcro on the graphic should extend approx. 1/4" beyond Velcro on the frame (it should not be flush).

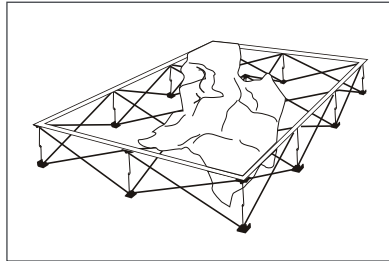

Step 3: Working in a continuous direction around the frame, attach the rest of the graphic. If supplied with end caps, attach end cap Velcro to end cap brackets on both sides.

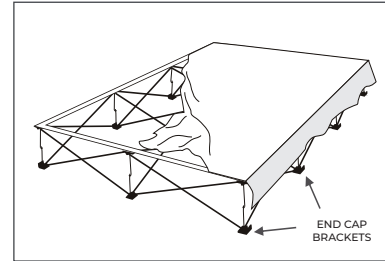

Step 4: If needed, adjust Velcro for taut fit. Complete.

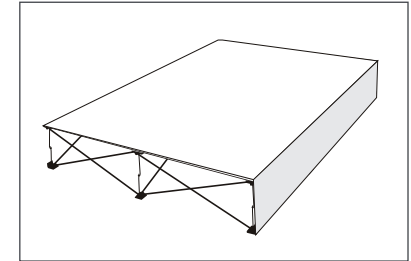

WARNING BEFORE COLLAPSING THE FRAME:

Step 1: Both graphic end caps must be detached from end cap brackets before collapsing frame.

Step 2: **To avoid damage to the frame**, all hooks must be unhooked and separated from each other.

Once this is done the frame should begin to collapse under its own weight without much effort.

