

# INDOOR BANNER STANDS

## ONE CHOICE SLIDER 8FT X 7.5FT



Front View



Angle View

### PRODUCT DESCRIPTION

This large banner frame is a great alternative to standard pop up backwall displays. The One Choice Slider frame can adjust to display a 8W' x 7.5'H or 10'W x 7.5'H graphic . Graphics are printed on dye sub stretch fabric with pole pockets sewn to the top and bottom for easy graphic installation.

### FEATURES

#### DISPLAY DIMENSIONS

- 96"W x 94"H x 17.25"D

#### GRAPHIC DIMENSIONS

- 96"W x 90"H

#### GRAPHIC MATERIAL

- Dye Sub Stretch Fabric

#### GRAPHIC FINISHING

- 4.5" Pole pockets on top and bottom with hemmed sides

#### DISPLAY CONSTRUCTION

- 25mm aluminum tube frame

### WEIGHT & DIMENSIONS (STAND & GRAPHICS)

#### SHIPPING WEIGHT

- 20 lbs

#### PACKAGE DIMENSION

- 46"W x 6"H x 6"D

### TURNAROUND TIME

#### GRAPHIC PACKAGE

- 4 business days after proof approval\*

#### AVAILABILITY

- WEST COAST

\*After proof approval, for up to 10 sets.



ON  
FRAME



ON  
GRAPHIC



 
INDOOR

# INDOOR BANNER STANDS


ONE CHOICE SLIDER




## PARTS LIST

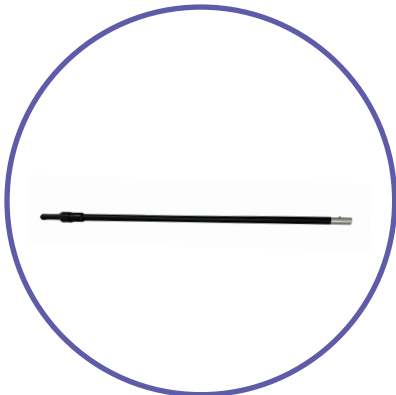

**QTY 2:**  
Horizontal Tube L

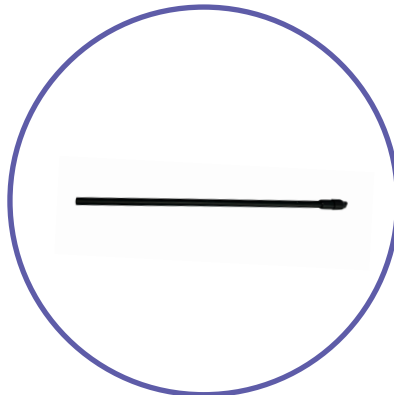 

**QTY 2:**  
Horizontal Tube R

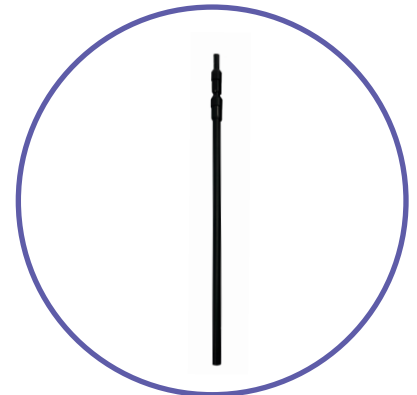 

**QTY 2:**  
Vertical Tube



**QTY 4:**  
Screw Knobs



**QTY 2:**  
Feet w/Screws




**QTY 1:**  
Travel Bag

# INDOOR BANNER STANDS
 
## ONE CHOICE SLIDER



### FRAME ASSEMBLY INSTRUCTIONS

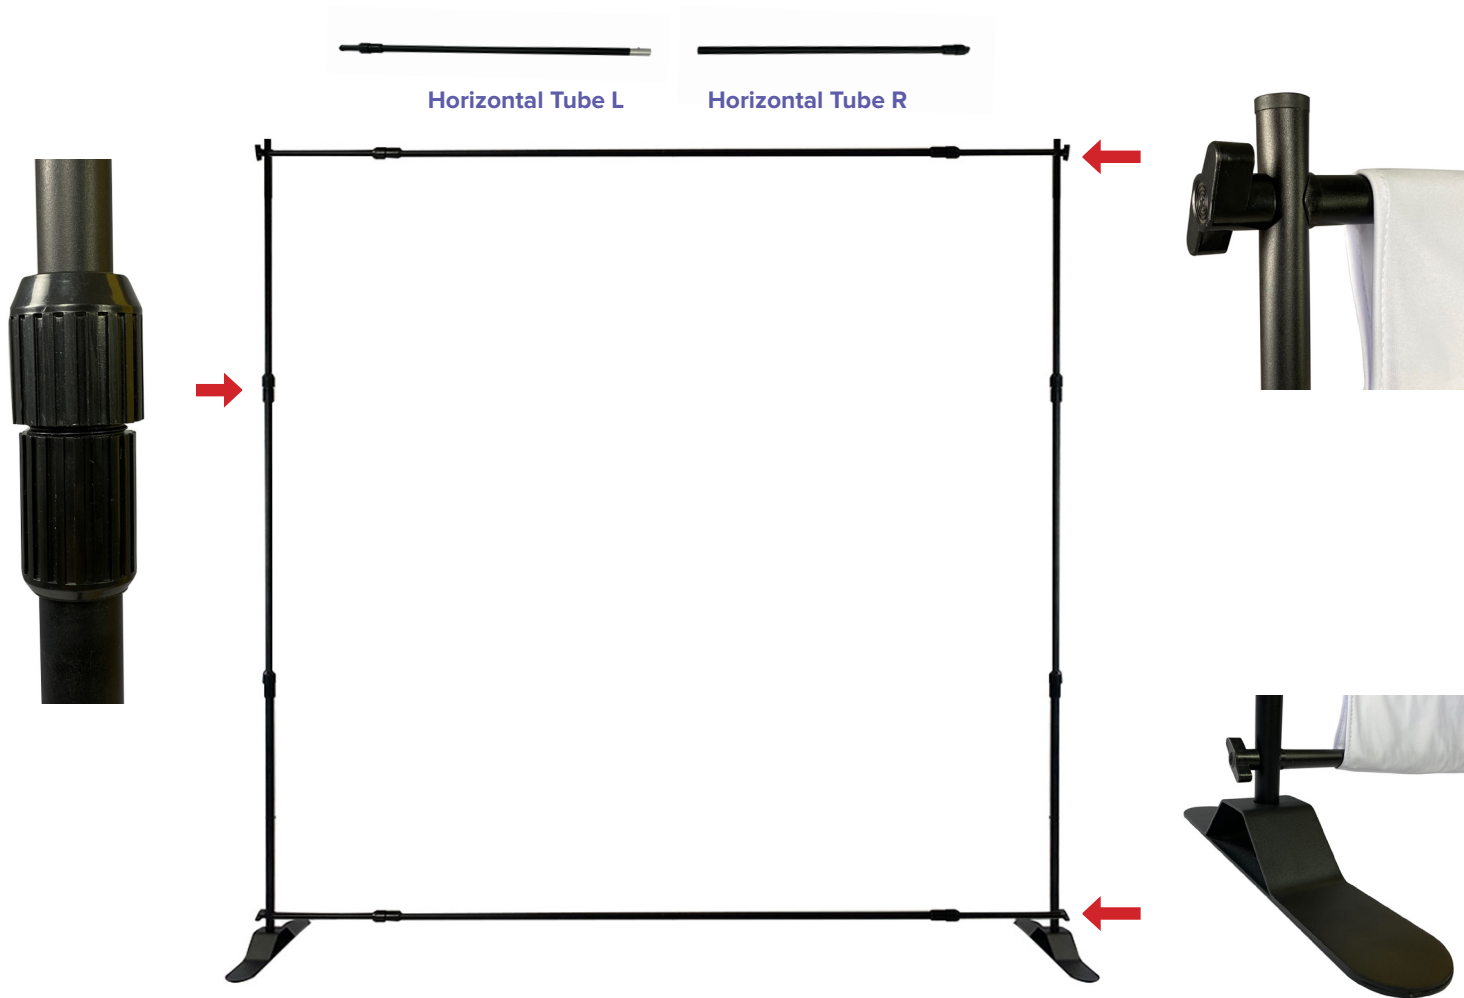

1. Assemble the top and bottom horizontal tubing (Horizontal Tube L & Horizontal Tube R)
2. Attach feet to bottom of the vertical tubes with provided screws
3. Unfold your graphic and slide the horizontal tubes through the pole pockets at the top and bottom of the graphic. Tube length will need to be adjusted to fit the graphic width.
4. Attach top and bottom horizontal tubes to vertical tubes using the screw knobs at the ends of the horizontal tubing
6. Once both top and bottom horizontal tubes and graphic are attached, hoist up vertical tubing until graphic is taught and then twist the tubing to lock in place (see stickers on tubing for lock/unlock instructions)
7. Make any necessary adjustments to width and height

# INDOOR BANNER STANDS

## ONE CHOICE SLIDER



### CARE SHEET - DYE-SUB FABRIC

#### HANDLING TIPS

1. Wrinkles can be removed with cool iron or fabric steamer.
2. Fabric should NOT be stored when damp or wet. Store in cool, dry area.
3. For storing graphics please remove from plastic packaging that was provided and keep fabric in cool/dry place.

#### WASHING

1. Your fabric graphic CANNOT be machine washed. Remove any hardware attached to the fabric prior to cleaning. Spot clean using MILD soap and cool water. Air dry fabric, dry on frame if frame is available.
2. Fabric must be COMPLETELY dry prior to storing.
3. Do NOT dry clean

#### STAIN TREATMENT

1. Treat stain on fabric.
2. Remove as much debris as possible with a soft bristle brush (do NOT rub too hard).
3. Use a clean, lint-free white cloth. Lightly pat the stain from the outside moving in (to keep stain from spreading).
4. If a cleaning solution is used, rinse the area well with water to ensure NO solution is left on fabric.
5. Most stains can be treated with household fabric stain removers. It is ALWAYS important to test how the solution will react to the fabric. This can be tested by dabbing solution to a small corner of the fabric. Most household cleaners will provide treatment instructions depending on the type of stain.



- Wrinkles can be removed from fabric with a cool iron or steamer.



- Do NOT machine washed.



- Do NOT bleach fabric



- Do NOT tumble dry. Fabric must be air dried on the frame to prevent shrinking.