


ZOOM TENT FLAG CLAMP

RECOMMENDED FOR SMALL TO MEDIUM ZOOM FLAGS

Components

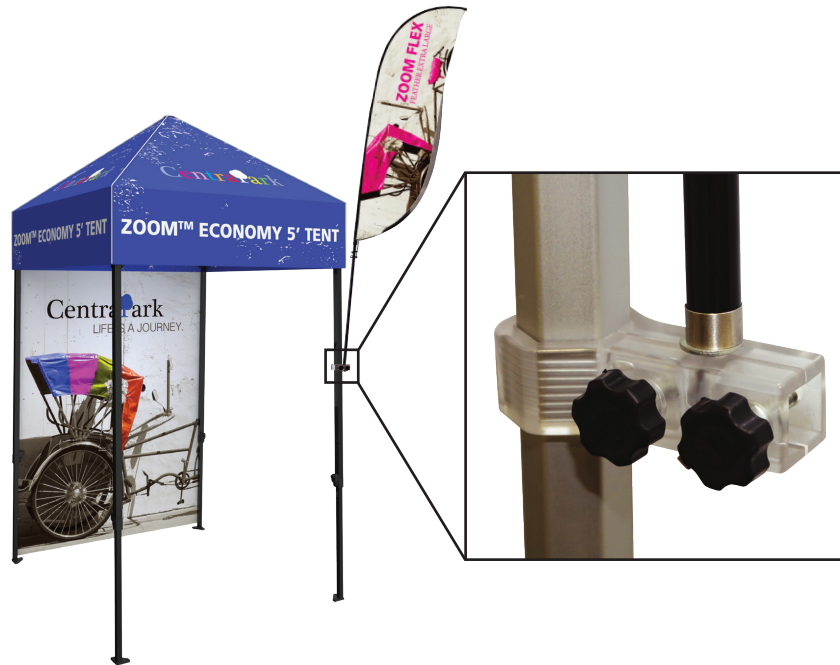

Step by Step



Step 1.

Clamp the two accessory pieces to the chosen tent leg.



Step 2.

Lock the accessory pieces in place with the included screws.



Step 3.

Unscrew the pole pin wing nut, slide the pin through the accessory piece hole, and lock in place with the wing nut.

Place your Zoom Flag pole on the pole pin.