

YAMAN

TOKYO JAPAN

English User's Manual come with this product.
Please download the other language's User's Manual version
from this link (<https://www.ya-man.co.jp/en/support/documents/>)
or scan a QR code on the right with your camera phone.
Please carefully read User's Manual to ensure safe and proper
use of the device.



TO ACCESS SCAN WITH
YOUR CAMERA PHONE

User's Manual

Electric Shaver
HOT SHAVE
YJECO

Introduction

Thank you for purchasing this YA-MAN product.

- Do not use the device before reading the Safety Precautions (pages 2-8).
- Please read this User's Manual carefully for information on how to use the device properly and safely.
- After reading the contents hereof, be sure to keep this User's Manual in an accessible location.
- Make sure to include this User's Manual if you are transferring ownership of the device to another person.

Table of Contents

Safety Precautions ————— p2

Use in Foreign Countries ————— p8

Names and Functions of Components — p9

Before Use ————— p11

How to Use ————— p13

After Treatment ————— p17

Additional Information ————— p20

● Product Specifications ————— p20

● Troubleshooting ————— p21

After-sales Service ————— p24

Safety Precautions

- Read these Safety Precautions carefully before using the device in order to use it correctly.
- Use the device sensibly in accordance with the prescribed steps.
- Immediately discontinue use and arrange to have the device repaired if any abnormality occurs.
- Do not use the device in a defective state, as doing so could cause a physical harm to the user.
- The precautions listed in the User's Manual are very important. For your safety, please follow them carefully.
- Precautions are classified as DANGER, WARNING, or ATTENTION in order to clearly specify the level of danger and possible injury or damage that may occur if the device is misused.

Classifications of Precautions



Improper use of this device poses a severe and likely risk of death or serious injury.



Improper use of this device may pose a risk of death or serious injury.



Improper use of this device may cause an injury or property damage*.

* 'Property damage' refers to damage affecting dwellings, household belongings, or domestic animals and pets.

Symbols



This symbol shows you what you must not do.



This symbol shows you what you must do.



This symbol shows you what you must be careful with.

WARNING (Regarding the power supply)

- Do not use if the AC adapter is damaged or if the wall socket is too loose.

Failure to comply may cause an electric shock, short circuit, fire, or a malfunction of the device. Contact your local distributor for advice on repairing the device.



Use of a damaged cable or plug is prohibited

- Always use the dedicated AC adapter.

Failure to comply may cause an electric shock, a short circuit or a fire.



Prohibition

- Do not exceed the rated capacity of a power outlet or wiring accessory (do not connect too many plugs to one outlet).

Failure to comply may cause an electric shock, short circuit, fire, or a malfunction of the device.



Overloading an electric circuit is prohibited

- Do not damage or modify the AC adapter. Do not apply unnecessary force, bundle or twist the power cord.

Failure to comply may cause the cable to break, resulting in a fire or an electric shock. Straighten out any twists in the cord before storing.



Careless or reckless use is prohibited

- Be sure to use the device in an operating voltage range between 100~240 volts. Make sure the plug is fully inserted into the power outlet.

Failure to comply may cause a fire, electric shock or other accidents.

*The free-repair warranty is only valid in Japan.



Must Comply

DANGER (Regarding use and storage)

- The following individuals should not use the device:

Use of the device could cause electronic medical devices to malfunction.

- ◆ Do not use the device in conjunction with any medical electronic equipment, including:
pacemakers or other implanted electronic medical devices, artificial heart-lung machines or other electronic life-support medical devices,
electrocardiographs or other worn electronic medical devices.



Prohibition

WARNING (Use and storage)

- The following individuals should not use the device:

Failure to comply may cause accidents or other problems.

- If you have existing or suspected epilepsy, heart disease or related disorders · Infants or those who are unable to express their intentions on their own
- If you are unable to sense temperature or stimulation · If you have an autoimmune disease

Consult a physician prior to use under the following conditions:

- If you have an acute disease · If you have an infectious disease · If you have a malignant tumor · If you have a febrile disease
 - If you have high blood pressure or a blood disease · If you have a fever
 - If you have sensory impairment due to severe peripheral circulatory dysfunction (e.g. diabetes) · If you have nerve damage
 - If you have a skin disease or atopic dermatitis · If you are a hospital outpatient and are taking medication
 - If you have a pre-existing skin condition, such as an allergic constitution or contact dermatitis, or if you are concerned about your skin when using this device
- Do not use in the following cases or on the following areas.
Failure to comply may cause accidents or other problems.
 - If your skin is damaged, experiencing a rash, inflammation, or other abnormalities · If you are under the influence of alcohol
 - Anywhere inside the mouth, around the pubic region, or any mucous membrane · Eyeballs · Eyelids (eye sockets)
 - Throat, Adam's apple (the device can only be used in Shaver Mode on these areas) · Bulging moles · Viral warts · Areas where you have broken a bone
 - Areas of internal bleeding, swelling or scabbing after cosmetic medical procedures

* Avoid using the device for 2 weeks after cosmetic medical procedures. After this period, consult with a physician and only use the device if the physician confirms there is no problem.

(e.g. Hyaluronic acid injections, silicone injections, Botox, thread lifts, double eyelid surgery, HIFU, etc.)



Prohibition

WARNING (Use and storage)

- Do not use the device for a long time over areas where the skin is thin or areas above bones.
Failure to comply may cause skin problems or physical ailments.

- Do not overuse the device.
For usage time and frequency, follow the instructions in the User's Manual.
Failure to comply may cause physical injuries.

- Before use, check to make sure the RF electrode, electrode head and trimmer are not cracked, deformed or broken. Do not use the device if it is damaged or malfunctioning.
Failure to comply may cause injuries or skin problems.

- Do not use, store, or charge the device in the following locations:
 - In bathrooms or near bathtubs, showers, washbasins or other containers filled with water (use of the device is OK in these areas)
 - A dusty location
 - Outdoors or a location where there is exposure to direct sunlight
 - A slope or a location where there are vibrations or shocks
 - A location where there are strong radio waves or magnetism
 - Near a flammable substance (such as alcohol, thinner, benzene, nail polish remover or spray).
 - A location where there is exposure to oil smoke or steam
 - A location that may become hot, such as near a heating device (e.g. a heater)
 - A location with drastic temperature changes (e.g. near an air conditioner or heater)

Failure to comply may cause a fire, electric shocks, accidents, malfunction of the device, falls or injuries.



Prohibition

- Do not leave the device unattended while it is turned on.
Failure to comply may cause a fire or other accidents.
- Do not use the device in hot springs (spas), warm water containing bath salts or in a sauna.
Failure to comply may cause a malfunction of the device.
- Do not leave it submerged in water or in a bathtub.
Failure to comply may cause a malfunction of the device.
- Do not share with family members or other people.
Doing so may cause infections and inflammation.



Prohibition

WARNING (Use and storage)

- Do not use the device in any areas or for any purpose other than those stated in the User's Manual.

Failure to comply may cause a malfunction of the device or injuries.



Non-intended
uses are
prohibited

- Children should obtain the consent of their guardians before using the device and should only use it under the supervision of a guardian or a specialist.

Failure to comply may cause accidents or injuries.

- Keep the device and AC adapter away from children and do not allow them to use it alone.

Children should not play with the appliance.

Failure to comply may cause accidents or injuries.



User
restrictions

- Do not dispose of the device in a fire or place it near fire or flames. Do not use, charge or store in a high-temperature or high-pressure area.

The device features a built-in rechargeable battery. Failure to comply may lead to the generation of heat, a fire or explosion.



Combustion
warning

- Do not disassemble, attempt to repair or modify this device in any way.

Failure to comply may cause a fire, an electric shock or other injuries.

Contact your local distributor for advice on repairing the device.



Disassembly
is prohibited

- If the device is dropped or damaged, turn off the power immediately, pull out the plug, and request a repair/inspection.

Failure to comply may lead to a fire or an electric shock.

- Be sure to turn off the power before attaching or removing the head.

- If the blade is damaged or becomes blunt, stop using it and replace it with a new blade.

Failure to comply may cause accidents or injuries.



Must Comply

WARNING (Use and storage)

- When disconnecting the plug from a power outlet, be sure to pull it out by grasping its head instead of the cord (do not touch the metal parts).
Do not insert or disconnect the plug with wet or damp hands.
Failure to comply may cause an electric shock, short circuit, fire, or a malfunction of the device.
- If you feel an earthquake, see lightning or hear thunder, turn off the power and unplug the device.
Failure to comply may lead to a fire or an electric shock.
- After use, be sure to turn off the power and disconnect the plug from the power outlet.
Failure to comply may cause a fire or other accidents.
Make sure to disconnect the AC adapter from the power outlet after charging is completed.



Removing
the plug

ATTENTION (Use and storage)

- Do not press the device firmly or use it intensively on a single spot.
Pressing the device more firmly than necessary or using it intensively on a single spot may damage the skin.
- Do not allow the device to come into contact with another beauty device or electronic appliance while the power is on.
Do not use with other electronic products (electric blankets/bed sheets, heated tables, etc.) at the same time.
Failure to comply may lead to accidents due to malfunctions.
- Do not use while driving.
Failure to comply may cause accidents or injuries.
- Do not use with water at 60 °C and above.



Prohibition

ATTENTION (Use and storage)

- Check carefully that your skin is not showing any abnormalities during the treatment.
Stop using the device immediately if you start to feel pain, fatigue or see any skin reaction during use.
Stop using the device immediately if the treatment does not agree with your skin. If symptoms persist the following day and beyond, consult a physician.
- Do not press the blade with excessive force or hit it against hard objects.
Doing so may damage the blade and/or cause injury to skin.
- Be sure to wipe moisture from the main unit after use.
Leaving the device wet could cause damage.
- When carrying the device around or storing it, always attach the head cover.
- Failure to do so may cause injury to skin and/or shorten the blade's shelf life. Failure to comply may cause accidents or injuries.



Must Comply

■ Use in Foreign Countries

WARNING

- Be sure to use the device in an operating voltage range between 100-240 volts.
Failure to comply may cause a fire, electric shock or malfunction of the device.



Must Comply

- Be sure to check the plug configuration and the voltage of the power outlet before use.
Failure to comply may lead to the generation of heat, fire or malfunction of the device.




Combustion
warning

- The plug configuration and voltage may vary depending on the region and the type of accommodation. Always be sure to check for compatibility before using the device.
- For information about plug adapters, consult a consumer electronics retailer.

Names and Functions of Components

Main Unit

Head Connector

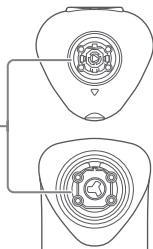

Head

RF Electrode

Double Rotary Blades
(consumables)

Open Button

Mode Button


Power Button

Charging Mark


Detailed Structure of Double Rotary Blade



Light Color	State
Pink	Lock function is activated (page 10)
Blue	Blinking: charging (page 11); Lighting: in operation
Red	An error has occurred (page 22) If displayed when the device is in use, battery level is low.

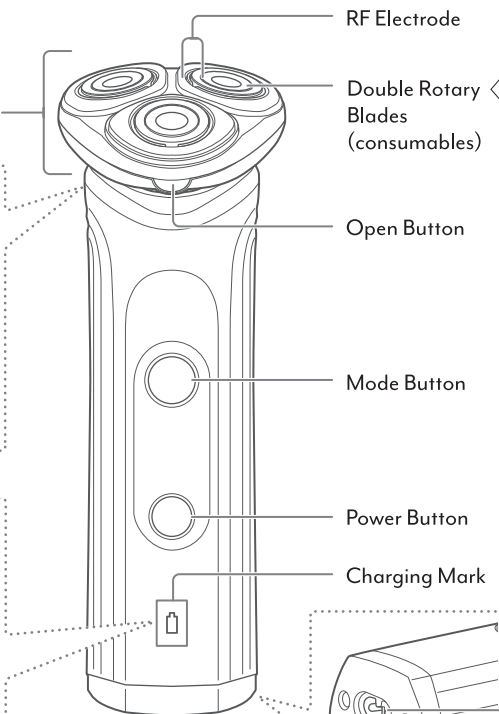

Insertion Port
for Charger's Plug

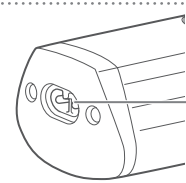

Accessories

- Trimmer



- Head Cover

- Cleaning Brush

- AC Adapter

- User's Manual

For sideburns and under the chin (page 16)

The design and specifications of the device and attached accessories are subject to change for improvement purposes without notice.

Functions

Lock Function

This feature prevents the device from accidentally turning on when carried around. If you press and hold down the Mode or the Power button for 4 seconds, the button will be locked after 6 short beeps. If you press and hold down the Mode or the Power button again for 4 seconds, the button will be unlocked after 4 short beeps.

Auto Power-off

About 3 minutes (in RF Shaver/Shaver Mode) or 6 minutes (in RF Mode) after turning on the power, the power will be turned off automatically after 2 short beeps.

Waterproof

This product (excluding the AC adapter) is IPX7 level waterproof* (JIS waterproof protection class).


* The product is not designed to use underwater, so please be careful when using the device in bathrooms or around water.

- Never charge the battery when the device is wet.
- The AC adapter is not waterproof.

■ Before Use

Before carrying out a treatment, be sure to check the following.

Charge the Device

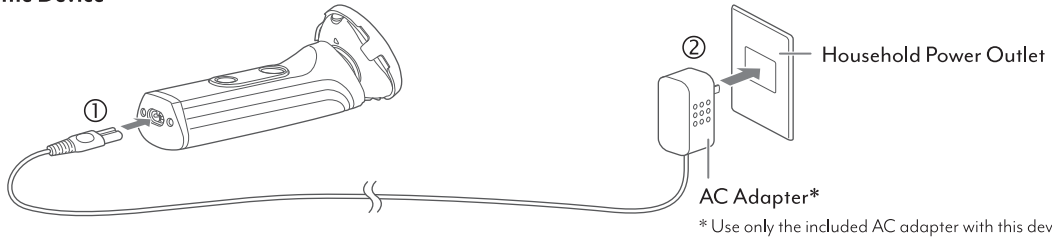

Charging	Charging mark (page 9) flashes in blue
When Charging is Complete	Charging mark (page 9) is lit in solid blue for 10 seconds and then goes out.
Charging Time	Approx. 3 hours (room temperature approx. 15°C ~ 35°C)
Operating Time	Approx. 25 minutes

* If charging does not begin after approx. 10 seconds, check if the AC adapter connection is loose.

* The device cannot be used while charging. Unplug the AC adapter before use. If you try to charge the device while it is turned on, the power will automatically turn off.

* Design and specifications of the main unit and accessories are subject to change for improvements without prior notice.

ATTENTION

- **Make sure there is no water on the charging terminal before connecting the device. Failure to comply may cause an electric shock, short circuit, fire, or a malfunction of the device.**
- **Never charge the device in the bathroom.**

Pre-testing on Skin

*When using the device or a cosmetic product for the first time, always test for its compatibility with your skin.

1 Clean your skin

- Wash the inner side of your arm with a mild soap and wipe dry with a towel.
- Remove **all** metal accessories (watches, necklaces, rings, earrings, etc.) when using the device.
Failure to comply may cause accidents or injuries.

2 Apply lotion or water to an inner arm

3 Turn on the power and set the device to RF Mode (page 15)

4 Use on a test spot, moving the head (page 9) for about 3 minutes

You can use the device if no abnormalities appear on your skin 24 hours after performing the test.



ATTENTION

- If a rash, reddening, itchiness, stinging sensation or other abnormality occurs at the pre-testing area, immediately stop the pre-test.

How to Use

Modes

This product allows you to treat your skin via the following modes.

Mode	Functions	Mode button (page 9) display
RF Shaver	For shaving while your beard is being directly warmed by RF. * This is the recommended mode for shaving.	RF SHAVER
Shaver	For shaving.	SHAVER
RF	For treating your skin with RF (Radio Frequency).	RF


How to shave proficiently (RF Shaver Mode/Shaver Mode)

Lightly apply the blade to your skin and move the device in a circular motion.

(Example) Cheeks: stretch your skin so that the facial hairs stand up, then shave while moving the device in small circles.

* If you are a first-time user, it may take 2 to 3 weeks to get used to shave appropriately.

* If you use the device over makeup, the foundation may cause dark staining of the skin.

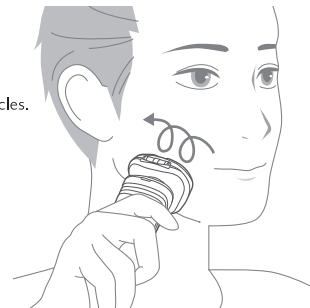

Basic method of use

RF Shaver Mode (recommended)

1 Apply shaving foam or shaving gel evenly to your face

2 Turn on the device

Press and hold down the power button (page 9).

RF Shaver Mode will be selected automatically.

3 Shave (page 13)

When finished, press and hold down the power button to turn off the power.

4 Rinse your face

5 Clean the head (page 17)

ATTENTION

- Be sure to remove makeup before using the device.
- Always ensure there is an adequate amount of shaving foam or shaving gel between the electrodes and your skin, and replenish it as needed while shaving.

If there is not enough shaving foam or shaving gel, warmth may be reduced.

Shaver Mode

1 Set to Shaver Mode (page 13)

Turn on the power (page 14) and press the mode button (page 9) once.

2 Shave (page 13)

3 Clean the head (page 17)

RF Mode

1 Wash your face and apply lotion or similar products to your face


2 Set to RF Mode (page 13)

Turn on the power (page 14) and press the mode button (page 9) twice.

3 Apply the electrode head to your skin and move the head over the area being treated.

Press the electrode head repeatedly on your face as if stamping on the skin (Press → Release → Move electrode head).

• Estimated usage time: about 3 minutes for half-face treatment (about 6 minutes per session)

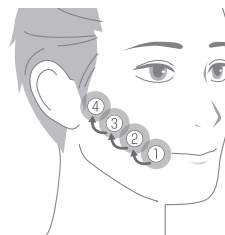

4 Clean the head (page 17)

Using the trimmer

The trimmer can be attached to the main unit to treat sideburns or shave the area under the chin.


* Beard length cannot be adjusted.

1 Detach the head from the device

Pull the head straight out without turning it sideways.

The head is firmly attached, so you will need to pull hard.

* Make sure to switch the main power off when performing this action.

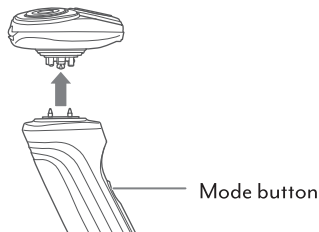


3 Set to Shaver Mode (page 13)

Turn on the power (page 14) and press the mode button (page 9) once.

* The trimmer does not emit RF.

2 Attach the trimmer to the main unit

Attach the trimmer to the main unit by aligning the latter with the hole on the trimmer, then push it in until it clicks firmly in the place.

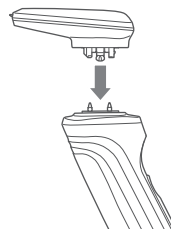

4 Lightly apply the top of the trimmer to your skin and move it slowly against the grain of your beard.

* Do not apply the blade perpendicular to your skin.

ATTENTION

- Do not use the trimmer on your hair on the head.
- Do not use on areas that you cannot examine visually.
- Do not touch the blade.
- Use up to 2 times on the same area.


■ After Treatment

How To Clean (washing with water): every time

Be sure to rinse the device with water after each use. Be sure to wipe off any water after use.

1 Turn on the power with the head/trimmer attached and rinse with running water.

2 Turn off the power, press the Open button to open the head and rinse off any hair that may have accumulated.

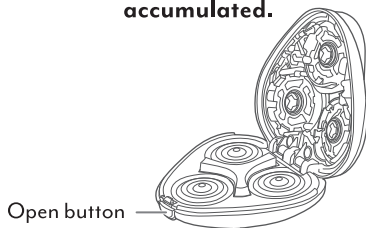

3 Drain excess water and let it air dry

* Remove the head/trimmer from the main unit and dry with the head open.

Do not wipe the device with solvents such as alcohol, thinner, benzene, nail polish remover, kerosene, chemicals, or polishing powder.



ATTENTION

- After cleaning, drain any residual water and make sure there is no water on the main unit. Failure to comply may cause a malfunction of the device.

After use, make sure that any shaving foam and shaving gel have been thoroughly removed. Insufficient cleaning may cause bad odors or malfunctioning.

How To Clean (cleaning with the brush, disassembling the head + washing with water): once a week


Use the cleaning brush once the head is dry.

1 Open the head (page 17) and remove any hair.

Clean with the cleaning brush. Close the head when finished.


2 Remove the blade

Fit the latches of the cleaning brush onto the two dents on the ring of the outer blade and remove it by turning counterclockwise to the "I" mark on the head.

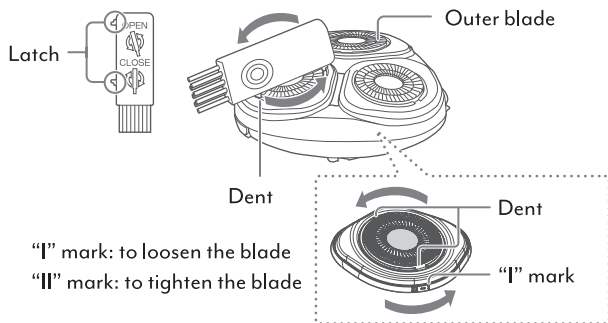


"I" mark: to loosen the blade
"II" mark: to tighten the blade

3 Remove inner blade and ring from the outer blade, wash with running water and dry.

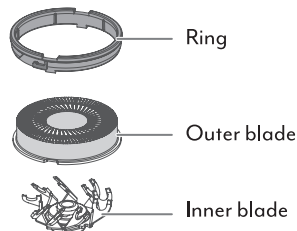

4 Attach the blade

With the dent of the ring facing up, align the latches of the ring with the holes in the outer blade and attach the inner blade. Align the indentation of the ring with the "I" mark on the head and push in. Fit the latches of the cleaning brush on the two dents on the ring of the outer blade and attach it by turning clockwise to the "II" mark on the head.

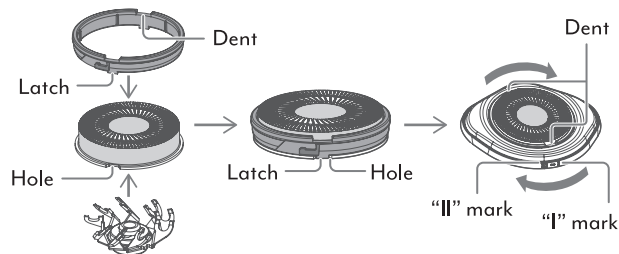

Replacing the blade

The double rotary blade is a consumable item. In order to ensure excellent shaving performance over time, we recommend replacing the blade every two years. For information on how to disassemble and replace the replacement blade (SA539), see 'How To Clean' (page 18).

Storage

- Always remove excess water and dry thoroughly before storing. Leaving the device wet may cause corrosion of the charging terminal or the inside of the main unit.
- If you will not be using it for an extended period, clean the device before storing it.
- When the device is not in use, turn off the power of the main unit.
- Avoid using or storing the device near a heater or in a bathroom, other high-temperature/high-humidity locations, places where there is exposure to direct sunlight, or in unstable locations.
- Keep the device out of the reach of children.
- Do not store in bathrooms or other wet areas.

Maintenance and Inspections

- If you have not used the device for an extended period, inspect it carefully and check that it works properly and safely before using it again.
- If the device is malfunctioning, go to 'Troubleshooting' (page 21) and attempt to identify the problem before arranging to have the device repaired. If the problem persists, make an inquiry with the Global After Service (<https://www.ya-man.co.jp/en/support/repair/>) or your local distributor.
- If the device malfunctions, appears damaged, or needs service, please contact your local distributor.

■ Additional Information

Product Specifications

Rated Power Supply	DC9V 2.0A
Power Consumption	Approx. 8.0 W (when the device is being charged)
Type of Power Supply	Rechargeable
Charging Time	Approx. 3 hours
Outer Dimensions	Approx. 65 mm × 65 mm × 185 mm (W×D×H) (when the electrode head is attached)
Weight	Approx. 255 g
Materials	Main unit: polycarbonate resin, ABS resin, POM, silicone rubber, stainless steel, TPE Head: polycarbonate resin, ABS resin, POM, stainless steel, aluminum, silicone rubber, TPE Trimmer: ABS resin, stainless steel, POM, silicone rubber
Battery	Lithium-ion battery
Country of Origin	Japan
Accessories	One trimmer One head cover One cleaning brush One AC adapter User's Manual

Troubleshooting

If you perceive any abnormality with the device during use, check to see whether any of the following symptoms are present.

Problems

Possible Causes and Solutions

The device does not turn on	<ul style="list-style-type: none">● The device has run out of power. Charge the battery (page 11).● Press and hold down the Power button to turn on the power.● The power will not turn on while the device is being charged. Unplug the AC adapter.
I cannot recharge the device	<ul style="list-style-type: none">● The AC adapter is not inserted into the wall socket (or too many plugs are connected to one outlet). Connect the AC adapter to a wall socket.● The adapter is not plugged into the device. Plug the adapter into the device.
The device only operates for a few minutes even after charging	<ul style="list-style-type: none">● The rechargeable battery may have reached the end of its shelf life (approximate number of charges: 300 times). Consult the Global After Service (https://www.ya-man.co.jp/en/support/repair/) or your local distributor. <p>* Do not try to replace the battery by yourself as this may cause a malfunction.</p>
The device shuts off	<ul style="list-style-type: none">● The power is turned off by the Auto Power-off function approx. 3 minutes (in RF Shaver/Shaver Mode) or 6 minutes (in RF Mode) after turning on the power. The power will be turned off automatically after 2 short beeps.
When I press a button, there is no response	<ul style="list-style-type: none">● The button may be locked (the charging mark is lit solid pink). If the mode button or the power button are pressed and held down for 4 seconds, the button will be automatically locked. To unlock, press and hold down the Mode button or the Power button again for 4 seconds.
RF is too warm	<ul style="list-style-type: none">● If you keep the head on the same area for a long time, your skin may feel hot. Be sure to keep the roller moving over the skin during RF operation.

Problems

Possible Causes and Solutions

You cannot feel RF warmth

- The skin lacks moisture or is dry. Moisturize your skin with skin gel or lotion before use.

Shaving performance has worsened

- The head may be dirty. Refer to 'How To Clean' (page 17).
- The blade may be damaged or worn. Replace the blade (page 19).

Shaving performance has worsened/The device makes a strange noise

- Apply commercially available shaver oil (liquid paraffin) to the upper surface of the outer blade.

Error display notification

When an error occurs, the following error information will be displayed.

Check the error details and resolve the cause of the error accordingly.

Error indication	Solutions
The "RF" mode button displays blinks and the charging mark flashes red	The cause is a short circuit between the electrodes on the head. Power is turned off automatically. Turn on the power again.
The "SHAVER" mode button displays blinks and the short buzzer beeps 4 times	The cause is the clogging of the head. Power is turned off automatically. Open the head and clean it. Turn on the power again. If the power does not turn on, consult the Global After Service (https://www.ya-man.co.jp/en/support/repair/) or your local distributor.

Frequently Asked Questions

Q

What are the recommended frequency and length of use?

A

As a general rule: RF Shaver Mode: 7 days a week (once a day, up to 3 minutes)

Shaver Mode: 7 days a week (up to 3 minutes per session)

RF Mode: 5 days a week (once a day, up to 6 minutes)

Trimmer: 1 day a week (up to 6 minutes per session)

* If you use RF Shaver Mode or Shaver Mode for 3 minutes or longer, reduce the frequency of use.

* Excessive usage may cause skin damage.

Q

Is the device more effective if I press firmly?

A

Do not press the roller firmly. Apply the double rotation blade in such a way that it touches to the skin closely. Apply it lightly so as not to damage your skin.

Q

Can I use the device in the bathroom?

A

The main unit can be used in the bathroom but cannot be used underwater. Also, it cannot be charged in the bathroom.

Q

What does it mean when cut hair remains on the skin?

A

Cut hair waste may remain on the skin depending on the beard's thickness or on the amount/viscosity of the gel. In such cases, wipe it off with tissue. Wash the head with water every time you use it. Also, after using the device, wipe off any remaining moisture thoroughly.

Q

What skin-care products do you recommend?

A

RF Shaver Mode, Shaver Mode: shaving foam, shaving gel, etc.

RF Mode: lotion (thick lotions are recommended), etc.

■ After-sales Service

Rechargeable Battery

- This appliance contains batteries that are non-replaceable.
- The rechargeable battery is a consumable item (meaning it is not covered by the warranty).
- If the operation time after charging has become extremely short, it could be the end of the battery's useful life. The battery can be charged approx. 300 times.
- Consult the Global After Service (<https://www.ya-man.co.jp/en/support/repair/>) or your local distributor for battery replacement.

Disposing of the device

- Follow your local government rules for proper disposal of this product.
- The built-in battery must be removed from the device before it is disposed.
- The lithium-ion battery used in this product is a valuable recyclable resource.



Correct Disposal of this product


- This marking indicates that this product should not be disposed with other household wastes throughout the UK and EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.




How to remove the built-in battery

- Be sure to turn off the power before removing the battery.
- Use a screwdriver to remove the battery. Be careful not to injure yourself.
- When removing the battery, be careful not to damage it with a hard object.* Failure to comply may cause the generation of heat or a fire.
- The removed battery should be processed according to local sorting rules (disposal or recycling methods).
- Refer to figures ① to ④ below to remove the battery.

1 Remove the two sets of rubber plugs/screws on the bottom cover.

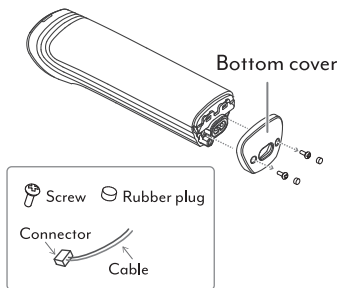


2 Remove the cover using a fine-tipped tool.

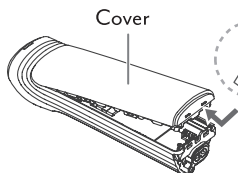

⚠ Be careful not to hurt yourself

3 Remove the battery from the board.

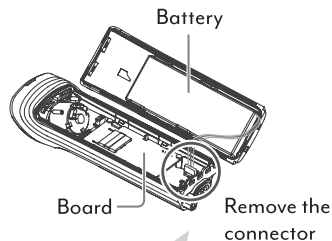


⚠ Do not cut the cable.

4 Remove the battery using a thin tool like a ruler.

* It is fixed with strong adhesive tape.

⚠ Be careful not to damage the battery

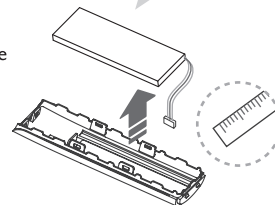

The above figures are intended to be used for disposing of the product, not repairing it.

CAUTION: Disassembling the device by yourself may cause a failure.

Warranty

If you have purchased from www.global.ya-man.com,

Warranty: Please register your device at <https://global.ya-man.com/apps/warranty/registrants/new>

Contact: inquiries to contactus@ya-man.com

If you have purchased from local distributor,

Warranty: Please contact your local distributor

User's manual (WEB)

User's manual is also available at following address:

<https://www.ya-man.co.jp/en/support/documents/>

Marking



Detachable supply unit.

