

HearthSong

FAMILY HUGGLEPOD HANGOUT®

Materials: 100% nylon; trim reinforced with nylon; 100% polyester cushion filling.


- ▷ **Care: Spot clean.**
- ▷ **Holds up to 500 lbs.**
- ▷ **Not intended for use as a swing, tent, spinner, gymnastics/playground equipment, climbing frame, or any combination.**
- ▷ **Not recommended for extended outdoor use.**

#732260 | Ages 4+
Adult assembly and installation required.
Takes two adults 30 minutes to assemble.
Lights take 3 AA batteries (not included).



Stand sold at hearthsong.com

What you get:

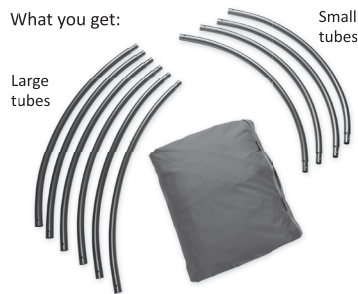

1. Before assembly, hang the HangOut for a period of time to remove wrinkles.
2. Locate the four small steel tubes that will make up the top ring and the six large steel tubes that will make up the bottom ring.



3. Turn the top of the HangOut inside out.



4. Thread the four small tubes into the sleeve inside the top and connect them into two half-circles. (Please note that you do not need to use screws. Make sure that all pop tabs are securely locked.)



5. Connect the two top halves and turn the top right side out again.



6. Hang the HangOut so that it is touching the ground slightly.



7. Thread the six large tubes into the bottom sleeve and connect them into two half-circles, in the same way you connected the four pieces at the top.

8. Connect the two bottom half circles.



9. Insert the cushion into the bottom of the HangOut.



10. Insert the string lights battery pack into the pocket at the top of the HangOut and move the lights to the first tie.

11. Tie the light strand to the ties attached around the top of the hangout.

It is imperative that you observe all relevant instructions for installation, assembly, use, and safety. Do not exceed the maximum weight limit. Please retain these instructions for future reference.

Installation and Assembly

We recommend hanging your Family HugglePod HangOut from a stand (available for purchase separately). If hanging the Family HugglePod HangOut from a ceiling, then the suspension device must be installed by a professional. It should be suspended so that the seat is no more than 18" from the ground when occupied.

If hanging outdoors, we recommend a covered area.

Safety

The battery pack is not waterproof and should not be left outdoors for extended periods.

The Family HugglePod HangOut has a limited lifespan. Exposure to heavy loads, direct sunlight, damp weather conditions, and frequent cleaning with harsh chemicals will shorten the lifespan; therefore, we recommend bringing indoors when not in use.

Your Family HugglePod HangOut needs to be checked regularly for wear and tear. This might be evident through distinct changes in color of the fabric or in the appearance of the hanging apparatus. Immediately replace any parts that show signs of wear.

The maximum carrying capacity for the Family HugglePod HangOut is 500 lbs. Inspect the Family HugglePod HangOut prior to each use. Dispose of it if the full carrying capacity is no longer warranted.

Never leave children unattended in your Family HugglePod HangOut. Make sure that the product is not misused as a swing, gymnastics equipment, or climbing frame. Twisting should be avoided as it stresses the hanging hardware. Be aware that there is no safety belt that could prevent a child from falling out of the Family HugglePod HangOut.

This product is not suitable for children below the age of three years. Do not place a baby in the Family HugglePod HangOut.

IMPORTANT BATTERY INFORMATION

- Battery installation and removal should be performed by an adult.
- Use only batteries recommended in this instruction manual.
- Be careful to install the batteries with the correct polarity, as indicated.
Be sure to insert batteries correctly according to (+) and (-) symbol located in the battery compartment.
- Do not mix old and new batteries, remove all batteries when replacing.
- Do not mix alkaline, standard (carbon-zinc), rechargeable (nickel-cadmium), or different types of batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged and are only to be charged under adult supervision.
- Only batteries of the same or equivalent type are to be used.
- The supply terminals are not to be short-circuited.
- Always remove weak or dead batteries from the product.
- CAUTION: Do not dispose of battery in fire. Battery may explode or leak.



Battery must be recycled or disposed of properly. Do not short-circuit or dispose of in fire or landfills.

