

**PART LIST:**



2x Anchor Straps



2x 6mm Bolts



2x 8mm Bolts



4x 34mm Screws



4x 26mm Screws

**Timber Fixing:**

Drill 2mm pilot holes and use the timber screws provided screwing directly into the timber.



**Plaster Board Walls:**

Locate timber stud and follow timber fixing instructions. Plaster board walls without studs require expandable wall plugs (not supplied).



**Hard Wall Fixing:**

(Concrete or Brick)  
 Hard wall surfaces require expandable wall plugs (not supplied).



This anchor must only be fixed to a solid and secure surface. To install you will need a screwdriver, pencil and drill.  
**Note:** Hardwall/masonry and plasterboard fixings are not included, consult local hardware store for correct fixings.


**Furniture Anchor Installation**

**TV Anchor Installation**

**A.**



Each upper bracket must be fix to a strong suitable surface facing up. Mark the position of each bracket and drill pilot holes. Secure the brackets with 40mm screws. Tighten the straps till they are taught.

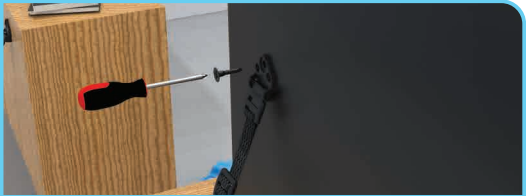

Locate the VESA mounting holes on the back of your TV. Select correct size bolts to use (details can be found in TV user manual). Place the bolt through centre bracket hole and tighten the bolts into the VESA holes on TV.

**B1.**



**B2.**



**B3.**



For wall mounting the lower bracket must be orientated opposite (180°) to upper bracket. Unlock anchor by folding the bracket (B1) release strap (B2) rotate bracket and assemble (B3).

**C.**



**Step C:**

Mark position of each lower bracket, drill pilot holes if necessary and fix with 40mm screws.




**D.**



**Step D:**

Tighten straps to finish installation.

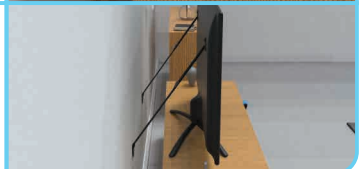

**CAUTION:** Never leave child unattended. This product is not a substitute for adult supervision. Ensure that the product is securely installed into solid furniture or timber studs in the wall. Regularly check all screws are firmly secured.