



SMARTWINGS

Remote Programming Guide

Day/Night Shade
Levitare Shade

Important Safety instructions

WARNING: To reduce the risk of severe injury or death, it is important to follow these instructions for personal safety. Save these instructions.

- Read and follow all installation instructions.
- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance. Cleaning and user maintenance should not be performed by children without supervision.
- Do not allow children to play with fixed controls. Keep remote controls away from children.
- Frequently examine the installation for imbalance and signs of wear or damage to cables and springs. Do not use if repair or adjustment is necessary.
- The drive must be disconnected from its power source during cleaning, maintenance and when replacing parts.
- The A-weighted emission sound pressure level of the drive is equal to or less than 70dB(A).
- Indoor and household use only.
- Disconnect the drive from the power supply or switch off the automatic controls when maintenance, such as window cleaning, is being carried out in the vicinity.
- When operating a biased switch, make sure that other persons are kept away.
- Do not operate when maintenance, such as window cleaning, is being carried out in the vicinity.
- The tube motor must only be supplied with safety extra low voltage corresponding to the marking on the appliance.
- This appliance contains batteries that are non-replaceable.

Cleaning

Follow these general rules when cleaning the outside of the device and its components:

Use a damp, soft, lint-free cloth. Avoid getting moisture in openings.

Do not use aerosol sprays, solvents, alcohol, or abrasives.

Service & Support


Do not perform repairs yourself. Do not attempt to open the device or disassemble it. You run the risk of electric shock and voiding the limited warranty. No user-serviceable parts are inside.

TABLE OF CONTENTS

Each Smart battery motor is factory-preprogrammed. This ensures the motor is paired with its remote, operational limits are preset, and the remote is unlocked for use.

1. Remote Overview.....	1
2. Sleep Mode.....	2
3. Adjusting Limits.....	3
4. Favorite Positions.....	4
5. Motor Pairing.....	5
6. Mirroring Remotes.....	6
7. Group Control.....	7
8. Hiding/Unhiding Remote Channels.....	9
9. Adjusting Motor Speed.....	10
10. Reset to Factory Settings.....	11
11. Initial Setup Programming.....	12
12. Reverse Motor Direction.....	18
13. Tilt Mode.....	19
14. Motor P Button Functions.....	20
15. Recharge the Battery	21
16. Troubleshooting.....	22

Remote Overview

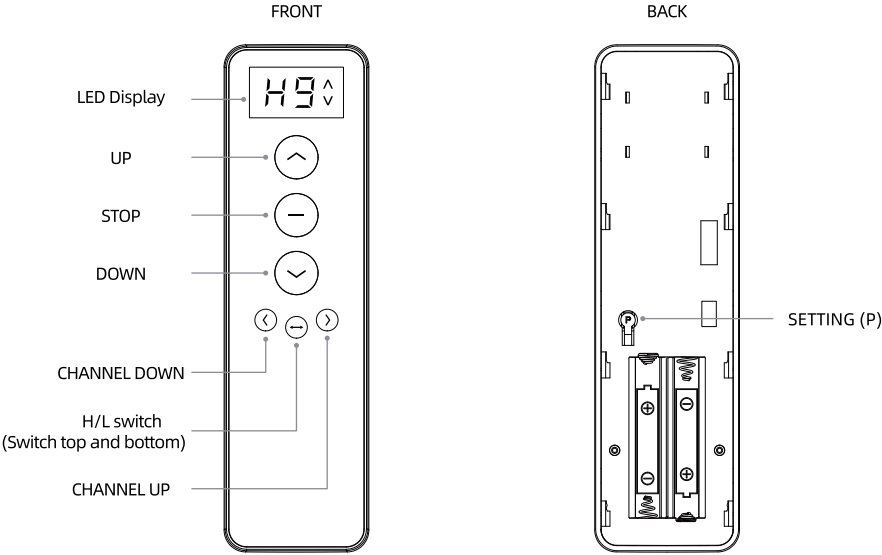

WR05-09CH

TECHNICAL SPECIFICATIONS

Voltage:	3V
Frequency:	433.92 MHz
Transmitting Power:	30 milliwatt
Ambient Operating Temperature:	-10°C - 50°C
Transmission Distance:	Approx. 65 feet in open space
Battery:	AAA

FEATURES

- Push Button controls
- Led Display
- Hide unused channels function
- Wall mount holder

PACKAGE CONTENTS

- Remote
- Wall mount holder & fixing screws
- 1.5V - AAA Battery 2 cells

Sleep Mode



Each battery motor from original manufacturer is factory-preprogrammed and set to "Sleep Mode" before shipping to prevent any unintended operation. Before setup and operation, it's essential to "Wake" the motor.

Exiting Sleep Mode

To activate the motor from "Sleep Mode", ensure it's properly installed and secured within the mounting hardware.



To awaken the motor from "Sleep Mode" after ensuring its safe and secure installation, press and hold the programming button on the motor head until the motor makes a **single jog**. The motor is now active and prepared for further configuration.

Activate Pairing Mode

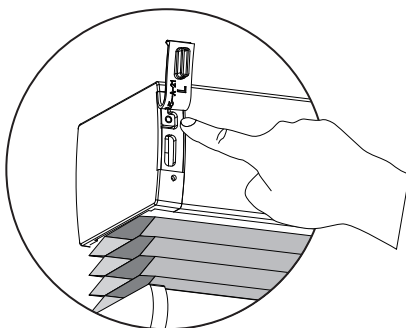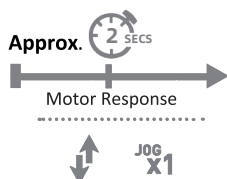

Enter Sleep Mode

To activate "Sleep Mode" when needed, press and hold the programming button for 10 seconds. Once the motor jogs **three times**, release the button. The motor is now in "Sleep Mode."

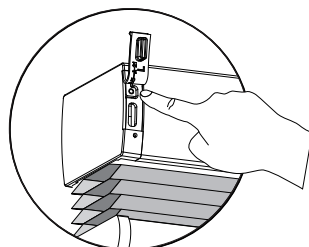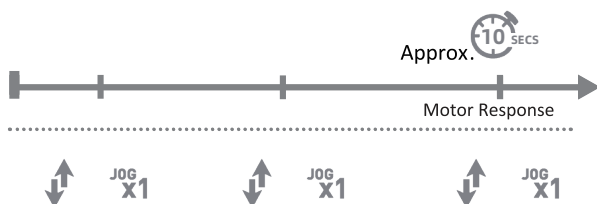

Adjusting Limits

 
Every battery motor from original manufacturer arrives preprogrammed. This includes the remote synced with the motor, preset upper and lower operational limits and an unlocked remote.

Should you need to modify the preset limits, refer to the following instructions.


ADJUSTING UPPER LIMIT

Press **UP & STOP** (5 secs)


Note: the motor jog once.



 Press the "H/L switch" button to switch between control modes. When the screen shows 'H', it is in middle rail control mode. When it displays 'L', it is in bottom rail control mode.



 Move both the middle rail and the bottom rail to the positions that you wish to set as the upper limit.




Press **UP & STOP** (2 secs)




ADJUSTING LOWER LIMIT

Press **DOWN & STOP** (5 secs)

 
Note: the motor jog once.



 Press the "H/L switch" button to switch between control modes. When the screen shows 'H', it is in middle rail control mode. When it displays 'L', it is in bottom rail control mode.



 Move both the middle rail and the bottom rail to the positions that you wish to set as the lower limit.



Press **DOWN & STOP** (2 secs)



Tips: If you hold the UP/DOWN button for more than 3 seconds, the shade will enter running mode. As the shade approaches the desired limit, press the STOP button and then fine-tune the limit.

Favorite Positions

 
Every battery motor from original manufacturer arrives preprogrammed. This includes the remote synced with the motor, preset upper and lower operational limits and an unlocked remote.

To set a favorite position, follow these steps. The favorite position allows you to designate a custom stopping point between the upper and lower limits. Note: Each shade motor supports one favorite position.

To set a preferred position for your shade motor, move to the desired spot and press the STOP button to halt its movement.


SETTING FAVORITE POSITION

1 (To Save Position)



Move the middle rail and bottom rail to the favorite position.

2 Press P (1 sec)

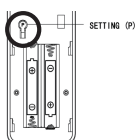

Note: the motor jogs once

3 Press STOP (1 sec)



Note: the motor jogs once

4 Press STOP (1 sec)



Note: the motor jogs twice


Press and hold STOP button for 2 seconds, the shade will stop at favorite position.

DELETING FAVORITE POSITION

1 (To Delete Position)

the shade is STOP

2 Press P (1 sec)

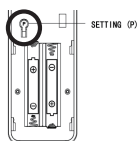

Note: the motor jogs once

3 Press STOP (1 sec)



Note: the motor jogs once

4 Press STOP (1 sec)



Note: the motor jogs once

Motor Pairing

Every battery motor from original manufacturer arrives preprogrammed. This includes the remote synced with the motor, preset upper and lower operational limits and an unlocked remote.

To select a different remote channel for pairing with the motor(s) later on, follow these steps:

1. SELECT CHANNEL

1a

Press any
button to
wake remote

1b


Within 10 secs Press
" < " or " > " to
select desired
channel.



2. PAIRING REMOTE TO MOTOR


2a ACTIVATE PAIRING MODE ON MOTOR

Press & HOLD
Programming Button
on motor head (2 secs)

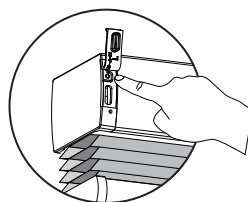

Activate Pairing Mode

Note: the motor jogs once

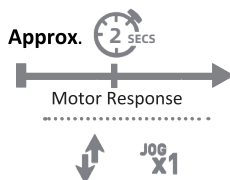

2b ADDING OR REMOVING THE REMOTE

Within 10 secs of
activating pairing mode,
Press & Hold **STOP**



Press **STOP** (2 secs)

Note: the motor jogs twice.

If you don't pair the remote within the timeframe, the motor's pairing sequence will expire. In such cases, redo the previous steps, ensuring you press and hold the STOP button within 10 seconds after the motor jog.

Mirroring Remotes

Every battery motor from original manufacturer arrives preprogrammed. This includes the remote synced with the motor, preset upper and lower operational limits and an unlocked remote.

Follow these steps to transfer settings from an existing remote to a new one.

1. SELECT CHANNEL

1a

Press any button to wake remote

1b

Within 10 secs Press "<" or ">" to select desired channel.




- Note: 1. Choose the desired channel on the current remote to duplicate.
2. On the new remote, pick the channel where you want the settings of the existing channel to be mirrored.

2. ADD OR REMOVE REMOTE USING AN EXISTING REMOTE

1


Press P (1 sec)

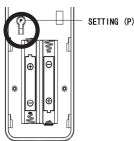

EXISTING

2


Press P (1 sec)

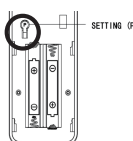

EXISTING

3

Press P (1 sec)

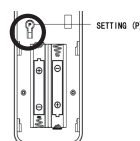

NEW
(To be Added or Removed)

Note: the motor jogs once

Note: the motor jogs once

Note: the motor jogs twice

Group Control

Every battery motor from original manufacturer arrives preprogrammed.

If you have multiple motors paired with a 15-channel remote, remember the '0' channel is set to control all motors simultaneously by default.

To set specific motors for group control on a designated channel, follow these steps:

To operate multiple motors simultaneously without switching channels, you can set up grouped channels. Ensure each motor is individually paired with its own channel on the remote before proceeding with grouping. This facilitates the synchronized operation of selected motors.

1. SELECT CHANNEL TO BE PAIRED AS A GROUP

1a

Press any button to wake remote

1b


Within 10 secs Press "<" or ">" to select desired channel.




2. PAIRING OR REMOVING MOTOR FROM A SPECIFIC CHANNEL

2a ACTIVATE PAIRING MODE ON MOTOR

Press & HOLD Programming Button
on motor head (2 secs)

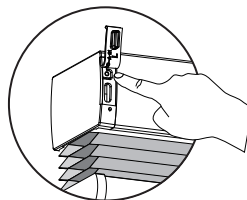

Activate Pairing Mode

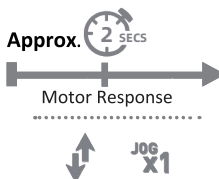

Note: the motor jogs once

2b PAIRING REMOTE

Within 10 secs of
activating pairing mode,
Press & Hold **STOP**



Press **STOP** (2 secs)

Note: the motor jogs twice.


If you don't pair the remote within the timeframe, the motor's pairing sequence will expire. In such cases, redo the previous steps, ensuring you press and hold the STOP button within 10 seconds after the motor jog.

Group Control


3. Adjust the limits to ensure that all the shades added to this channel are consistent.

When adjusting one of the shade limits, please ensure that other shades on this channel are in **sleep mode**, follow the steps below:

Press & HOLD
Programming Button
on motor head (10 secs)

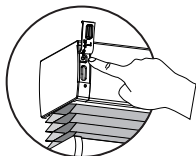

Note: The motor will jog three times. After ensuring all other shades are in sleep mode, proceed to adjust the shade limits as detailed below:

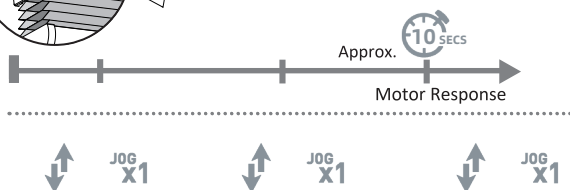

ADJUSTING UPPER LIMIT

Press **UP & STOP** (5 secs)

 
Note: the motor jog once.



Press the "H/L switch" button to switch between control modes. When the screen shows 'H', it is in middle rail control mode. When it displays 'L', it is in bottom rail control mode.



Move both the middle rail and the bottom rail to the positions that you wish to set as the upper limit.




Press **UP & STOP** (2 secs)



ADJUSTING LOWER LIMIT

Press **DOWN & STOP** (5 secs)

 
Note: the motor jog once.



Press the "H/L switch" button to switch between control modes. When the screen shows 'H', it is in middle rail control mode. When it displays 'L', it is in bottom rail control mode.



 Move both the middle rail and the bottom rail to the positions that you wish to set as the lower limit.



Press **DOWN & STOP** (2 secs)



Tips: If you hold the UP/DOWN button for more than 3 seconds, the shade will enter running mode. As the shade approaches the desired limit, press the STOP button and then fine-tune the limit.

Hide/Unhide Remote Channels

Every battery motor from original manufacturer arrives preprogrammed.

This includes the remote synced with the motor, preset upper and lower operational limits and an unlocked remote.


Follow the steps below to hide or unhide channels on the remote.

(Note: This function is exclusive to the 15CH model).

1 Hold the "←" and "→" for 2 seconds




Display Response

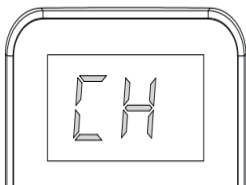


2 Press "←" or "→" to select number of channel




Display Response

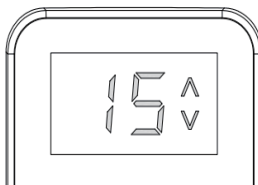

3 Press **STOP** for 1 second

 

Display Response

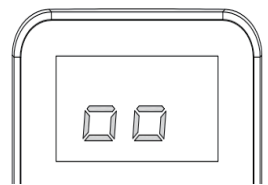


Adjusting Motor Speed

Every battery motor from original manufacturer arrives preprogrammed. This includes the remote synced with the motor, preset upper and lower operational limits and an unlocked remote.

To modify the motor speed: Ensure a remote is paired with the motor. Proceed with the following instructions to adjust speed.

To access speed adjustment settings: Remove the battery cover on the back of the remote. Press the left "P" button.

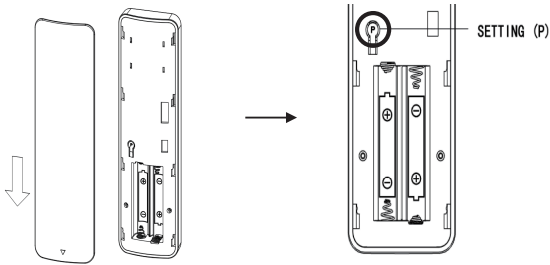

Note: the motor jogs once

To Increase speed:

Press UP:

Press UP:



IMPORTANT

If the motor doesn't respond to speed adjustments, it's already at its max or min speed limit.



Repeat



Note: the motor jogs once

Note: If the motor jogs twice, it indicates a middle speed. If it jogs three times, it signals a fast speed.

To Decrease speed:

Press DOWN:

Press DOWN:



IMPORTANT

If the motor doesn't respond to speed adjustments, it's already at its max or min speed limit.



Repeat



Note: the motor jogs once


Note: two jogs indicate middle speed, while one jog signals a low speed.

Reset to Factory Settings

Every battery motor from original manufacturer arrives preprogrammed. This includes the remote synced with the motor, preset upper and lower operational limits and an unlocked remote.

To reset the motor to factory settings and clear all pairings/limits, follow these steps:

To factory reset the motor, find the P1 button on the motor head, press and hold this button for 14 seconds until the motor jogs four times.

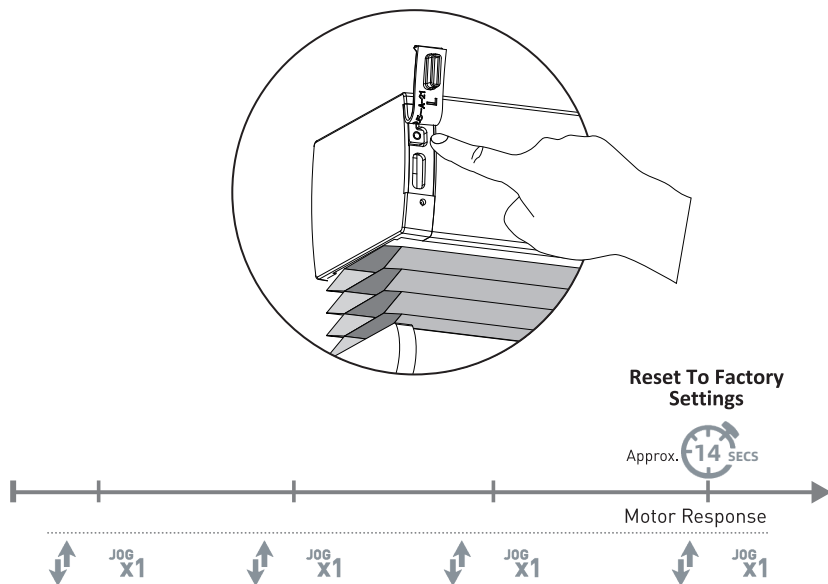

Hold the programming button until the motor jogs four times to complete the reset. Ensure the button is pressed throughout. A red LED light confirms the reset is successful.
For shade programming post-reset, refer to the Initial Setup Programming section.
(continue to page 13 - page 15)

Initial Setup Programming

1. SELECT CHANNEL

1a

Press any button to wake remote.

1b


Within 10 secs Press "**<**" **or** "**>**" to select desired channel.



2. PAIRING REMOTE TO MOTOR


2a ACTIVATE PAIRING MODE ON MOTOR

Press & HOLD
Programming Button
on motor head (**2 secs**)

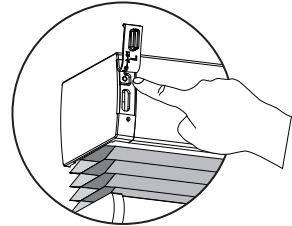

Activate Pairing Mode

Note: the motor jogs once

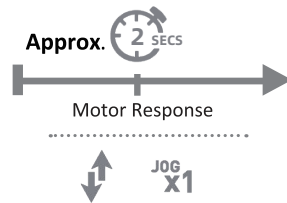

2b PAIRING REMOTE

Within 10 secs of
activating pairing mode,
Press & Hold **STOP**



Press **STOP** (2 secs)

Note: the motor jogs twice

If you don't pair the remote within the timeframe, the motor's pairing sequence will expire. In such cases, redo the previous steps, ensuring you press and hold the STOP button within 10 seconds after the motor jog.

Initial Setup Programming

3. Reverse Motor Direction If Required

REMOTE OPERATION

 
Note: This operation is only applicable when the shade limits have not been set.

To verify motor direction, briefly press the UP or DOWN button. Pause the shade by pressing STOP.



If the direction doesn't match the UP/DOWN buttons, press and hold both buttons together until the motor jogs once in each direction.

Press and Hold UP + DOWN (2 secs)



Note: the motor jogs once



Initial Setup Programming

4. Setting Limits



Warning!!!

The safe distance will be permanently saved the first time you save the upper limit/lower limit, until you restore the factory settings.

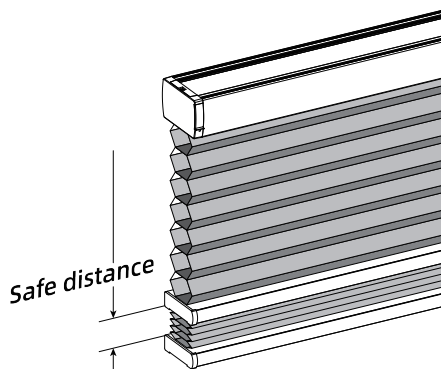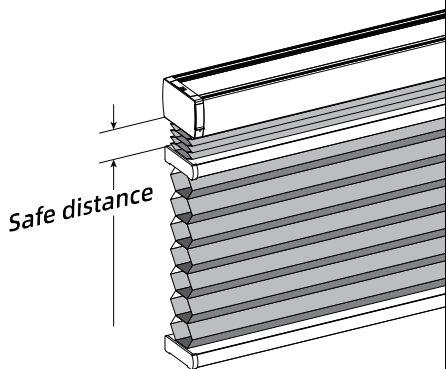

*During the limit setting mode, press UP/DOWN once, the motor will jog once, if you press and hold UP/DOWN for 2S, the motor will run continuously.


Initial Setup Programming

SET UPPER LIMIT


Method one:

Automatic limit setting when encountering obstacles.

1. Press "H/L switch" button to switch to middle rail control mode (**screen shows H**) or bottom rail control mode (**screen shows L**).

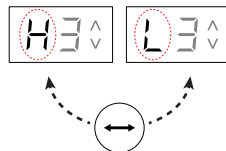


2. Middle rail: Press and hold the UP button for 2 seconds to keep the middle rail running upward until it automatically stops after touching the top.

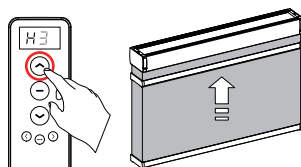

3. Bottom rail: Press and hold the UP button for 2 seconds, the bottom rail continues to run upward until it reaches the top.

The upper limit of the middle rail shade and the bottom rail shade have been saved.

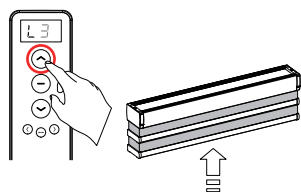


Initial Setup Programming

Method two:


Set the limit manually.

1. Press "H/L switch" button to switch to middle rail control mode (**screen shows H**) or bottom rail control mode (**screen shows L**).

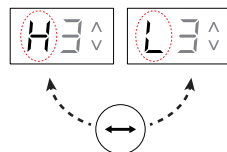


2. Middle rail: Run the **middle rail** to the upper limit position.

***Important!!** As the shade approaches the desired limit, press the Stop button and then fine-tune the limit.

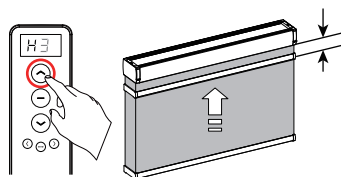


3. bottom rail: Run the **bottom rail** to the upper limit position.

***Important!!** As the shade approaches the desired limit, press the Stop button and then fine-tune the limit.

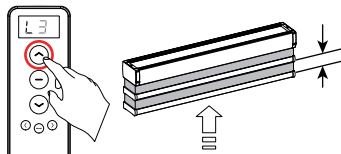

4. Press and hold UP and STOP button for 2 seconds, motor jog 2 times, the upper limit of the middle rail shade and the bottom rail shade have been saved.

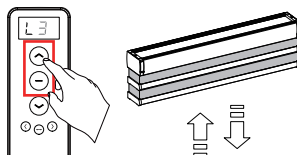


!!WARNING!! - Move shade in short increments by pressing the UP/DOWN button in 1 second intervals (pressing the UP/DOWN button for more than 3 seconds may send the shade past desired upper/lower limit and may result in damage to the product). Once you have reached the desired upper/lower limit, you can adjust the limit with either the UP and DOWN buttons. (remember to adjust in short increments !)

Initial Setup Programming


SET LOWER LIMIT

1. Press "H/L switch" button to switch to middle rail control mode (screen shows H) or bottom rail control mode (screen shows L).

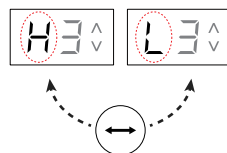


2. Bottom rail: Run the **bottom rail** to the lower limit position.

*Important!! As the shade approaches the desired limit, press the Stop button and then fine-tune the limit.

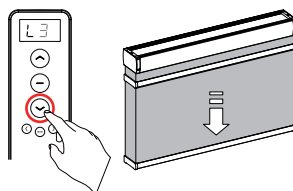


3. Middle rail: Run the **middle rail** to the lower limit position.

*Important!! As the shade approaches the desired limit, press the Stop button and then fine-tune the limit.

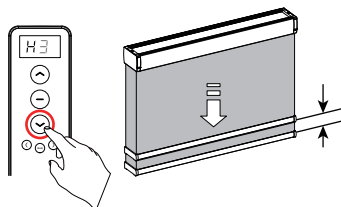


4. Press and hold DOWN and STOP button for 2 seconds, motor jog 2 times, the lower limit of the middle rail shade and the bottom rail shade have been saved.

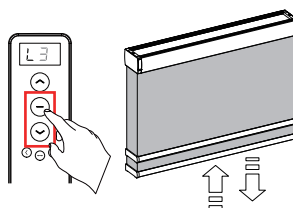

!!WARNING!! - Move shade in short increments by pressing the UP/DOWN button in 1 second intervals (pressing the UP/DOWN button for more than 3 seconds may send the shade past desired upper/lower limit and may result in damage to the product). Once you have reached the desired upper/lower limit, you can adjust the limit with either the UP and DOWN buttons. (remember to adjust in short increments !)

Reverse Motor Direction

Every battery motor from original manufacturer arrives preprogrammed.
This includes the remote synced with the motor, preset upper and lower operational limits..
Follow the steps below to reverse the motor direction:

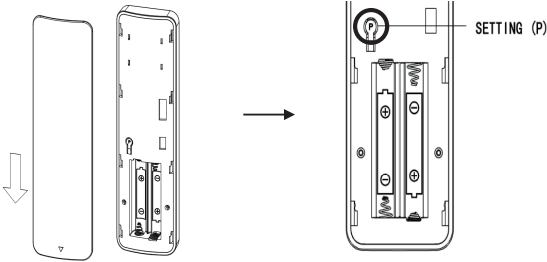


Note: the motor jogs once



Press the UP and DOWN buttons simultaneously.

Press UP + Down

 Note: the motor jogs once



Tilt Mode

Every battery motor from original manufacturer arrives preprogrammed. This includes the remote synced with the motor, preset upper and lower operational limits. To switch between tilt mode (moves an inch with each press) and running mode (moves continuously), ensure the shade limits are set and then follow these steps:

With the remote unlocked, hold UP and DOWN button on the remote for around 5 seconds, the motor will jog once.

 
After the motor jogs, press the STOP button. The motor will jog once, indicating it has entered Tilt Mode.



+



Note: the motor jogs once








Note: the motor jogs once

NOTE: To return to Running Mode, simply follow the procedure outlined above.

If tilt mode isn't activated promptly, the motor programming will time out. To reinitiate, follow the steps again, ensuring you press the STOP button within 4 seconds after the motor jogs.


Motor P Button Functions

P1 Press	Condition	Function Achieved	Visual Feedback	Audible Feedback	Function Described
Short Press	If Limit is NOT set	None	No Action	None	No Action
	If Limits are set	Operational control of motor, run to Limit Stop if running	Motor runs	None	Operational control of motor after pairing and limit setting is completed first time
	If motor is in "Sleep Mode" & Limits are set	None	No Action	None	No Action

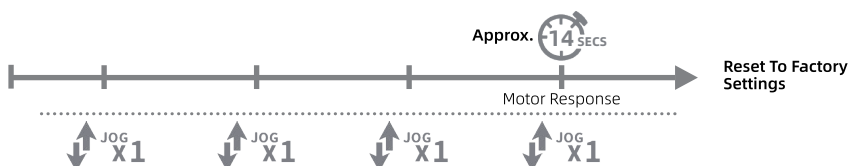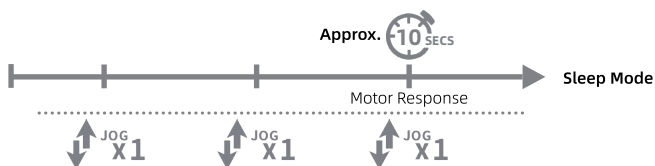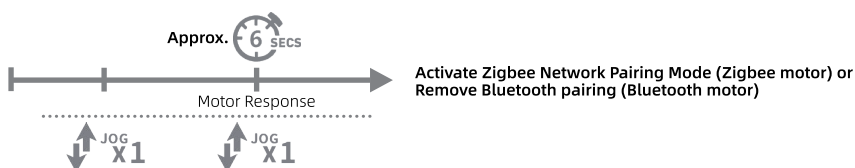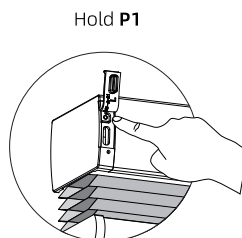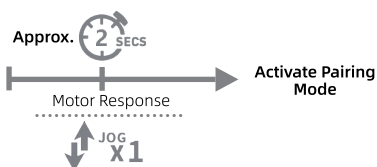


Recharge The Battery


Use a USB-C cable to charge the motor

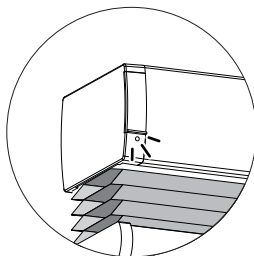

If the red LED light flashes, it indicates that the battery is low and needs to be charged promptly.

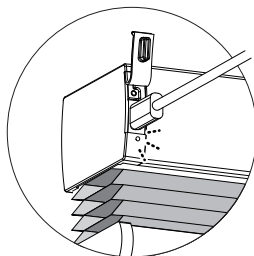


When charging, the green LED light will flash.

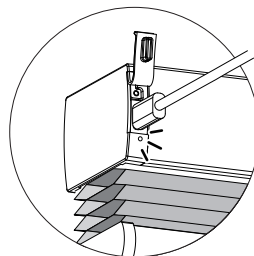


A solid green LED light indicates the battery is fully charged.

Troubleshooting


PROBLEM	CAUSE	REMEDY
Motor is not responding	Remote battery has been completely discharged	Replace battery with new 1.5V - Battery 2 cells
	Battery is inserted incorrectly	Check battery positioning
	Radio interference / Shielding	Ensure remote is positioned away from metal objects and that antenna on motor or receiver is kept straight and away from metal.
	Receiver distance is too far from remote	Move remote to a closer position.
	Power failure	Check power supply to motor is connected and active.
Can not adjust limits on a single motor (multiple motors respond)	Multiple motors are grouped onto one channel.	Disconnect power to other motors or put them in sleep mode.
Motor is no charging	Charger is not plugged in or does not work	Try a different charger or make sure the charger is plugged in the outlet

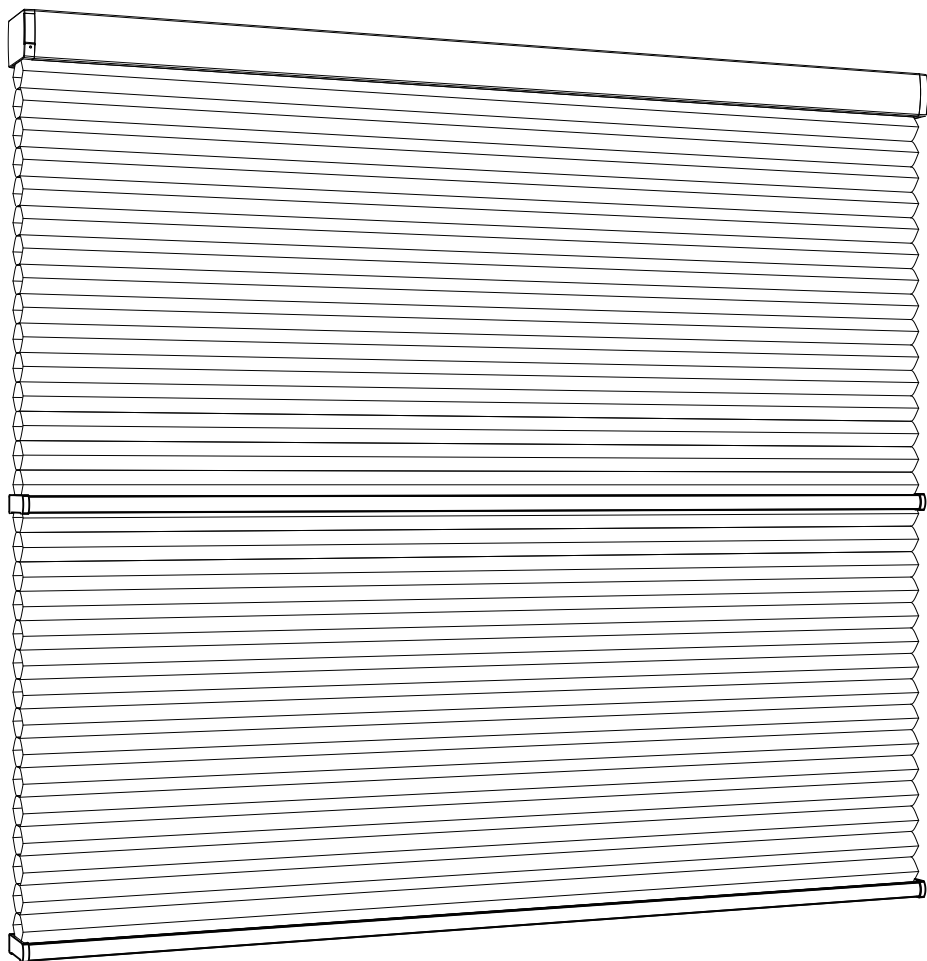

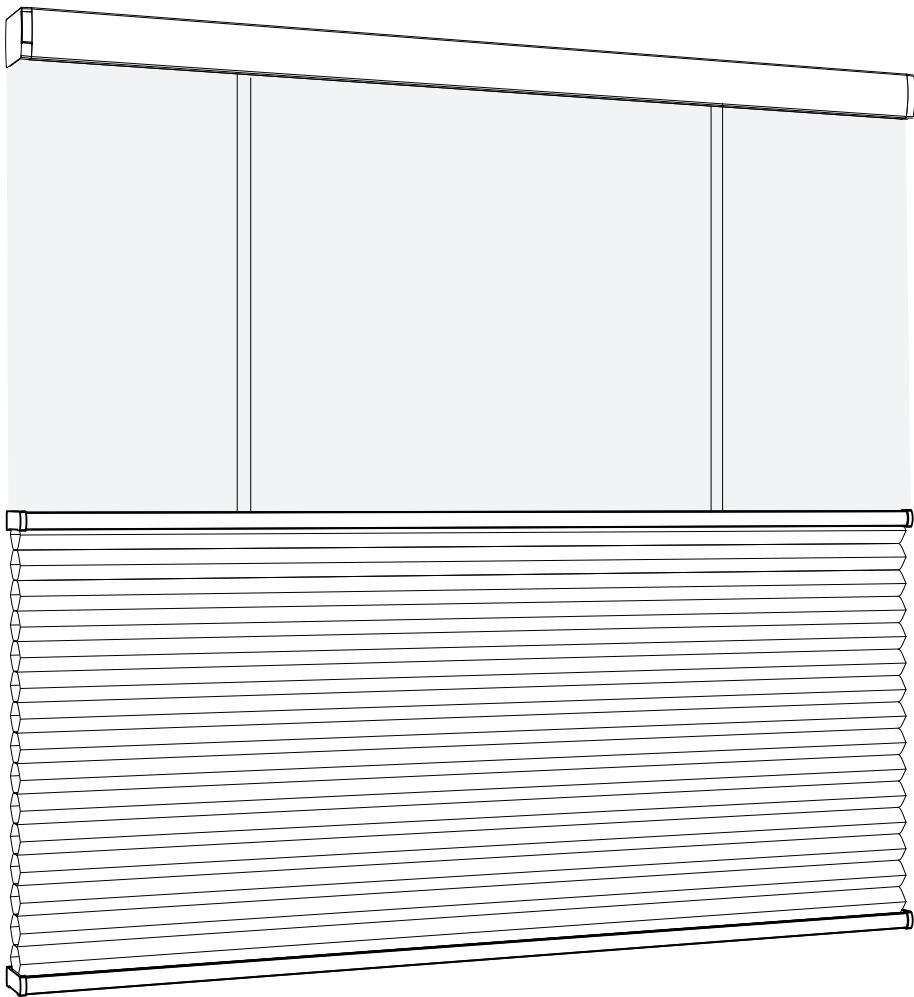



MARTWINGS

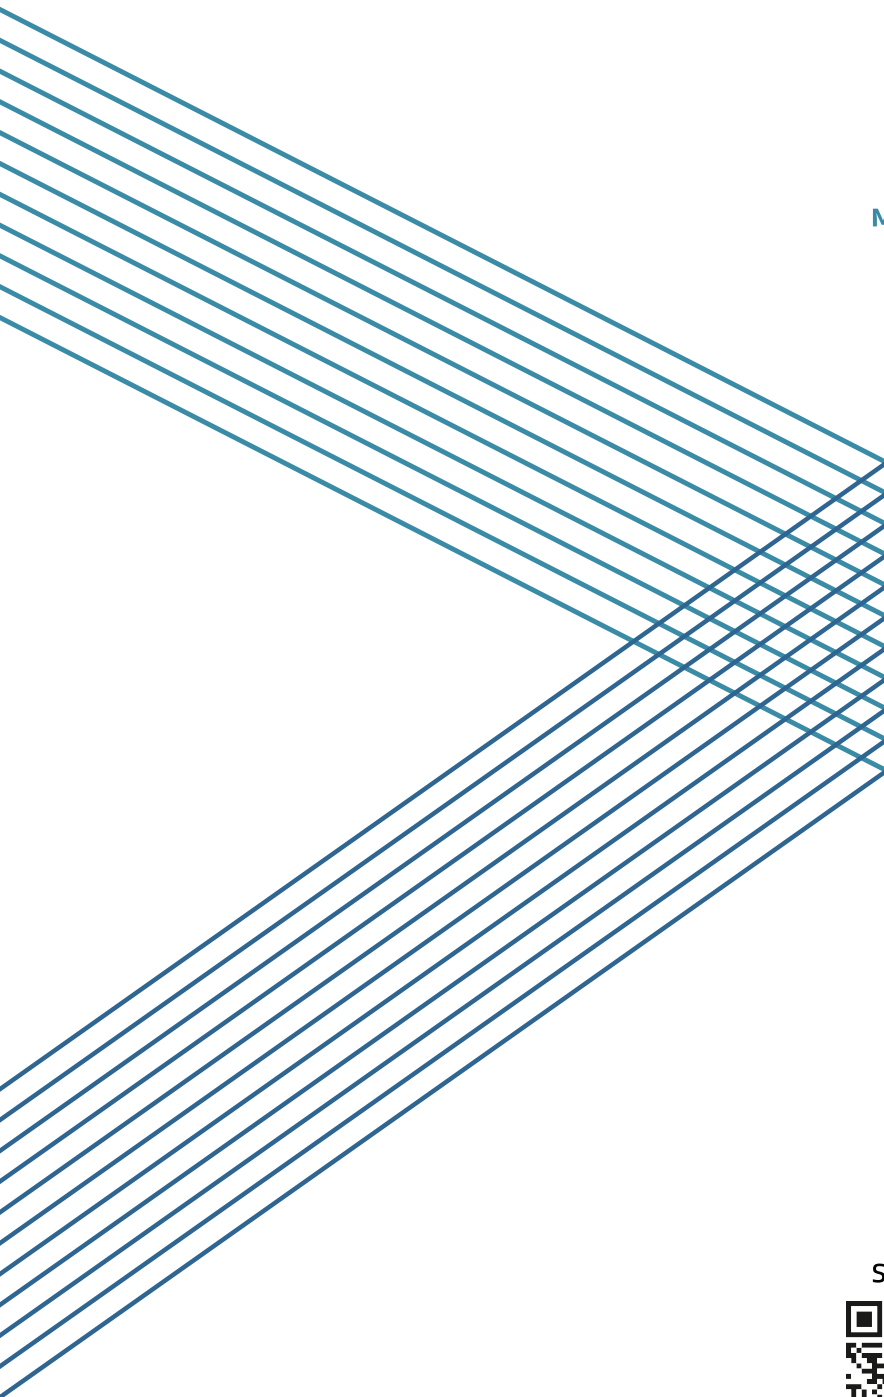

Social Media



T +1 877 762 7861
www.smartwingshome.com
support@smartwingshome.com