

# Filter Replacement Instructions XL7000



## **⚠ WARNING**

### To reduce the risk associated with choking:

- Do not allow children under 3 years of age to have access to small parts during the installation of this product.

### To reduce the risk associated with the ingestion of contaminants:

- Do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system. Systems certified for cyst reduction may be used on disinfected water that may contain filterable cysts. EPA Establishment #070595-CT-001.

## **⚠ CAUTION**


### To reduce the risk associated with property damage due to water leakage:

- Read and follow Use Instructions before installation and use of this system.
- Installation and use MUST comply with all state and local plumbing codes.
- Protect from freezing, remove filter cartridge when temperatures are expected to drop below 40° F (4.4° C).
- Ensure that the location and fasteners will support the weight of the system when installed and full of water.
- Ensure all tubing and fittings are secure and free of leaks.
- The disposable filter cartridge MUST be replaced every 6 months (XL) or 12 months (XB), at the rated capacity or sooner if a noticeable reduction in flow rate occurs.


## **INSTRUCTIONS**

1. Place towel under filter to collect any residual water during replacement filter change-out.
2. Grasp filter and turn to the left (counterclockwise) until filter comes to a complete stop (water automatically turns off). Water may leak momentarily from vent tube. This is normal. Gently pull filter downward to remove.
3. Remove sanitary protective cap from new replacement filter.
4. Ensure both o-rings are present on the replacement filter and are seated into grooves; moisten o-rings with water. DO NOT use any petroleum products to lubricate the o-rings.
5. Insert replacement filter into filter head assembly aligning downward arrow on head assembly with upward arrow at top of cartridge label. Turn replacement filter one quarter turn to the right (clockwise) until it stops.
6. When fully engaged, the top surface of the filter will be flush with the bottom of the filter head assembly. Open faucet and run water for a minimum of 10 gallons (approximately 5 minutes). While system is flushing, check for leaks. Repair any leaks as needed before continuing.
7. Close filter system faucet. System is now under pressure and can be inspected for leaks. Repair any leaks as needed before continuing.

The system is now ready for use.

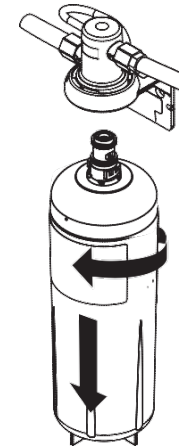

Remove Existing Cartridge

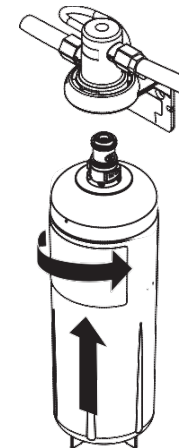

Insert New Cartridge