LYON

(WIRELESS FAST CHARGER)



MANUAL



DEAR CUSTOMER

Thank you for purchasing the **Urbanista Wireless Fast Charger**. Please read this manual carefully and follow the instructions in order to optimally make use of your new charger.



IN THE BOX

- Wireless Fast Charger 10 W
- Type-C USB cable
- User manual

PRODUCT SPECIFICATIONS

Input: DC 5 V/2 A, 9 V/1.67 A Output: DC 5 V/1 A, 9 V/1.1 A Transmission distance: \leq 8 mm Conversion rate: \geq 75 %

INSTRUCTIONS

1. Connect the wireless fast charger to a power source

To start charging, connect the Type-C USB cable to the wireless fast charger, and the other end of the cable to a power supply.

2. LED status indicator functions

LED off - standby LED blue - charging

LED green - device fully charged

3. Charge your device

Place your device on the charging surface. During charging, the blue LED indicator will be on. When the device is fully charged, the LED indicator will turn green.

IMPORTANT: The output of the wireless charger may differ depending on the power source and the wall charger used.

The wireless charger is compatible with all wireless-charging-enabled, QI-standard devices and accessories.

Please read these safety warnings and cautions carefully to ensure your personal safety and prevent property damage.

WARNING

Fire and Electric Shock Hazard

- Do not expose your Urbanista Lyon to liquid, moisture, humidity, or rain. Do not use the Urbanista Lyon near a bathtub, sink, sauna, pool, or steam room. Exposing of the Urbanista Lyon to moisture could result in electric shock.
- Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, incinerate, paint, or insert foreign objects into the Urbanista Lyon. Such actions could result in electric shock.
- . Clean the Urbanista Lyon only with a dry cloth.
- Do not expose your Urbanista Lyon to extremely high or low temperatures.
- Do not expose your Urbanista Lyon to sources of excessive heat, such as sunlight, fire etc. Do not place your Urbanista Lyon near open fire sources, such as gas burners, candles or fireplaces, and avoid contact with direct solar radiation. Do not place any candles or other open-flame sources on the device.
- . Make sure that the Urbanista Lyon has sufficient ventilation.

CAUTION

- Do not use abrasive cleaners to clean your Urbanista Lyon because this could cause scratches and damage.
- . Do not push the power indication button with excessive force.
- . Clean the Urbanista Lyon only with a soft dry cloth.
- Do not bring your Urbanista Lyon into contact with any sharp objects because this could cause scratches and damage.
- Do not insert anything into your Urbanista Lyon unless otherwise specified in the user instructions. Doing so may damage the internal components.
- Do not attempt to repair, modify, or disassemble your Urbanista Lyon yourself, it does not contain any user-serviceable components.
- Observe all signs and warnings that require electrical devices or RF radio products to be switched off in designated areas.
- Turn off your Urbanista Lyon prior to boarding an aircraft. Do not use the Urbanista Lyon inside an aircraft unless allowed to do so by your airline.



The crossed-out wheelie bin symbol means that the product must be disposed of separately in the European Union. These products must not be disposed of with unsorted household waste.



Urbanista declare under our sole responsibility, that the product Urbanista Lyon Wireless Fast Charger, conforms with the provisions according to directive 2014/53/EU.



HRRANISTA AR



Mäster Samuelsgatan 10, 111 44 Stockholm, Sweden

support@urbanista.com www.urbanista.com



Made in China

Specifications subject to change without notice.

URBANISTA AB

MÄSTER SAMUELSGATAN 10 111 44 STOCKHOLM, SWEDEN

SUPPORT@URBANISTA.COM WWW.URBANISTA.COM

