

# **KitchenAid**

## **STAND BLENDER 5KSB40\*\* OWNER'S MANUAL**

EN	Owner's Manual	2
DE	Bedienungsanleitung	11
FR	Le manuel d'utilisation	21
IT	Manuale del proprietario	32
NL	Gebruikershandleiding	40
ES	El manual del propietario	49
PT	Manual do proprietário	58
EL	Εγχειρίδιο Κατοχού	67
SV	Användarhandbok	77
NO	Brukerhåndbok	85
FI	Omistajan Opas	93
DA	Brugervejledning	101
IS	Notandahandbók	109
RU	Руководство Пользователя	117
PL	Instrukcja Obsługi	135
CS	Uživatelská Příručka	144
TR	Kullanıcı Kilavuzu	152
UK	Посібник з експлуатації	160
AR	دليل المالك	1

# PRODUCT SAFETY

## Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean:

**⚠ DANGER**

**You can be killed or seriously injured if you don't immediately follow instructions.**

**⚠ WARNING**

**You can be killed or seriously injured if you don't follow instructions.**

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

## IMPORTANT SAFEGUARDS

**When using electrical appliances, basic safety precautions should always be followed, including the following:**

1. Read all instructions. Misuse of appliance may result in personal injury.
2. European Union only: Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
3. European Union only: This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

## PRODUCT SAFETY (CONTINUED)

5. Children should be supervised to ensure that they do not play with the appliance.
6. To protect against risk of electrical shock do not put the Stand Blender Base in water or other liquid.
7. Turn the appliance OFF (0), then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
8. Avoid contacting moving parts.
9. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest Authorised Service Facility for examination, repair, or electrical or mechanical adjustment.
10. Do not use outdoors.
11. Do not let cord hang over edge of table or counter.
12. Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the Blender. A scraper may be used but must be used only when the Blender is not running.
13. Never leave the appliance unattended while it is in operation.
14. Blades are sharp. Care should be taken when handling the sharp cutting blades, emptying the jar and during cleaning.
15. Be careful if hot liquid is poured into the Blender as it can be ejected out of the appliance due to sudden steaming.
16. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
17. Allow the appliance to cool completely before putting on or taking off parts, and before cleaning the appliance.
18. Refer to the “Care and Cleaning” section for instructions on cleaning the surfaces in contact with food.
19. Always operate the Blender with cover in place.
20. When blending hot liquids or ingredients, Lid Centre Cap should remain in place over the lid opening. Always start on lowest speed and slowly ramp to desired speed when blending hot liquids or ingredients.

## PRODUCT SAFETY (CONTINUED)

21. Do not blend hot liquids and ingredients in the Personal Jar or Small Batch Jar.
22. To reduce the risk of injury, never place Blade Assembly on the base without Personal Jar or Small Batch Jar properly attached.
23. This appliance incorporates an earth connection for functional purposes only.
24. Flashing light indicates ready to operate - avoid any contact with blades or moveable parts.
25. The use of accessories/attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
26. This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices, or other working environments;
  - farmhouses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments.

## SAVE THESE INSTRUCTIONS

For complete details on product information, instructions and videos, including Guarantee information, visit [www.KitchenAid.co.uk](http://www.KitchenAid.co.uk) or [www.KitchenAid.eu](http://www.KitchenAid.eu). This may save you the cost of a service call. To receive a free printed copy of the information online, call **00 800 381 040 26**.

### MOTOR HORSEPOWER

---

Motor horsepower for the Blender Motor was measured using a dynamometer, a machine that laboratories routinely use to measure the mechanical power of motors. Our 1.5 peak horsepower (HP) motor reference reflects the horsepower output of the motor itself and not the Blender's horsepower output in the Blender Jar. As with any Blender, the power output in the jar is not the same as the horsepower of the motor itself.

# PRODUCT SAFETY (CONTINUED)

## ELECTRICAL REQUIREMENTS

### ⚠ WARNING



#### Electrical Shock Hazard

**Plug into an earthed outlet.**

**Do not remove earth prong.**

**Do not use an adapter.**

**Do not use an extension cord.**

**Failure to follow these instructions can result in death, fire, or electrical shock.**

**Voltage:** 220-240 VAC

**Frequency:** 50-60 Hz

**NOTE:** If the plug does not fit in the outlet, contact a qualified electrician. Do not modify the plug in any way. Do not use an adapter.

Do not use an extension cord. If the power supply cord is too short, have a qualified electrician or service technician to install an outlet near the appliance.

The power rating of your Stand Blender is printed on the serial plate.



The maximum rating is based on the attachment that draws the greatest load (power). Other recommended attachments may draw significantly less power.

## BLENDER FUNCTION GUIDE

It features variable speeds (from 1 to 5) and Pulse ( P ) function to customize blending. Also, pre-programmed recipe settings like, Ice Crush (🧊), Icy Drink (🍷) and, Smoothie (🥤) are designed to deliver optimal results. Use the self-cleaning cycle (🌀) after blending for easy clean up. We encourage you to experiment to find the best speed for your favourite recipes.

SETTING	DESCRIPTION	BLENDING TIME (MIN:SEC)
<b>PULSE</b> P	Allows precise control of the duration and frequency of blending.	Manual
<b>VARIABLE SPEEDS</b> 1-5	Manual speeds offer ultimate control of the Blender.	3:00
<b>ICE CRUSH</b> 🧊	The Blender runs at optimal speed to crush ice.	00:30
<b>ICY DRINK</b> 🍷	Gradually ramp up to full power to blend hard foods.	00:30

# BLENDER FUNCTION GUIDE (CONTINUED)

SETTING	DESCRIPTION	BLENDING TIME (MIN:SEC)
<b>SMOOTHIE</b> 	The Blender will operate at the high speed to make purées of items or ingredients.	00:45
<b>CLEAN</b> 	Quick pulses of power and high speeds work to clean the Blender jar.	00:13

## BLENDER ACCESSORY GUIDE

ACCESSORIES	CAPACITY	SPEED
<b>BLENDER JAR</b>	1.6 L	All speeds, Pulse, and Preset recipes.
<b>GLASS BLENDER JAR</b>	1.4 L	
<b>PERSONAL JAR</b>	0.5 L	
<b>SMALL BATCH JAR</b>	0.2 L	
<b>CITRUS PRESS</b>	1 L	Speed 1


## PRODUCT USAGE

Before first use, clean all parts and accessories (see “Care and Cleaning” section). Be sure the countertop beneath the Blender and surrounding areas are dry and clean.

**IMPORTANT:** When moving your Blender, always support/lift from Blender Base. Base will become disengaged from jar if carried by Blender jar or Blender jar handle only.

### **WARNING**

#### Electrical Shock Hazard



**Plug into an earthed outlet.**

**Do not remove earth prong.**

**Do not use an adapter.**

**Do not use an extension cord.**

**Failure to follow these instructions can result in death, fire, or electrical shock.**

- Add ingredients into Jar (max. 1.6 L or 1.4 L for Glass Jar). Secure the Lid and Lid Centre Cap.
- Place and align the Jar with the Slot to fit inside the jar pad, facing Jar handle towards Control Dial.  
Plug the Blender into an earthed outlet.
- Turn from (O) to desired speed or preset recipe program. Press (▶|⊗) to start. See “Blender Function Guide” for more details.

# PRODUCT USAGE (CONTINUED)

- When finished, press (▶|⊙) to stop. Unplug before removing the Blender Jar.  
**NOTE:** For variable speeds (from 1 to 5), the Blender will stop automatically after 3 minutes of run time. For preset recipe program, the Blender will automatically stop blending once the cycle is complete.
- Pulse mode:** Press (▶|⊙). Turn and hold the Control Dial from (O) to (P) as per desired interval of time.

When finished, release the Control Dial to stop.

- Tamper accessory\*:** Remove the Lid Centre Cap only. Stir or press contents down towards the blade. Then, place the Lid Centre cap back before resuming blending.

**NOTE:** If blending hot liquids and ingredients, start on a low speed and then ramp up to the desired speed. Use variable speed and run for 1-2 minutes.

**IMPORTANT:** Allow the Blender to fully stop before removing the Lid, Blender Jar, or pouring out blended ingredients.

## CARE AND CLEANING

### USING THE CLEAN FUNCTION

---

**IMPORTANT:** Allow the appliance to cool completely before putting on or taking off parts, and before cleaning the appliance.

- Fill half of the Jar with warm water and add 1 or 2 drops of dish-washing liquid. Place the Jar on the base. Secure the Lid and Lid Centre Cap.
- Turn from (O) to (Ⓢ). Press (▶|⊙) to start. When cycle ends, remove the Jar and empty contents and rinse with warm water and dry thoroughly.  
**NOTE:** Do not immerse the Blender Base or Cord in water. Do not use abrasive cleansers or scouring pads to avoid scratching.
- Unplug the Blender before cleaning. Wipe clean the Base, Power Cord and the Gear Assembly of the Citrus Press with a warm, damp cloth and dry with a soft cloth.
- Dishwasher-safe, top rack only:** Personal Jar, Small Batch Jar, Lids, Blade Assembly, Reamer, Juice Container, Pulp Basket and Lid Centre Cap, Tamper\*. Blender Jar and Glass Jar can also be washed in the bottom rack.

## ELECTRICAL EQUIPMENT WASTE DISPOSAL

### DISPOSAL OF PACKING MATERIAL

---

The packing material is recyclable and is marked with the recycle symbol ♻️. The various parts of the packing must therefore be disposed of responsibly and in full compliance with local authority regulations governing waste disposal.

\*Available as an optional accessory.