

# OUTDOOR WOOD FIRED OVEN


## OWNER'S MANUAL

### ASSEMBLY & OPERATING INSTRUCTIONS



#### WARNING

READ AND FOLLOW ALL SAFETY WARNINGS AND INSTRUCTIONS IN THIS MANUAL TO AVOID PERSONAL INJURY OR PROPERTY DAMAGE.

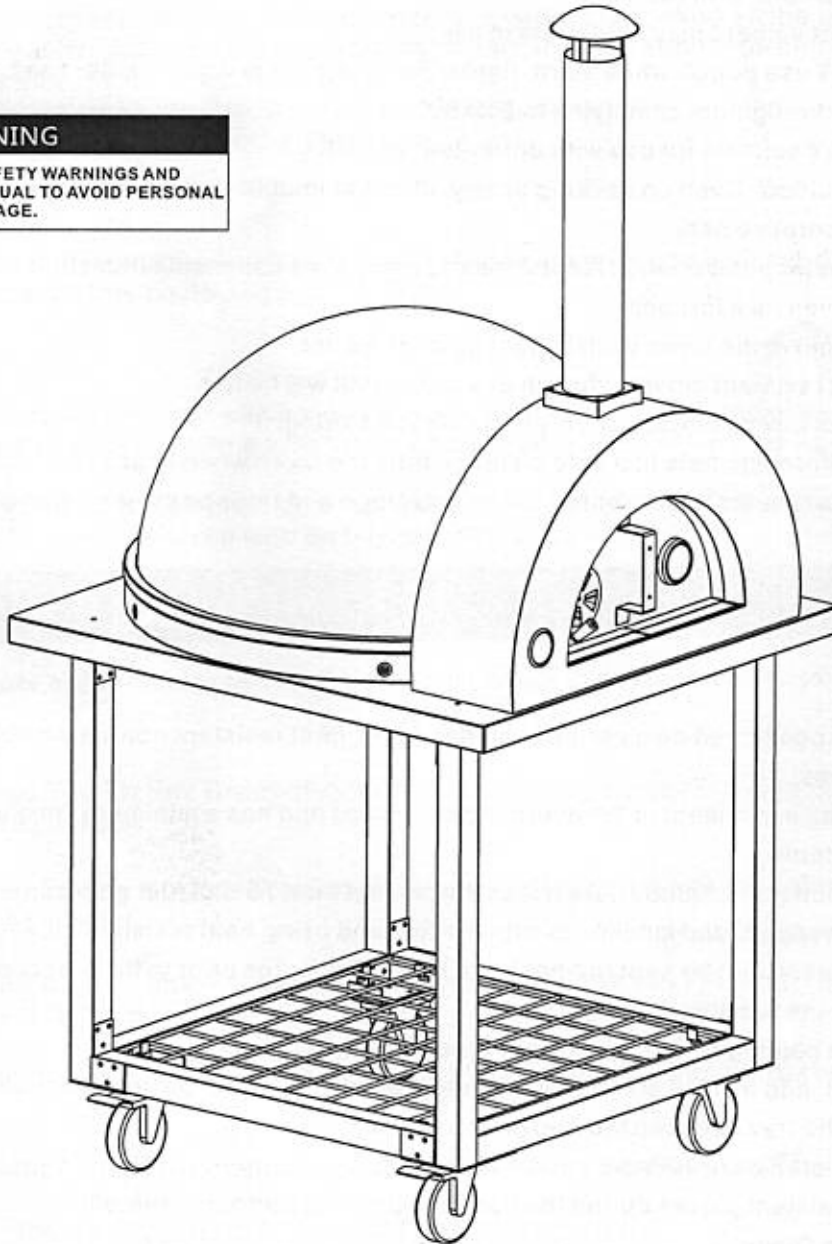

#### User Instructions - Please keep for future reference

**IMPORTANT** – Carefully remove any packaging before use, but retain the safety instructions.

These instructions form part of the product.

Please take note of all of the safety warnings listed in these instructions.

Please read these instructions in their entirety and retain them for future reference.

These instructions should be stored with the product.

This product is for outdoor using.

# Care and safe use guidelines

## WARNINGS – CAUTION!

- This product is intended **FOR OUTDOOR USE ONLY**.
- **NEVER** leave a burning fire unattended.
- **DANGER** of carbon monoxide poisoning – **NEVER** light this product or let it smoulder or cool down in confined spaces.
- **DO NOT** overload the unit with fuel.
- **FIRE HAZARD** – Hot embers may emit while in use.
- **CAUTION - DO NOT** use petrol, white spirit, lighter fluid, alcohol or other similar chemicals for lighting or relighting. Use only firelighters complying to EN1860-3!
- This product is **ONLY** suitable for use with untreated wood, logs.
- **DO NOT** use this Outdoor Oven on decking or any other flammable surfaces such as dry grass, wood chips, leaves or decorative bark.
- Ensure that the Oven is positioned at least 2 meters away from flammable items.
- **DO NOT** use this Oven as a furnace.
- **DO NOT** handle or move the Oven whilst alight as it will be hot.
- **ALWAYS USE** heat resistant gloves when in use as the unit will be hot.
- Allow the unit to cool down completely before moving or storing.
- **ALWAYS** keep children and pets at a safe distance from the Oven when in use.
- Always inspect the unit prior to use for fatigue and damage and replace as and when necessary.

## POSITIONING, LIGHTING, USAGE AND CARE INFORMATION

- Ensure the Oven is positioned on a permanent, flat, level, heat resistant non-flammable surface away from flammable items.
- Ensure the Oven has a minimum of 2m overhead clearance and has a minimum 2m clearance from other surrounding items.
- Place untreated wood into Chamber. Do not use more fuel than 75% of fuel area capacity.
- Place rolled up newspaper and kindling in with the fuel and using heat resistant gloves, light the fuel.
- Allow the fuel to heat up and be kept red hot for at least 25 minutes prior to the first cooking on the Oven.
- Do not cook before the fuel has a coating of ash.
- Once the fuel has a coating of ash, place your food onto the oven.
- To keep meat moist, add a small amount of water to a small foil tray, separate the coals in the lower fuel section and place the tray between the fuel prior to lighting.
- Air flow can be adjusted as required.
- Always use heat resistant gloves during the handling process and when refuelling.
- Do not overload the Oven.
- The Oven can be washed using a mild detergent. They are not suitable for dishwasher use
- The Oven will develop soot on the underside – this may be difficult to remove and should be expected. It is not a fault and will not affect use.
- The Oven surface will age and develop surface rust when placed outdoors and from first use. This is to be expected, it is not a fault and will not affect use.

# Care and safe use guidelines

## FOOD COOKING INFORMATION

- Please read and follow this advice when cooking.
- Always wash your hands before and after handling uncooked meat and before eating.
- Always keep raw meat away from cooked meat and other foods.
- Before cooking ensure Oven&Grill surfaces and tools are clean and free of old food residues.
- **DO NOT** use the same utensils to handle cooked and uncooked foods.
- Ensure all meat is cooked thoroughly before eating.
- **CAUTION** – eating raw or under cooked meat can cause food poisoning (e.g. bacteria strains such as E.coli).
- To reduce the risk of under cooked meat cut open to ensure it is cooked all the way through.
- **CAUTION** – if meat has been cooked sufficiently the meat juices should be clear and there should be no traces of pink/red juice or meat colouring.
- After cooking always clean the grill, cooking surfaces and utensils.
- **DO NOT** cook until your fuel has a coating of ash.

## EXTINGUISHING

- To extinguish the unit – stop adding fuel and allow fire to die or douse with sand for Grill.
- **DO NOT** use water as this could damage the Oven.

## STORAGE

- When not in use, cover the Oven with a suitable waterproof cover once completely cooled.
- Remove loose paint and rust with a wire brush when needed and re-paint using High Temperature Paint.
- This product will start to develop surface rust when placed outdoors. This is to be expected. To reduce surface rust, rub the Oven with an oily rag after use.

# Assembly Instructions

**IMPORTANT** - Remove any packaging before use, but retain the safety instructions and store them with this product.

## ASSEMBLY

**STEP 1** - Attach two Top Trolley Bracket (5) to two Trolley Supports (7) using 6 bolts (A) per side – 24 bolts(A) in total

**STEP 2** - Attach two Trolley Bottom Bracket (6) to two Trolley Supports (7) using 6 bolts (A) per side – 24 bolts(A) in total

**STEP 3** - Attach Table (4) to already assembled trolley sections (5&7) using 1 bolts (B) per side -- 4 bolts(B) in total

**STEP 4** - Feed 4 wheels(9) to the bottom of the 4 trolley sections(7) using 16x bolts (C) and 16x nuts(C)

**STEP 5** - Place Bottom Shelf (8) to already assembled trolley sections (6&7)

**STEP 6** - Attach Chimney cap(1A) to Chimney(1) using 3x bolts(A)

**STEP 7** - Insert the Chimney (1) to the pre-drilled hole on the Oven Body(2)

**STEP 8** - Fix 4x handles to pre-drill holes at the side of the oven body(2)

**STEP 9** - Place the Oven Body(2) to the already assembled trolley

**STEP 10** - Place the Oven Door (3) to the Oven (2)

**The Oven is now ready to use but please ensure you have read these instructions thoroughly prior to use.**

## Parts list

No.	Part Name	Quantity	No.	Part Name	Quantity
1A	Chimney cap	1	7	Trolley support	2
1	Chimney	1	8	Bottom shelf	1
2	Oven body	1	9	Wheel	4
3	Oven door	1	10	Handle	4
4	Table	1	A	M5 bolt	51
5	Trolley bracket	2	B	M6 bolt	4
6	Trolley bracket	2	C	M8 bolt / M8 nut	16 / 16

Prior to assembly, read the instructions carefully. Check all parts against the parts list. Carry out assembly on a soft surface to avoid scratching the paint. Please retain this information for future reference. For ease of assembly only loosely tighten bolts and then tighten fully when assembly is complete.

**WARNING - DO NOT** over tighten bolts; only tighten with moderate pressure to avoid damaging the bolts or components of the Grill.

## Assembly diagram

