

 babybee

noa convertible high chair



**IMPORTANT! READ CAREFULLY
AND KEEP FOR FUTURE REFERENCE**

[babybeeonline.com](https://www.babybeeonline.com)

Complies with AS 4684:2009 and EN14988:2017



**Congrats, you've just
joined the NOA club!**



The very important stuff

Before we start, there's a few important things you need to be aware of:

Safety first

The safety of your family is our number one priority. Please take the time to carefully read this manual and all warning notices on page 4-5 before getting started. Incorrect assembly or use can result in serious injury or even death.

WARNING

This high chair is intended for use for children who are able to sit up unaided and up to an age of 3 years or a maximum weight of 15 kg. The high chair can be converted and used as a toddler seat which is suitable from 3 to 5 years of age.

Return Policy

If you decide that the **NOA Convertible High Chair** is not the perfect fit for your family, we offer a Free Return Policy when returned in original condition and packaging (with no signs of usage). Please be mindful of this when unboxing and setting up. Refer to our website for full terms and conditions.

Support

If at any stage you require assistance with set up or use, please refer to the NOA product page on our website. There, you'll find instructional videos and FAQs. Or feel free to email us anytime at:
au.support@babybeeonline.com
or **nz.support@babybeeonline.com**

Buon appetito! From all of us at



Safety Warnings

This Babybee NOA convertible high chair is tested to comply with AS 4684:2009 and EN14988:2017 safety requirements.

Please read and follow the below warning notices before using your high chair:

⚠ WARNING

FOLLOW THE MANUFACTURER'S INSTRUCTIONS.

DO NOT LEAVE CHILDREN UNATTENDED.

THE HARNESS MUST ALWAYS BE USED AND CORRECTLY FITTED - MOST INJURIES FROM HIGH CHAIRS ARE CAUSED BY FALLS.

POSITION THE HIGH CHAIR AWAY FROM SOLID STRUCTURES AND BENCHES TO AVOID INJURIES CAUSED BY FALLS AND BY ACCESS TO DANGEROUS ITEMS.

- This high chair requires adult assembly.
- Do not to use this product until your child can sit up unaided.
- This high chair is intended for use for children who are able to sit up unaided and up to an age of 3 years or a maximum weight of 15kg.
- This product should only be used in an upright position once your child is capable of reliably and consistently sitting upright.
- Always use the restraint system of this high chair.
- Use this high chair on a flat, even and horizontal floor and do not elevate the high chair on any structure or table.
- To reduce the risk of injury, position high chair away from furniture, walls, hot surfaces and liquids, window covering cords, and electrical cords.
- Position the high chair away from furniture when the chair is not being used at a table with a tray removed.
- Do not use the high chair unless all components are correctly fitted and adjusted.
- Do not use the high chair if any part is broken, torn or missing.
- Do not use the high chair if it is not working correctly. Seek repair advice from Babybee only.
- Falling hazard: Prevent your child from climbing on the product.
- Do not lift or carry the high chair when a child is in it.
- Take care when adjusting the tray to avoid finger or skin entrapment.
- Be aware of the risk of open fires and other sources of strong heat in the vicinity of the high chair.


- Be aware of the risk of tilting when your child can push their feet against a table or any other structure.
- When high chair is not in use, store away from children.
- Ensure you follow the maintenance and cleaning instructions as included in this instruction manual and care labels on the product.
- Ensure you are regularly inspecting all screws and fittings to make sure they are secured tightly.
- Any additional harness other than the one provided by the manufacturer, shall comply with EN 13210.
- The toddler chair is designed to be used by children aged 3 - 5 years.



Contents

- 4.** Safety Warnings
- 7.** Features & components
- 8.** What's in the box?
- 10.** Assembling the cross-brace
- 11.** Installing the legs
- 12.** Installing the footrest
- 13.** Attaching the seat
- 13.** Installing the crossbar support
- 14.** Handy harness tips
- 18.** Assembling & installing the tray
- 20.** Converting to toddler chair
- 22.** Maintenance tips
- 23.** Warranty

Features & Components

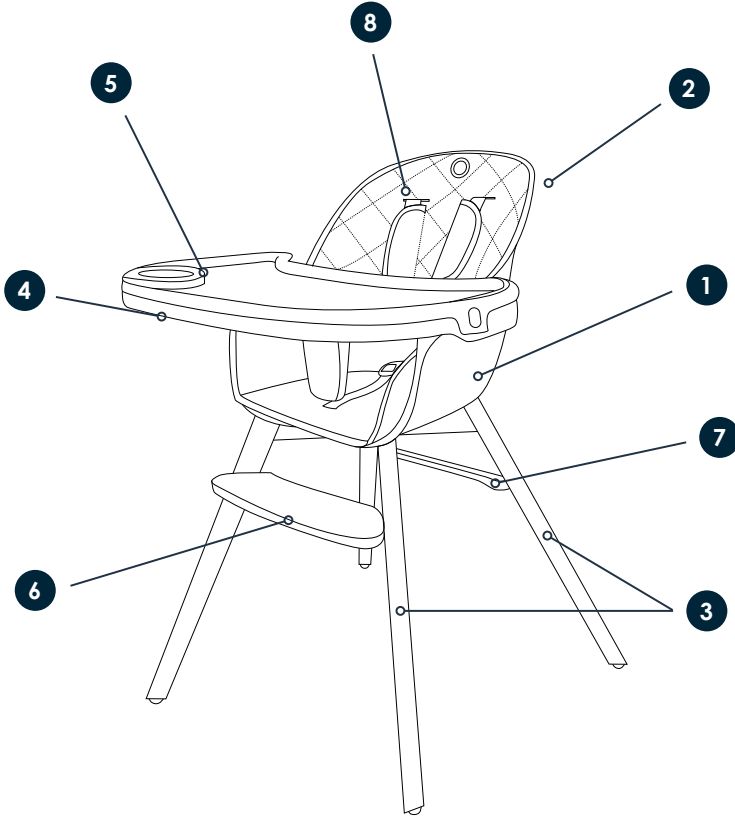

- | | |
|---------------|--------------------------------|
| 1. Seat | 5. Top Easy-Clean Tray |
| 2. Seat Liner | 6. Footrest |
| 3. Legs | 7. Support Crossbar |
| 4. Base Tray | 8. Harness with Harness Covers |

What's in the box?











Please check that you have all the correct parts before getting started.

- 1 x Seat **(A)**
- 1 x Seat Liner **(B)**
- 2 x Cross Brace Bars **(C)**
- 4 x Legs **(D)**
- 1 x Harness with Harness Covers **(E)**
- 1 x Footrest **(F)**
- 1 x Support Bar **(G)**
- 1 x Base Tray **(H)**
- 1 x 2nd easy-clean tray with cup holder **(I)**
- 4 x Bolt Nuts **(J)**
- 2 x Support Bar Screws **(S1)**
- 3 x Footrest & Crossbrace Screws **(S2)**
- 4 x Seat Screws **(S3)**
- 4 x Leg Screws **(S4)**
- 1 x Big Allen Key Tool **(K)**
- 1 x Small Allen Key Tool **(L)**
- 4 x Toddler Chair Legs **(M)**
- 4 x Foot Stopper **(N)**



**Handy
Hint!**

**You will also need a flat head screwdriver
to assist in your set up**

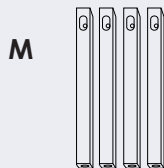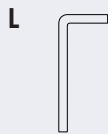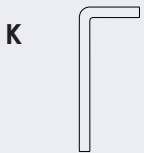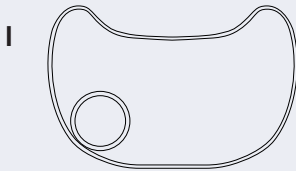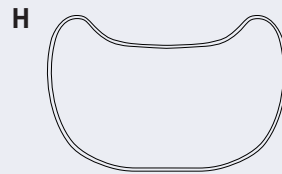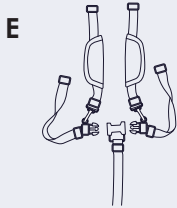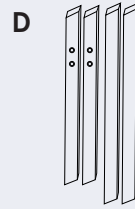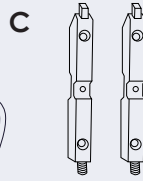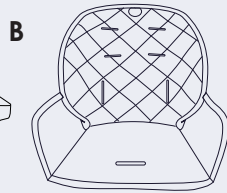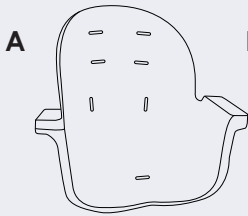


Let's get this high chair good to go!

1. Assemble the cross-brace for underneath the seat



1a

Slot the **cross-brace bars (C)** together using the notches in the centre of each piece

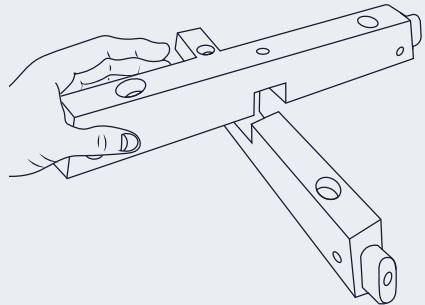

1b

Secure pieces together in the centre hole by using **screw (S2)** and the **small allen key (N)** ensuring you put the screw in from underneath as below

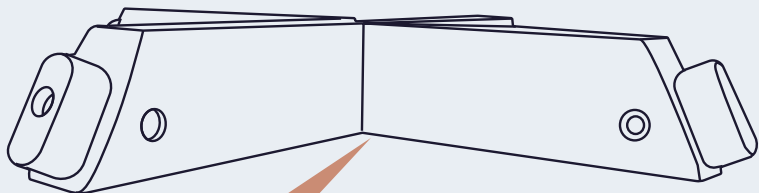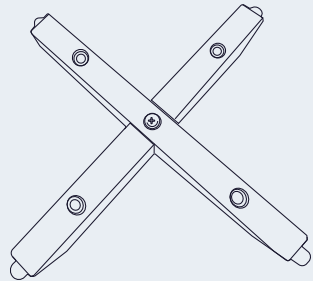

2. Install the high chair legs



Handy Hint!


The legs with the holes in the side are the front legs - this is where the footrest will attach. These must be next to each other.

2a


Before continuing, flip the cross brace back the right way so that the screw is facing the ground.

2b

Before proceeding with attaching the legs, ensure the **bolt nuts (K)** are in the correct starting position as below.

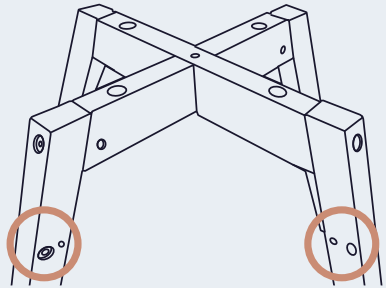

The hole in the side of the **bolt nut (K)** needs to be facing towards the screw hole so the screw can go through it.

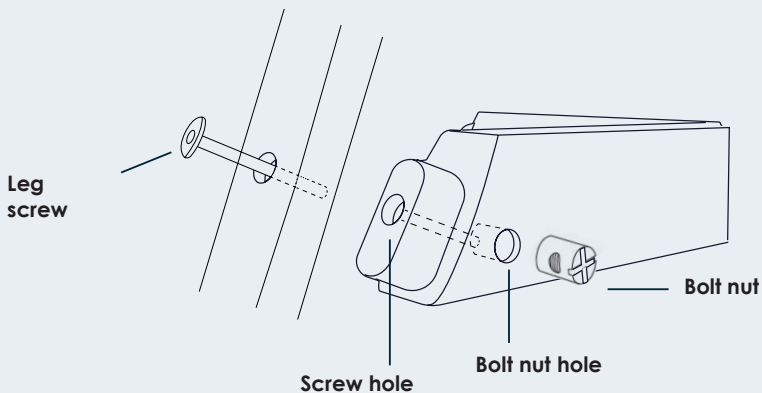

2. High chair legs cont.

2c



Align the top of each **leg (D)** with one end of the **wooden cross brace (C)** put together in Step 1.

Using a flat head screwdriver, insert the **bolt nut (K)** into the bolt nut hole in the side of the leg. Insert the connecting **leg screws (S4)** into the screw hole and tighten using the **small allen key (N)**.

2d

Only loosely tighten the bolts in the front legs.

Screw the four **black feet stoppers (L)** into the bottom of each leg.

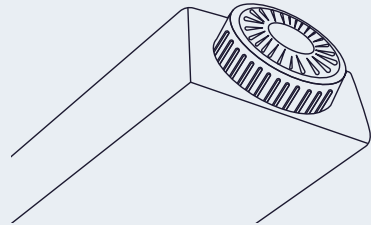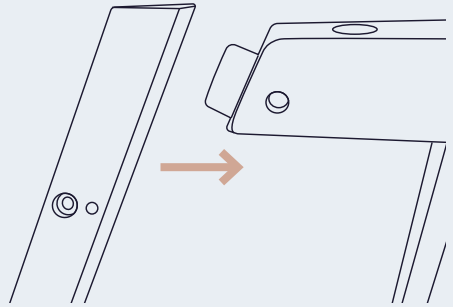

3. Installing the footrest

3a



Line up the **footrest (F)** with the smaller holes in the sides of the front legs.

3b

Attach using **screws (S2)** through the holes in the back of the front legs and the **small allen key (N)**.

3c


Once the footrest is secure, you can fully tighten the screws in the front legs.

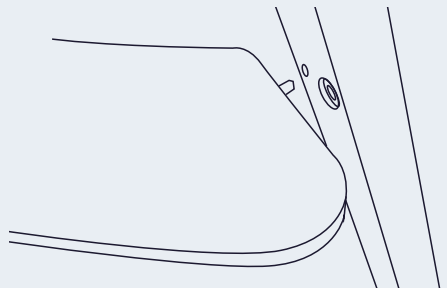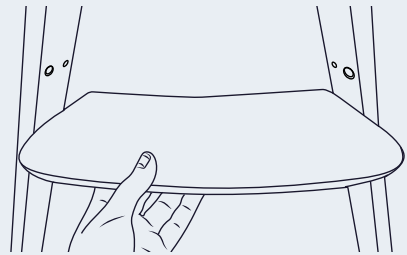

4. Attaching the seat


IMPORTANT! The seat liner and harness will come semi-attached to the seat. You will need to slip the back flap of the seat liner over the back of the seat and check that all 5 ends of the harness are correctly fitted through the seat liner AND the plastic seat before continuing on with your set-up.

- 4a Fix the **seat (A)** to the base by aligning the holes in the underside of the seat with the holes in the top of the cross brace.
- 4b Turn the seat and legs on their side and secure them using the **seat screws (S3)** and the **big allen key (M)**.

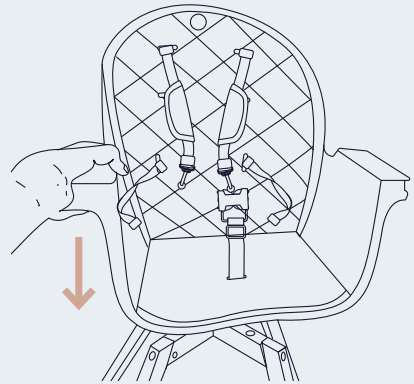


Handy Hint!

Ensure the respective holes on seat base and cross brace are aligned.

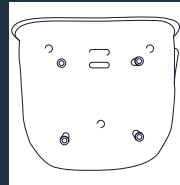

5. Installing the crossbar support


- 5a Turn the high chair upside down.
- 5b Align the holes in the back legs with the holes in the **plastic support bar (G)** and secure with the **smallest screws (S2)** and the **small allen key (N)**.

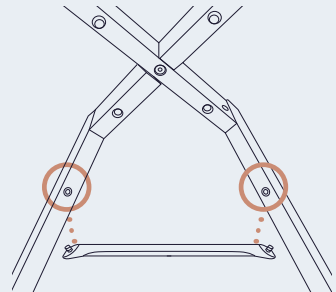

Handy Harness Tips


1. Securing the harness

- 1a** Place your child in the NOA seat and place their arms through the shoulder straps.
- 1b** Pull up the crotch harness strap and clip both waist strap clips into the centre buckle on the crotch strap.
- 1c** This will make a loud 'click' when secured.

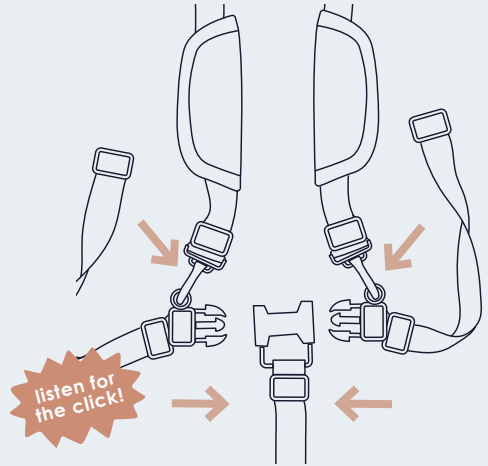

2. Undoing the harness


- 2a** Simply push down on the side clips in the centre buckle as shown below and pull out from the centre buckle.
- 2b** Your NOA includes a pair of harness covers to ensure the harness sits comfortably on your child.
- 2c** These come already attached to the harness but can be easily removed by sliding them off the shoulder straps.

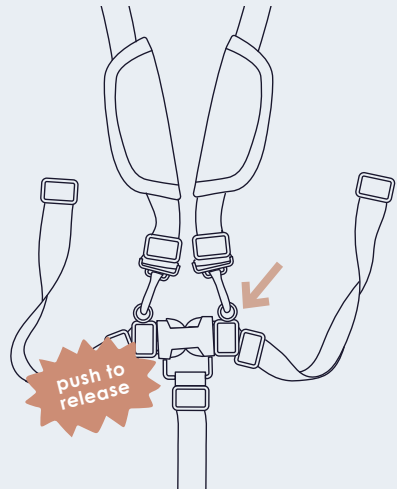

3. Adjusting the harness

3a

The harness straps can be adjusted to suit the size of your child.

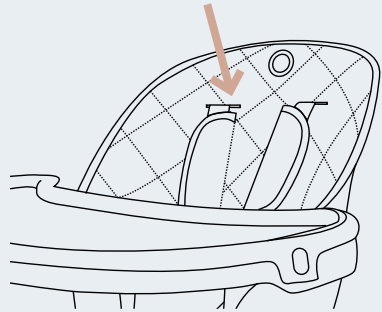


3b

Depending on your child's height, thread the shoulder strap through the appropriate slot on the seat and seat liner.

3c

Adjust the strap length using the buckle on each strap as required to shorten or lengthen.

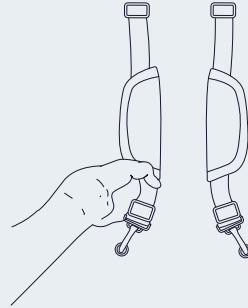

⚠ WARNING

THE HARNESS MUST ALWAYS BE USED AND CORRECTLY FITTED - MOST INJURIES FROM HIGH CHAIRS ARE CAUSED BY FALLS.

4. Removing the harness

- 4a** To remove the harness, simply thread each strap back through the slot in the seat and seat liner.




Handy Hint!

Slide the harness straps through at an angle to help them slip through the slots in the plastic seat.

5. Inserting the harness

- 5a** Place the **seat liner (B)** onto the **seat (A)** ensuring the flap of the seat liner sits over the back of the seat.
- 5b** Thread the crotch harness strap through the slot in the base of the seat liner and the corresponding slot in the bottom of the seat.
- 5c** Thread the waist harness straps through the vertical slots in the side of the seat liner, then through the corresponding vertical slots in the seat.
- 5d** Thread the shoulder harness straps through the slots in the backrest of the seat liner, then through the corresponding slots in the back of the seat. Shoulder harness position will be dependent on the height of your child.

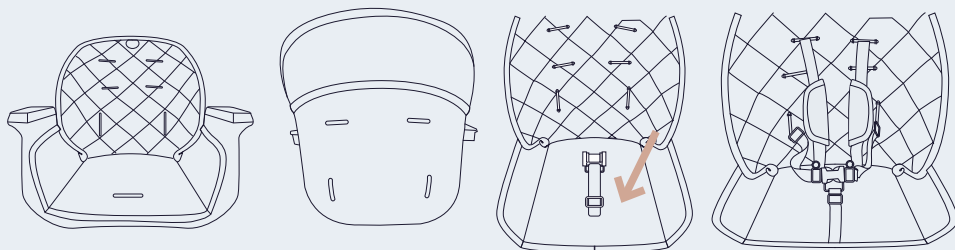




Assembling & installing the tray


1

To install the tray on the high chair, pull the release lever that is located underneath the front of the tray and slide it into the grooves in the arms of the high chair.

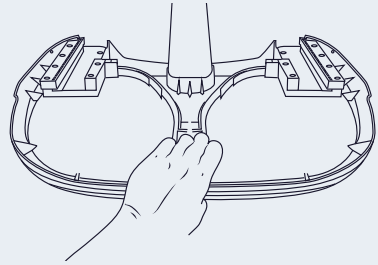


2

The tray can be adjusted to two-positions simply by pulling the release lever and sliding the tray to the desired position, hearing it click into place on the armrests.

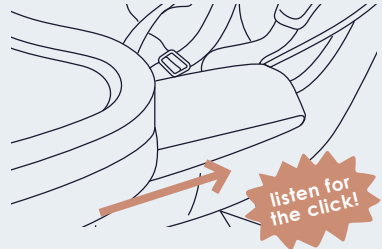

3

The NOA comes with a double tray for easy cleaning.

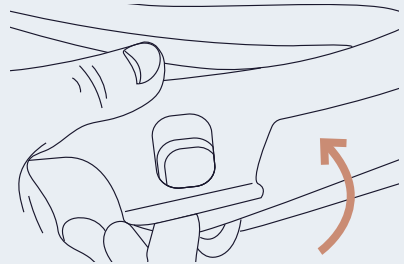


4

To remove the top tray, simply lift and pull the flap on either side of the top tray whilst holding down the bottom tray. It should unclip and easily lift off the base tray.

5

To attach the top tray back onto the base tray, simply align the holes in either side of the top tray with the plastic circles on the side of the base tray and push down until you hear a 'click'.

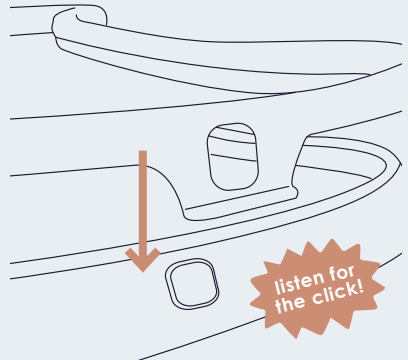



Handy Hint!

Always use the top tray during meal times to maintain the clean appearance for the lifetime of your NOA. Refer to the detailed care instructions on page 22.

⚠️ WARNING

TO AVOID FINGER ENTRAPMENT, KEEP YOUR CHILDREN'S FINGERS CLEAR OF BOTH TRAYS WHEN ADJUSTING OR REMOVING

⚠️ WARNING


ENSURE ALL SCREWS ARE FULLY TIGHTENED BEFORE USING THE HIGH CHAIR.




Converting to toddler chair

Three claps for your little one! They've graduated from high chair life and are ready to take a seat in their toddler chair.

- 1 Remove the tray from the high chair.

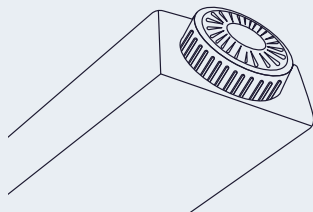


- 2 Unscrew the **black foot stoppers (L)** from the bottom of each of the high chair legs and screw onto the bottom of each of the shorter toddler chair legs.

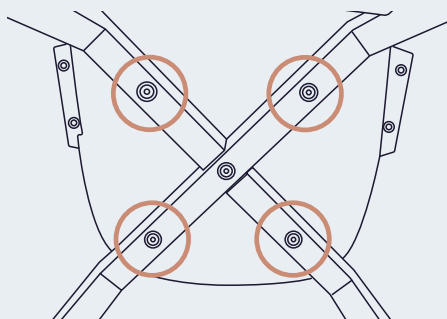


- 3 Using the **large allen key (M)**, unscrew the screws from underneath the seat connecting to the cross brace unit. Place the screws aside in a safe place.

Once the seat is removed, you will also need to unscrew the high chair legs from the wooden cross brace. Using the **small allen key (N)**, unscrew the screw in each leg, making sure you also remove the bolt nuts from each hole. You may need to use a screw driver to do this. Place them aside.

- 4

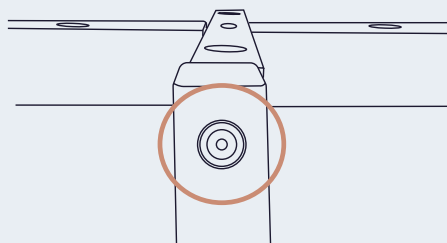


- 5 Align the top of each **toddler leg (O)** with one end of the wooden cross brace.

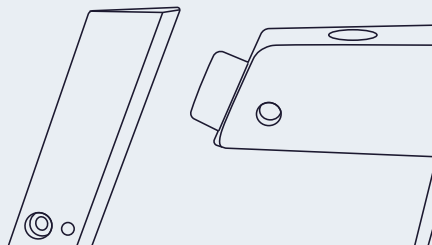


Using a flat head screwdriver, insert the **bolt nut (K)** into the bolt nut hole in the side of the toddler leg. Insert the connecting **leg screws (S4)** into the screw hole and tighten using the **small allen key (N)**.

6

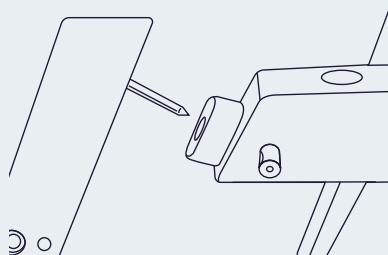

Fix the **seat (A)** to the base/legs by aligning the holes in the underside of the seat with the holes in the top of the cross brace.

7

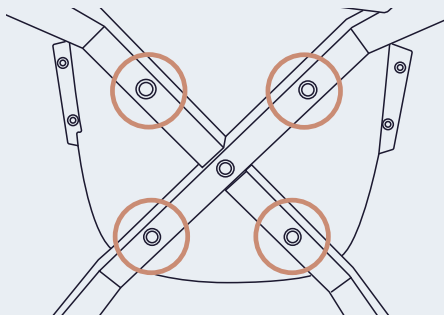


Turn the seat and legs on their side and secure them using the **seat screws (S3)** and the **big allen key (M)**.

8

Your toddler chair is all set up and ready to go!

9

Reminder: the toddler chair is suitable for children aged 3 - 5 years.

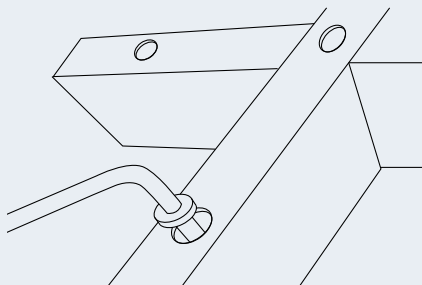

⚠ WARNING

DO NOT USE THE TRAY ONCE CONVERTED TO LOW TODDLER CHAIR

Keeping your NOA in tip-top shape

Keep your NOA in good working condition and ensure that it lasts as long as possible with regular maintenance.

Regular maintenance should include:

Inspecting all parts regularly, screw tightness, buckles, and fixtures to ensure they are secure, moving freely and in fully working order.

Accessories and Replacement Parts

Do not use parts or accessories that are not approved for use with the Babybee NOA Convertible High chair. Doing so may be unsafe and may also void your warranty.

Cleaning Instructions

- Sponge clean plastic high chair seat and trays with warm water and a mild detergent.
- The seat liner and harness covers are removable and should only be wiped clean with a damp cloth.
- The harness can be machine washed in a delicates bag.
- Do not rub excessively.
- Air dry in shade thoroughly before reuse and avoid direct heat and sunlight.
- Do not bleach.
- Do not iron.
- Do not dry clean.
- Ensure the product is fully dry before use or storage.
- Never clean any part of the high chair with abrasives, ammonia based, bleach based or spirit type cleaners.
- Always ensure the high chair is stored in a dry place to prevent mould or mildew developing.
- Store away from any heat sources and direct sunlight.
- It is best to always wipe up any food mess as soon as possible to minimise any discolouration.

Warranty Information

Your convertible high chair comes with a 2 year defects warranty to cover against faults in materials and workmanship when your high chair is used under normal conditions, according to our user manual and technical specifications.

The benefits under our warranty are in addition to other rights and remedies under the law in relation to consumer goods: Our goods come with guarantees that cannot be excluded under Consumer Law in the country of purchase. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The warranty period starts from the date that your high chair is dispatched from our warehouse and is valid in the country of purchase only.

To make a claim email us at: **au.support@babybeeonline.com** or **nz.support@babybeeonline.com** with a detailed description, video and/or photos of the defect and a photo of the batch number. Our warranty team will then determine the best way to resolve any defects or faults. Babybee reserves the right to repair, exchange or replace the damaged item with a replacement part. Some parts may be replaced with newer model parts as the high chair is improved over time.

The warranty is not valid in the following cases:

- Defects or faults resulting from improper assembly, care or use as outlined in our user manual;
- Defects or faults resulting from an accident, airline or transport damage;
- Normal wear and tear, including scratches or colour fading of the fabrics;
- Damage to parts or fabrics (i.e. scuffs, tears, wear to stitching) as a result of normal handling and daily use;
- Corrosion, mould or rust due to lack of regular maintenance;
- Products that are purchased second hand or from an unauthorised distributor;
- Using a part or accessory that is not compatible with the product and/or not manufactured by Babybee;
- If you or a third party has attempted to modify or repair the product without having received written permission from Babybee;
- Claims from anyone other than the original purchaser (i.e. no longer valid if gifted or sold to another individual);
- Customer dissatisfaction with the product in terms of fit, weight, functionality, colour or design.



Designer style.
Unbeatable value.



Babybee prams



babybeeprams



au.support@babybeeonline.com

nz.support@babybeeonline.com

Model: **NOA Convertible High Chair**. Version: 1 - Dec 2021. Information subject to change. Please see website for current version.

[babybeeonline.com](https://www.babybeeonline.com)