



# LOLA ROCKER

---

PRODUCT MANUAL

---

IMPORTANT! READ CAREFULLY  
AND KEEP FOR FUTURE REFERENCE

**The Babybee LOLA is designed and tested to comply with:** BS EN 12790:2009  
and AS/NZS ISO 8124-1: 2019; AS/NZS ISO 8124-2: 2016; AS/NZS ISO 8124-3: 2021

# CONTENTS

3. Safety warnings
5. What's in the box?
6. Setting up your rocker
7. Using your rocker
8. Adjusting the recline position
9. Using the toy bar
10. Removing the seat fabric
11. Maintenance instructions
12. Warranty information

**Read all instructions before assembling and using the product**

# SAFETY FIRST

**The Babybee LOLA rocker is tested to comply with BS EN 12790:2009.**

**The Babybee LOLA toys are tested to comply with AS/ NZS ISO 8124-1: 2019, AS/ NZS ISO 8124-2: 2016 and AS/ NZS ISO 8124-3: 2021 safety requirements.**

Please read and follow the below warning notices before using your rocker:

## **WARNING**


- This rocker requires adult assembly.
- Never leave the child unattended.
- Do not use the rocker once your child can sit unaided.
- This rocker is not intended for prolonged periods of sleeping.
- It is dangerous to use the rocker on an elevated surface, e.g. a table or couch.
- Always use the restraint system.
- Never use the toy bar to carry the rocker.
- This rocker does not replace a cot or a bed. Should your child need to sleep, then they should be placed in a suitable cot or bed.
- Do not use the rocker or toys if any components are broken or missing.
- Do not adjust the rocker position while a child is in it.
- Do not lift or carry the rocker when a child is in it.
- Do not use the rocker if it is not working correctly. Seek repair advice from Babybee only.
- Do not use accessories or replacement parts other than those approved by Babybee.
- Take care when adjusting the rocker to avoid finger or skin entrapment.
- When the rocker is not in use, store away from children.

# SAFETY FIRST

- Always position the rocker away from any potential hazards, e.g. heaters or curtain cords.
- Always attach all provided fasteners (strings, straps, clamps, etc.) tightly to the rocker according to the instructions and check frequently.
- Do not add additional strings or straps to attach the toys to the rocker.
- To prevent possible strangulation or injury by entanglement, remove the toys when the child starts trying to get up on its hands and knees in a crawling position.

# WHAT'S IN THE BOX?

Please check that you have all the correct parts before getting started.

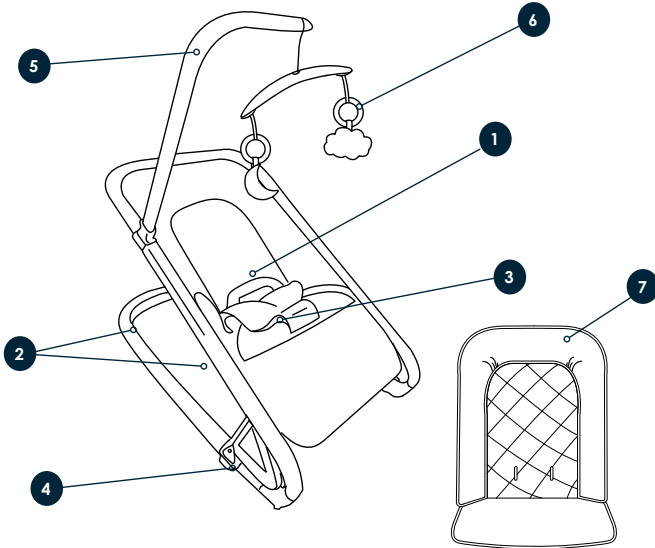




- |                      |                   |
|----------------------|-------------------|
| 1. Seat              | 5. Toy bar        |
| 2. Frame             | 6. Toys           |
| 3. Harness           | 7. Newborn insert |
| 4. Triangular struts |                   |

# SETTING UP YOUR ROCKER

**1** Take your rocker out of the box and place on a flat, even surface.

**2** Lift the backrest and maintain elevation with one hand.

**3** While maintaining the back rest height, rotate both the left and right triangular struts outwards, clicking them into place on the frame with a firm press.

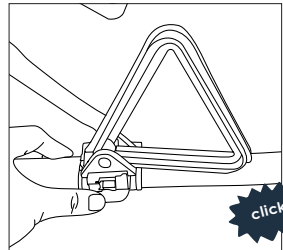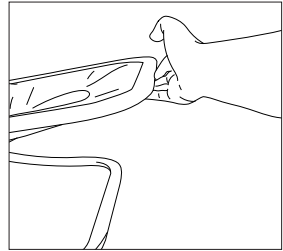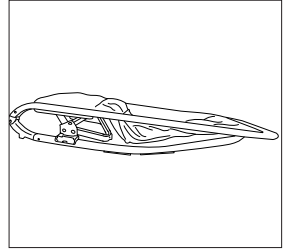

**Note:** Your rocker comes with an organic cotton insert to help ensure your new bub is cosy and comfortable when seated.

# USING YOUR ROCKER

**1** If using the insert, it will come threaded with the harness, ready to go!





**2** Place bub in the rocker and secure the harness by connecting the buckle and the waist straps found on either side as shown.

The harness waist straps are adjustable to suit your child. To adjust, simply pull and slide the buckle tongue along the length of the strap. **3** Ensure the straps are nice and snug before rocking by pulling the adjustor straps.

To undo the harness and release the waist straps, simply squeeze the buckle tongue's prongs together on either side of the buckle. **4**

## **⚠️ WARNING**


- ALWAYS USE THE RESTRAINT SYSTEM
- TAKE CARE WHEN ADJUSTING THE HARNESS TO AVOID FINGER ENTRAPMENT

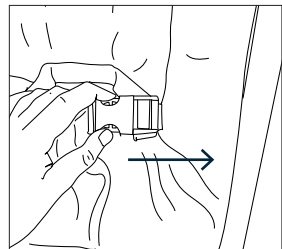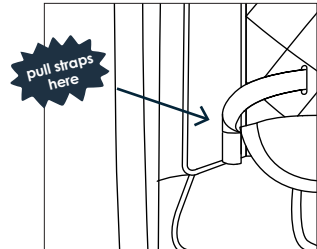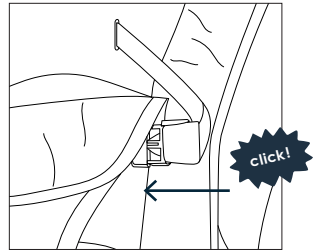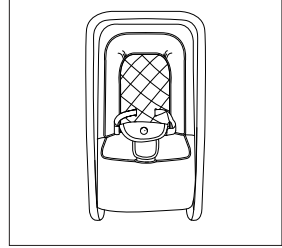


# ADJUSTING THE RECLINE POSITION

## IMPORTANT!


Before continuing with the setup and use of your rocker, you must ensure both clips on the struts are securely locked into place on the frame.

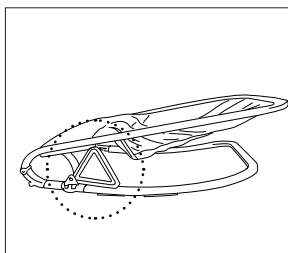

Position 1

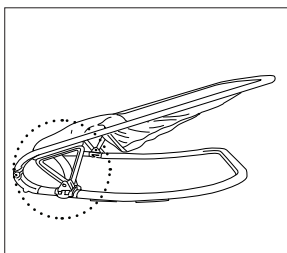

Position 2

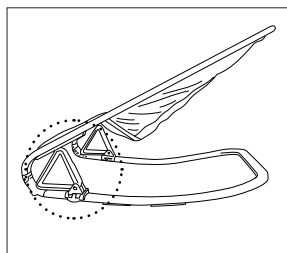

Position 3

## **⚠** WARNING


- DO NOT ADJUST THE POSITION WHILE YOUR CHILD IS IN THE ROCKER



## USING THE TOY BAR

**Your rocker also comes with a detachable toy bar and two toys to keep bub entertained.**

**Handy Hint:** the toy bar can be connected to either side, simply position it anywhere on the frame of the seat.

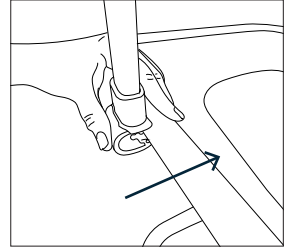

- 1 To attach the toy bar, push the c-shaped clip onto the frame until you hear a click. Give it a tug to make sure it is secure.
- 2 To remove the toy bar, firmly hold the rocker with one hand, and pull the toy bar off the frame.
- 3 The toys on the toy bar are removable. To remove, undo the Velcro on each strap and pull through the slot in the toy bar.
- 4 To attach the toys, thread the end of the toy strap through the slot in the toy bar and press the Velcro together.




### **⚠ WARNING**

- NEVER USE THE TOY BAR TO CARRY THE PRODUCT
- NEVER ATTACH OR REMOVE THE TOY BAR WHILE YOUR CHILD IS IN THE ROCKER

# REMOVING THE SEAT FABRIC

- 1 Undo the harness by releasing the buckle and waist straps.
  - 2 Remove the newborn insert from the rocker (if necessary).
- To remove the cover for cleaning, turn the rocker over and undo the Velcro securing the bottom flap over the base bar.
- 3
  - 4 Unzip the seat from the rocker frame.
  - 5 Wash the rocker fabric as per the care instructions on the product care label and in this instruction manual on p13.

Once the rocker fabric has been washed and dried as per the care instructions, simply zip the fabric back onto the frame, then secure the Velcro on the underside, making sure you wrap the fabric over the base bar.

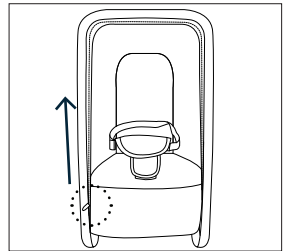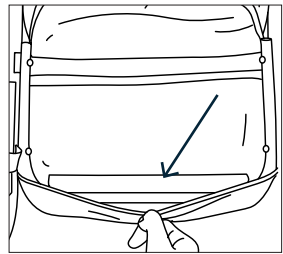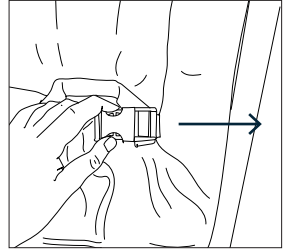

# KEEPING YOUR LOLA IN TIP-TOP SHAPE

Keeping your LOLA rocker in good working condition & ensuring that it lasts as long as possible requires regular maintenance.

## **Regular maintenance should include:**

- Inspecting buckles, zips, components and all parts regularly, to ensure they are secure, moving freely and in fully working order.

## **Accessories and replacement parts:**

- Do not use parts or accessories that are not approved for use with the Babybee LOLA rocker. Doing so may be unsafe and may also void your warranty.

## **Cleaning instructions:**

- Remove rocker fabric prior to washing.
- Cold, gentle machine wash only.
- Do not rub excessively.
- Air dry fabrics flat in the shade thoroughly before reuse and avoid direct heat and sunlight to avoid any colour fading.
- Do not bleach.
- Do not iron.
- Do not dry clean.
- Ensure fabrics are fully dry before next use and storage.
- Never clean any part of the rocker with abrasives, ammonia based, bleach based or spirit type cleaners.
- Always ensure the rocker is stored in a dry place to prevent mould or mildew developing.
- Store the rocker away from any heat sources and direct sunlight.
- Remove insert prior to washing. Hand wash separately. Do not wring. Air dry flat in the shade. Do not use bleach. Do not iron. Do not dry clean.
- Wash toys separately using a gentle hand wash.

# WARRANTY INFORMATION

**Your LOLA rocker comes with a 2 year defects warranty to cover against faults in materials and workmanship when your bedside sleeper is used under normal conditions, according to our user manuals and technical specifications.**

The benefits under our warranty are in addition to other rights & remedies under the law in relation to consumer goods: Our goods come with guarantees that cannot be excluded under Consumer Law in the country of purchase. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The warranty period starts from the date that your rocker is dispatched from our warehouse and is valid in the country of purchase only.

To make a claim email us at:  
**[au.support@babybeeonline.com](mailto:au.support@babybeeonline.com)**  
 or **[nz.support@babybeeonline.com](mailto:nz.support@babybeeonline.com)**

Babybee reserves the right to repair, exchange or replace the damaged item with a replacement part.

**The warranty is not valid in the following cases:**

- Defects or faults resulting from improper assembly, care, or use as outlined in our user manual.
- Defects or faults resulting from an accident, airline or transport damage.
- Normal wear and tear, including scratches to the frame or colour fading of the fabrics.
- Corrosion, mould or rust due to extreme environmental conditions, including high humidity, or due to lack of regular maintenance.
- Products that are purchased secondhand or from an unauthorised distributor.
- Using a part or accessory that is not approved for use by Babybee.
- Claims from anyone other than the original purchaser (i.e. no longer valid if gifted or sold to another individual).
- Damage resulting from extreme heat conditions (i.e leaving in car on hot days).

GET READY TO ROCK!

*team babybee*





Designer Style. Unbeatable Value.



---

MODEL: BABYBEE LOLA    VERSION: 3 | MAR 2023

*Slight variations in the design of your rocker to the images shown in this manual may be present. Most recent versions can be found on our website.*

---

**[babybeeonline.com](http://babybeeonline.com)**