





## ilektro 1250 Tunnel

### OPERATING TOUCH DISPLAY PANEL AND REMOTE CONTROL

Product Code: 1250 Tunnel



The touch display panel is shown by LED's on the front bottom right of the appliance.  
The LED's will disappear after 15 seconds of no function change.  
The Main Power button will be dim.






<b>POWER</b>		Turns the appliance ON/OFF.
<b>FLAME - ORANGE</b>		Controls Orange Flame brightness. 6 Settings: ( F5-F4-F3-F2-F1-F0 ) Flame dims from F5 to F1. F5 is the brightest setting and F0 is off.
<b>FLAME - BLUE</b>		Controls Blue Flame brightness. 6 Settings: ( F5-F4-F3-F2-F1-F0 ) Flame dims from F5 to F1. F5 is the brightest setting and F0 is off.
<b>EMBER BRIGHTNESS</b>		Controls the Ember brightness. 6 Settings: ( b5-b4-b3-b2-b1-b0 ) Ember dims from b5 to b1. b5 is the brightest setting and b0 is off.

**WARNING:** Do not move or remove the glass panel when the appliance is plugged in and operating. This will cause the remote control and touch panel to no longer function.

## ilektrö 1250 Tunnel

### OPERATING TOUCH DISPLAY PANEL AND REMOTE CONTROL

Product Code: 1250 Tunnel

<b>EMBER COLOR</b>		<p>Controls the Ember colors.                      12 Settings: ( C1-C2-C3-C4-C5-C6-C7-C8-C9-C10-C11-C12 )                      Ember color from C1 to C12. Color details is as below:                      C1-Orange                      C2-Red                      C3-Blue                      C4-Yellow                      C5-Green                      C6-Purple                      C7-Sky blue                      C8-Magenta                      C9-White                      C10-Pink                      C11-Cycling from C1-C10                      C12-Locking one preferable color of C11</p>																																					
<b>FLAME - SPEED</b>		<p>Controls Flame Speed.                      5 Settings: ( S5-S4-S3-S2-S1 ) Flame speed from S5 to S1.                      S5 is the fastest setting and S1 is slowest.</p>																																					
<b>HEATER</b>		<p>Controls the Heater.                      Press button to initiate the heater.                      (OFF) no heater or blower.                      (bL), blower only.                      (H1), heater blows warm air (1500W@120V,3000W@240V)  <b>NOTE: Heater functions cycle from OFF-bL-H1, Press and hold the heater button for 5s, The heater and thermostat are disabled, and "H-" will be displayed on the Screen Display. Press and hold again for 5 seconds to exit heating disable mode.</b>                      Heater is controled individually from both sides.</p>																																					
<b>TIMER</b>		<p>Controls the Timer.                      9 Settings: (0.5H, 1H, 2H, 3H, 4H, 5H, 6H, 7H, 8H) Press button until reach desired setting. 0.0H is timer off.</p>																																					
<b>TEMPERATURE</b>		<p>1. <b>Press once:</b> Touch panel indicators wake up.                      2. Press again until desired setting is reached. Digital display shows setting circles as bellow.</p> <table border="1" data-bbox="719 1391 1262 1496"> <thead> <tr> <th>Display Value</th> <th>0</th> <th>1</th> <th>2</th> <th>3</th> <th>4</th> <th>5</th> <th>6</th> <th>7</th> <th>8</th> <th>9</th> <th>N</th> </tr> </thead> <tbody> <tr> <td rowspan="2">Temperature</td> <td>°C</td> <td>18</td> <td>19</td> <td>20</td> <td>21</td> <td>22</td> <td>23</td> <td>24</td> <td>25</td> <td>26</td> <td>27</td> <td>ON</td> </tr> <tr> <td>°F</td> <td>64</td> <td>66</td> <td>68</td> <td>70</td> <td>72</td> <td>74</td> <td>76</td> <td>78</td> <td>80</td> <td>82</td> <td>ON</td> </tr> </tbody> </table> <p><b>NOTE:</b> Press the button for 5s, the temperature setting will switch from °C to °F. Same way from °F to °C.                      Temperature is controled individually from both sides.</p>	Display Value	0	1	2	3	4	5	6	7	8	9	N	Temperature	°C	18	19	20	21	22	23	24	25	26	27	ON	°F	64	66	68	70	72	74	76	78	80	82	ON
Display Value	0	1	2	3	4	5	6	7	8	9	N																												
Temperature	°C	18	19	20	21	22	23	24	25	26	27	ON																											
	°F	64	66	68	70	72	74	76	78	80	82	ON																											

**WARNING:** Do not move or remove the trims when the appliance is plugged in and operating. This will cause the remote control and touch panel to no longer function.