

HOW TO SET UP YOUR BOLT PRINTER

STEP 1: PLUG IN PRINTER AND POWER UP VIA USB

STEP 2: DOWNLOAD DRIVER FROM

https://www.gammaelectronics.net/software-and-drivers/

STEP 3: SELECT DOWNLOAD BOLT DRIVER AND CLICK RUN GENERIC DRIVER FILE

STEP 4: AGREE TO THE LICENSE AGREEMENT AND RUN DRIVER WIZARD

Windows Printer Drivers	× Windows Printer Drivers ×
License Agreement Please read the following license agreement carefully.	Installation Information SEAGULL Follow the instructions below to install the software. Follow the instruction below to install the software.
WINDOWS PRINTER DRIVER LICENSE AND LIMITED WARRANTY Seagull Scientific, Inc. ("Seagull") grants you a non-exclusive license to use the accompanying Windows Printer Driver(s) and related documentation ("Seagull Software"), subject to the following provisions. You assume full responsibility for the selection of the Seagull Software to achieve your intended results, and for the installation, use, and results obtained from the Seagull Software. Both the software and the related material are Copyrighted and are protected by law. Title to and all rights and interests in the Seagull Software, wherever resident and on whatever media, are and shall remain the property of Seagull. Euchtempore, by using	 Instructions After the drivers are unpacked, install them using the Driver Wizard. Options Run Driver Wizard after unpacking drivers Read installation instructions (contained in 'Installation_Instructions.html')
O I do not accept the terms in the license agreement	
< Back Next > Cance	el < Back Finish Cancel

STEP 5: SELECT INSTALL PRINT DRIVERS IN THE SEAGULL DRIVER WIZARD AND SELECT PREFERRED PORT (USUALLY USB)

Seagull Driver Wizard	×	Seagull Driver Wizard	×
	Welcome to the Seagull Driver Wizard	Connect Printer The printer should be connected before continuing installation.	Î
	This wizard helps you install and remove printer drivers.	How is this printer going to be attached?	
	What would you like to do? Install printer drivers Upgrade printer drivers Remove printer drivers	 ○ USB ○ Network (Ethernet or WiFi) ④ Other (such as Parallel or Serial) Instructions: 1. Connect your printer to the PC. 2. Turn the printer on. 3. Press Next to continue. 	^
	Please save all work and close all applications before proceeding. This process may require Windows to be restarted.		~
	< Back Next > Cancel	< Back Next >	Cancel

STEP 6: SELECT BARCODE PRINTER TT059-6G

Seagull Driver Wizard X	Seagull Driver Wizard X
Specify Printer Model The manufacturer and model determine which printer driver to use.	Specify Printer Name Names are used to identify the printer on this computer and on the network.
Specify the model of your printer.	Enter a name for this printer.
Printer Model	Printer name: Bar Code Printer TT059-6G
Bar Code Printer TT059-5G Bar Code Printer TT059-6C Bar Code Printer TT2059-6G Bar Code Printer TT2205 Bar Code Printer TT3204 Bar Code Printer TTP-442 Bar Code Printer TTP-442E	Use this printer as the default printer Specify whether or not you want to share this printer with other network users. When sharing, you must provide a share name.
Source: C:\Seagull Browse Version: 7.3.8 M-3 (09/21/2015)	O Share name: Bar_Code_Printer_TT059-6G_#2
< Back Next > Cancel	< Back Next > Cancel

STEP 7: SPECIFY PORT (USUALLY USB1)

ENTER NAME FOR PRINTER - Bar Code Printer TT059-6G

CLICK FINISH

STEP 8: DOWNLOAD SOFTWARE

LOOK FOR LINK TO DOWNLOAD SOFTWARE, IT WILL BE EMAILED

CLICK ON LINK TO DOWNLOAD

INPUT LICENSE CODE

CONTACT US IF HELP IS NEEDED:

CUSTOMERSERVICE@GAMMAELECTRONICS.NET

909.860.1479

Property of Gamma Electronics Inc.

2818 Metropolitan Place, Suite A Pomona, CA 91767 www.gammaelectronics.net