 


THE NEW
POK3R

The new POK3R is the perfect solution for limited desk space. Choose between 3 different keyboard layouts, with additional features such as individually programmable keys with 3 different customizable layer options, changed to USB-C connect which is more friendly to plug-in when you use it. All easily set through what you want.

Features:

1. ANSI layout with 61 keys
2. Chery MX switches
3. On-board macro (3 layers)
4. Build-in 3 layouts (Qwerty, Dvoark, Colemak)
5. Metal case
6. USB-C
7. Support firmware update on Mac O.S




Packing contact

1. Keyboard x1
2. USB-C cable x 1
3. Manual x 1

Product specification


Model name	POK3R
Number of keys	61 or 62
Switch type	Cherry MX
Cable	Datachable with USB-C
Cable length	1.5m
Backlit	NA / Single LED
Weight	770 ±10g
Dimensions (LxWxH)	291 x 103 x 34 ± 5 mm
Warranty	1 year

 Fn function description table

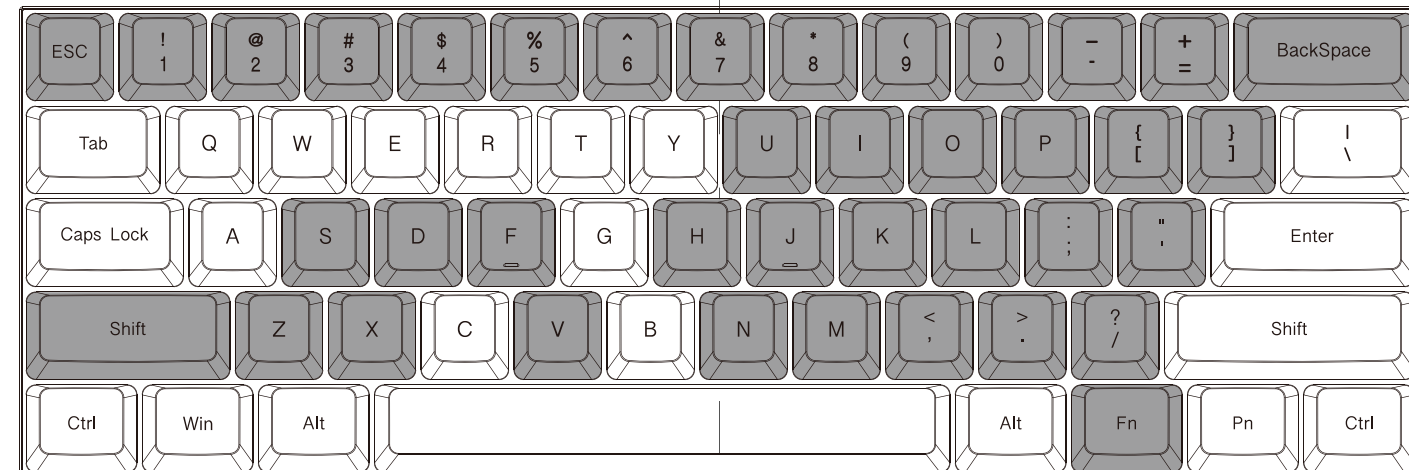

- | | | | |
|--------------|----------------|----------------------|---|
| Fn + ESC = ` | Fn + 9 = F9 | Fn + [{ = ScrLk | Fn + " ' = Del |
| Fn + 1 = F1 | Fn + 0 = F10 | Fn +] = Pause | Fn + ; : = Ins |
| Fn + 2 = F2 | Fn + = = F11 | Fn + Z = APP | Fn + M = Default |
| Fn + 3 = F3 | Fn + ± = F12 | Fn + H = Home | Fn + < , = Layer 2 (LED 1 on red light) |
| Fn + 4 = F4 | Fn + I = ↑ | Fn + N = End | Fn + > . = Layer 3 (LED 1 on green light) |
| Fn + 5 = F5 | Fn + J = ← | Fn + U = PgUp | Fn + ? / = Layer 4 (LED 1 on blue light) |
| Fn + 6 = F6 | Fn + K = ↓ | Fn + O = PgDn | Fn + S = Volume down |
| Fn + 7 = F7 | Fn + L = → | Fn + O = PgDn | Fn + D = Volume up |
| Fn + 8 = F8 | Fn + P = PrtSc | Fn + Backspace = Del | Fn + F = Mute |
| | | Fn + L_Shift+ESC = ~ | |

 
Keyboard Default layout

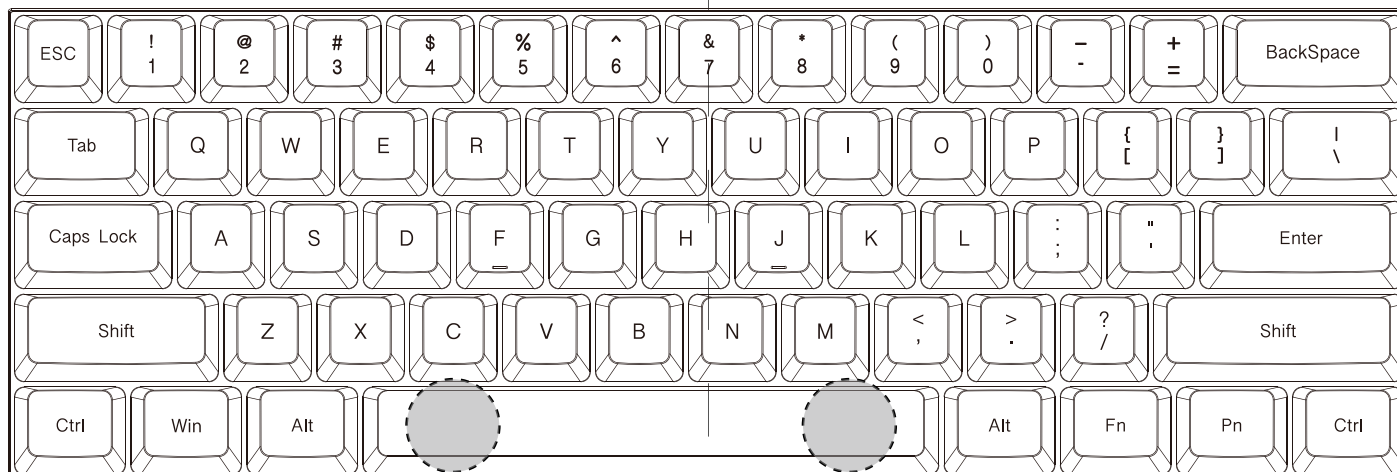

LED 1

LED 2

 
Pn function description table

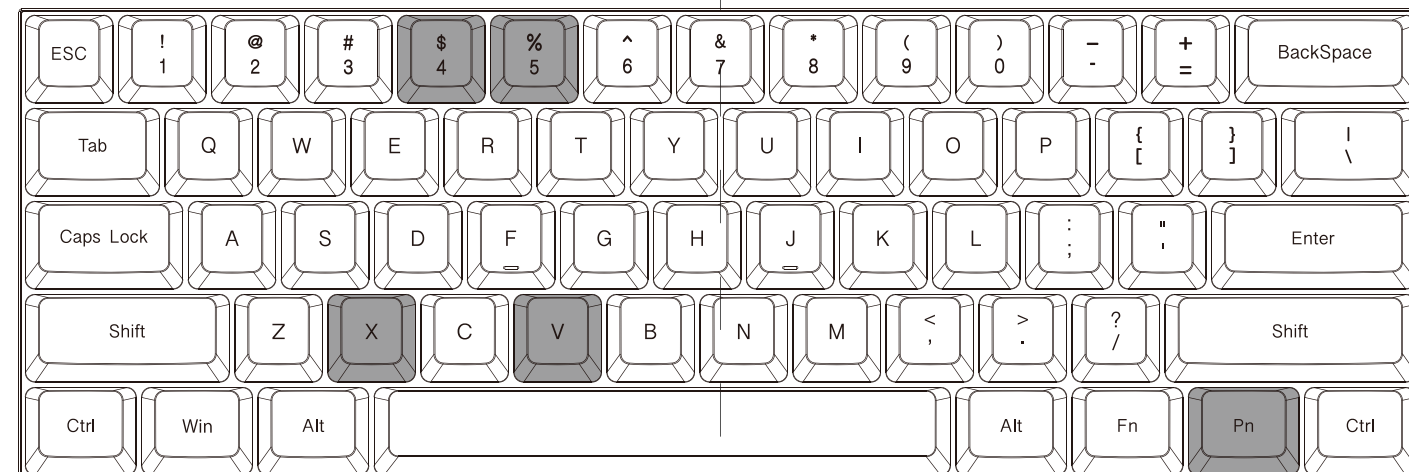

- Pn + 4 = Single light, ripple, laser, LED OFF
- Pn + 5 = Full key light, breath mode
- Pn + X = Increased brightness
- Pn + V = Brightness reduction

Macro instruction:

 Step 1: Select a layer (Fn + "<", ">" or "?" key).



Step 2: Press Fn + right Ctrl to enter the programming mode (the LED 2 is steady light)

Step 3: Hit the key you want to program (the LED 2 flashes)

Step 4: Type the content then hit Pn key (the LED 2 light on constantly)

Step 5: Repeat Step 3 and Step 4 to program other keys.

Step 6: Press Fn + right Ctrl key to exit the programming mode (the LED 2 goes out)

Note:

The keyboard has 4 built-in layers. The default layer cannot be programmed.

 
Fn + right Ctrl / M / < / > and ? disable.

- 9 -

Remarks:

1. Support Fn layer programming, Fn compound key (for example Fn + A) can be programmed in key selection state.


2. Support delay output. In the state of key selection (step 3), Fn + T, Fn + G, Fn + B, the continuous delay only counts one time but the time accumulates.



Example:

Program to enter "OK" when Q is pressed. Insert an interval of 1.2 seconds between O and K.

 Press "O" and hit Fn+B 2 times (0.5s x 2 = 1s) and Fn+Gx2 time (0.1s x 2=0.2s)




3. Each key can input up to 31 key-code.



4. In programming mode, if you do not press any keys within 15 seconds, it will automatically exit.

- 10 -

 
Dip switch description table




Qwerty

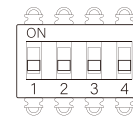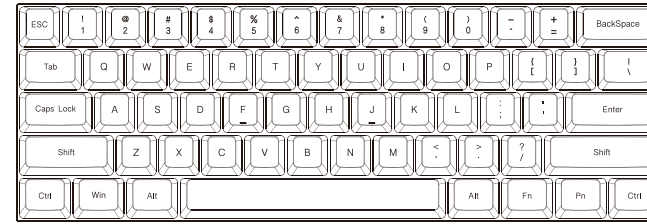  



Qwerty

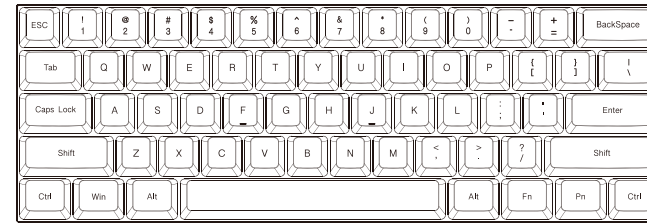 


- 13 -

 

Swap Fn to Capslock

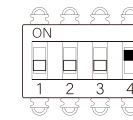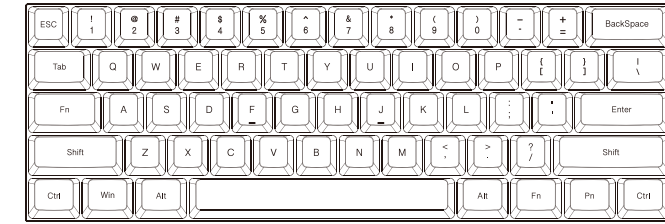  


 Swap Fn/Pn to any position expect for right_Ctrl


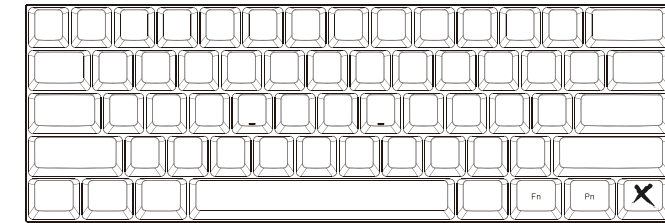


- 14 -

 
Dip switch description table



Colemak

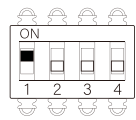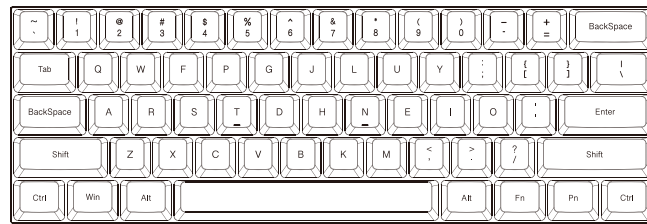  

Dvorak

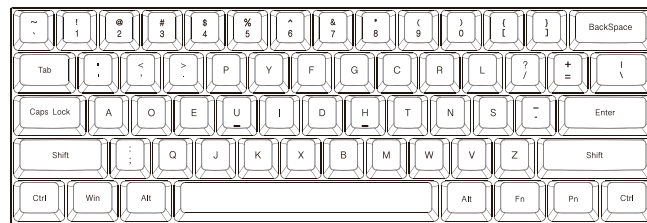 

- 11 -

Remarks:

How to change the position of Fn or Pn. Fn as an example:

Step 1: Turn on the DIP switch 4

Step 2: Select a Layer

Step 3: Press Fn and then select the new location you want

Step 4: Close the DIP switch 4 complete the change

Change Pn position as above steps

- 12 -

 
 
Other functions description:

1.Independent arrow keys

Pressing the right Alt and the spacebar one time, it will change the right Shift, Fn, Pn and right Ctrl into arrow keys.

Back to default function, please hit it again.

* Please refer to the illustration below.

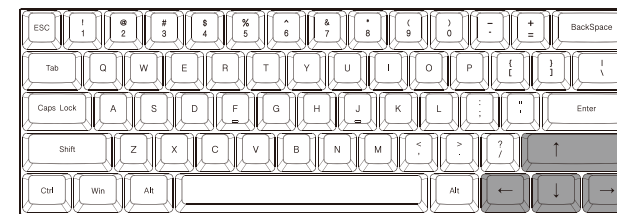

- 15 -

2.Return to factory default:

a.Clearing individual layers:

Please hold down Fn and R key at the same time until the LED 1 stops flashing.



b.Clearing all layers:

Please hold down two Alt keys at the same time until the LED 1 stops flashing.



Remarks:

If you have changed the Fn position and forgot where it was. You can still press the original Fn and R key to restore the current layer.

- 16 -