




**+** **-** Charge controller

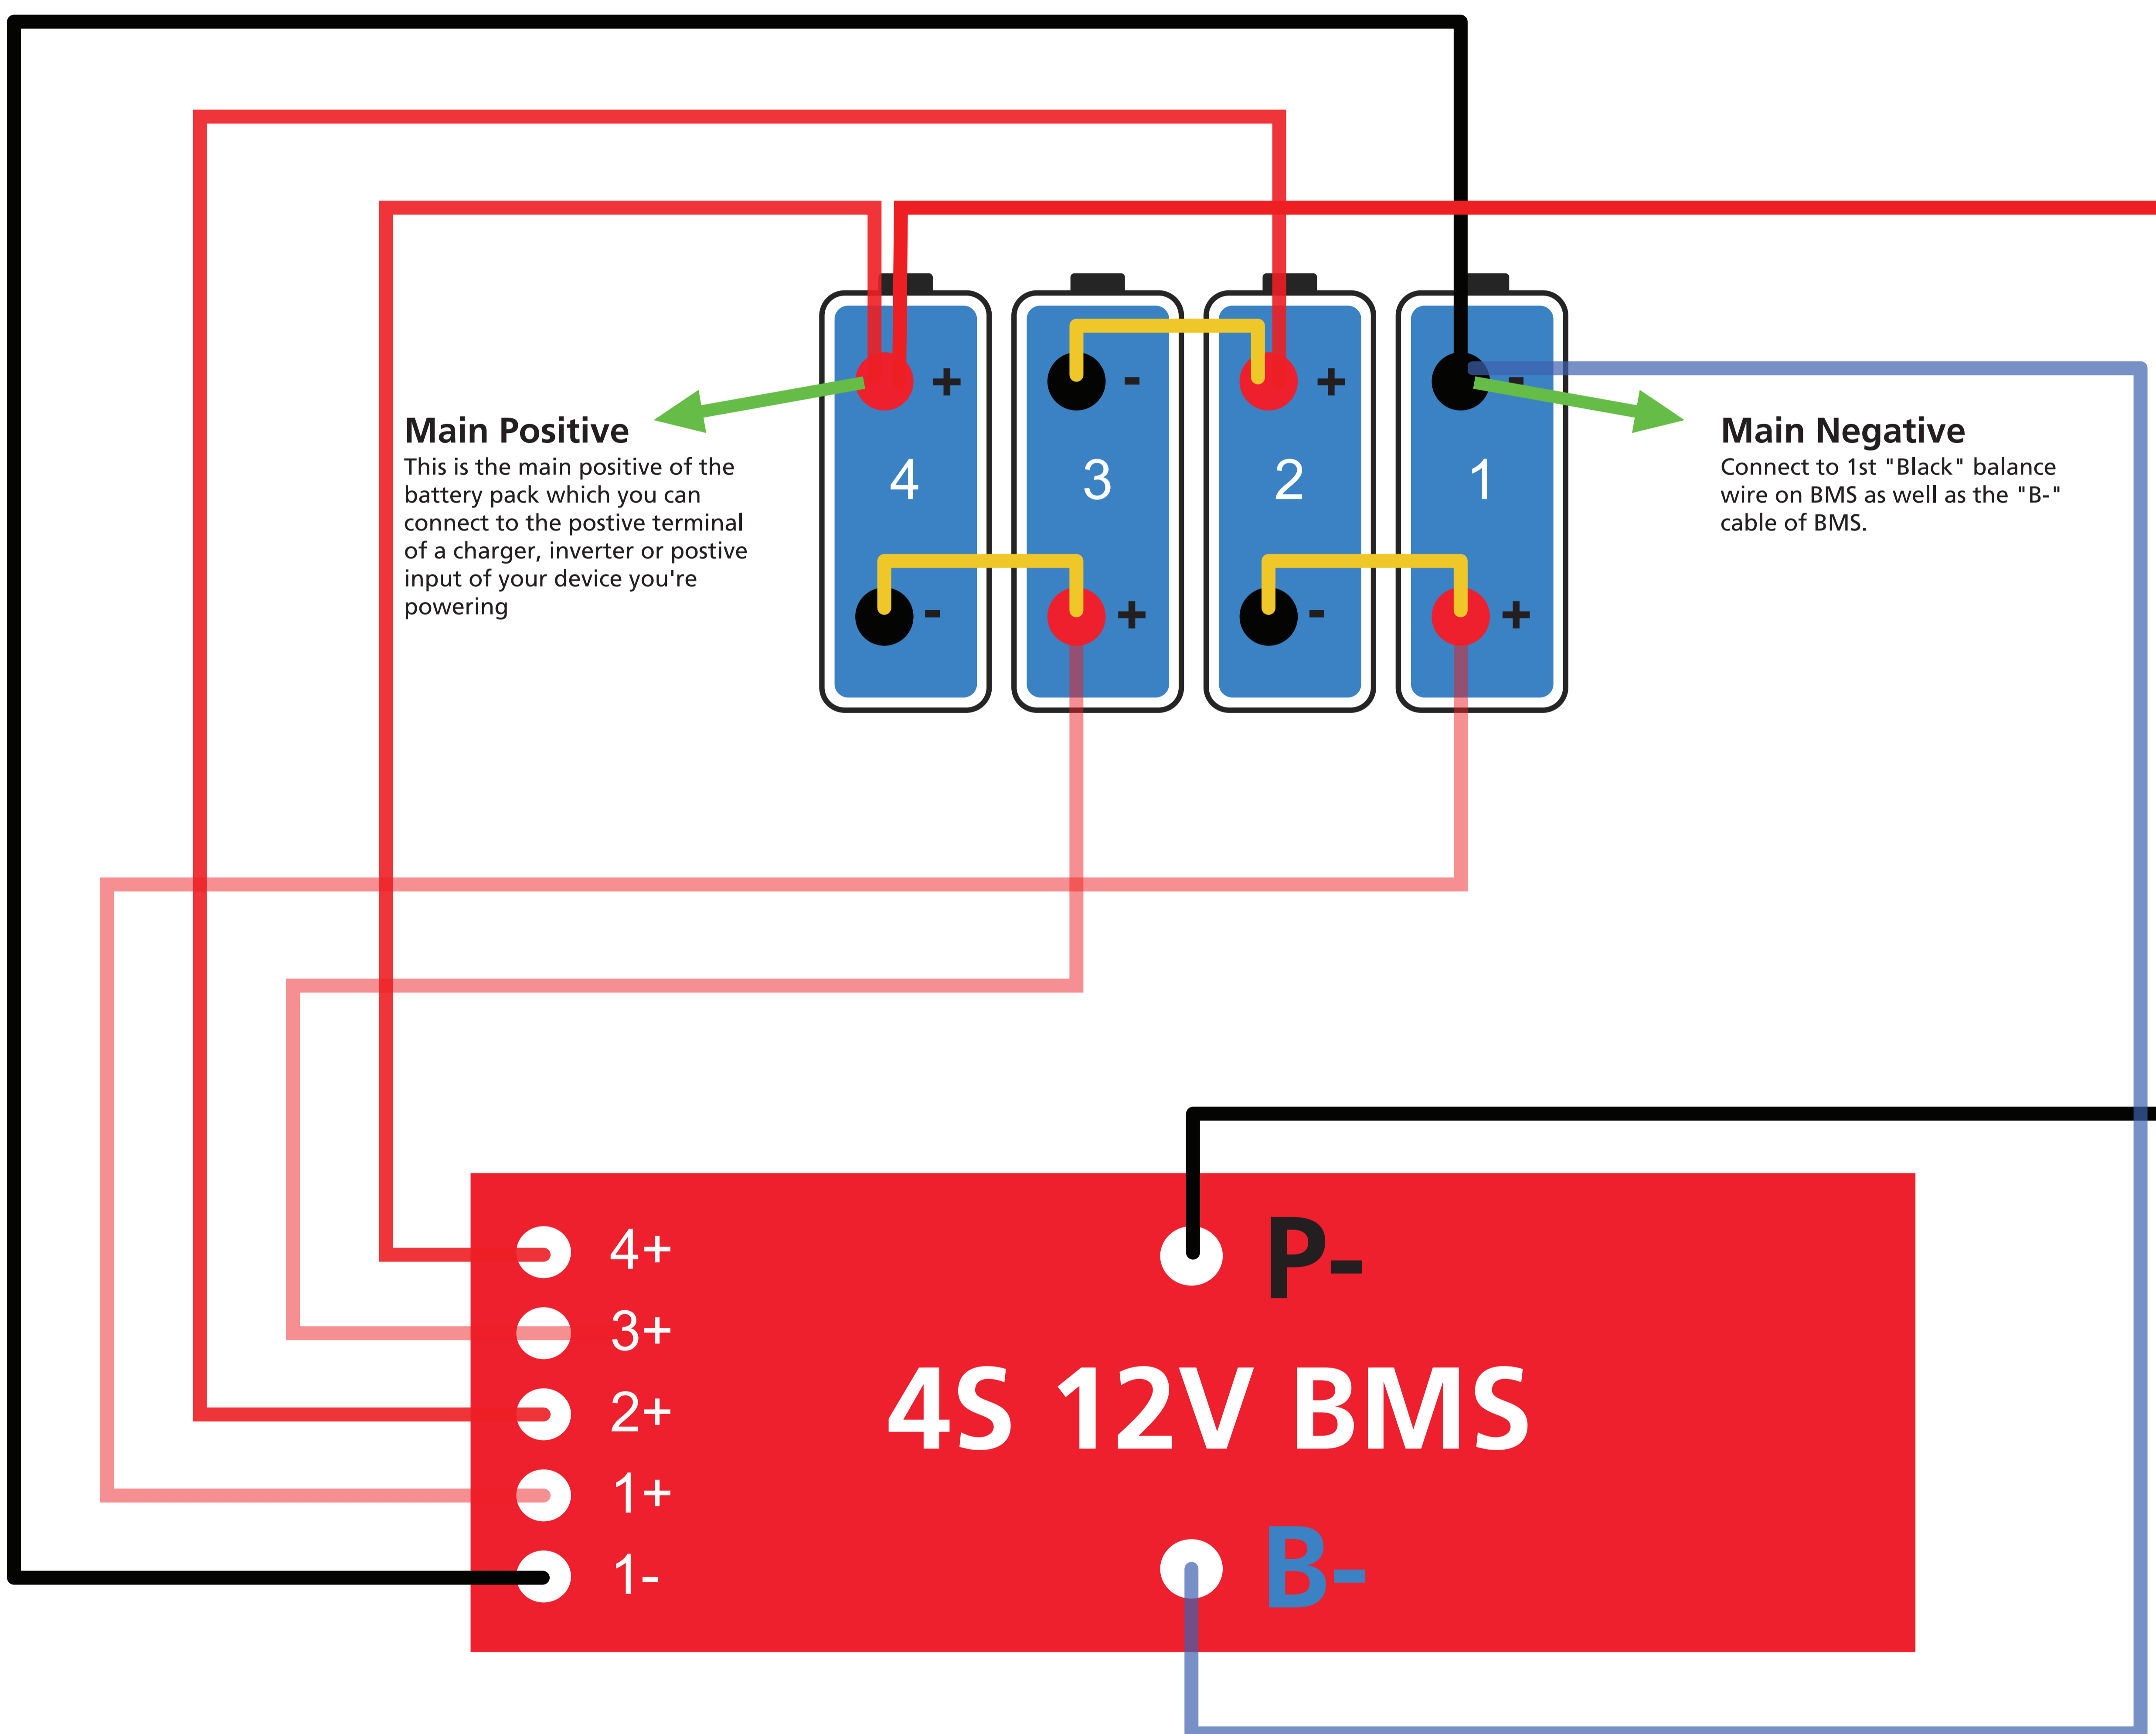

**Main Positive**  
This is the main positive of the battery pack which you can connect to the positive terminal of a charger, inverter or positive input of your device you're powering

**Main Negative**  
Connect to 1st "Black" balance wire on BMS as well as the "B-" cable of BMS.

**4S 12V BMS**

- 4+
- 3+
- 2+
- 1+
- 1-
- P-
- B-

**+** **-** Inverter

