



TSOVET
INSTRUCTION
MANUAL

AUTOMATIC INSTRUCTIONS

SETTING THE TIME

- 1.0 UNSCREW THE CROWN COUNTER CLOCKWISE (POSITION 1).
- 1.1 PULL THE CROWN GENTLY TO POSITION 3.
- 1.2 TURN THE CROWN THE SET HOUR / MINUTE HANDS TO THE DESIRED TIME.

SETTING THE DATE

- 2.1 PULL THE CROWN TO POSITION 2.
 - 2.2 TURN THE CROWN CLOCKWISE STEP-BY-STEP TO THE DESIRED DATE.
 - 2.3 PUSH THE CROWN BACK TO POSITION 1 AND GENTLY SCREW CLOCKWISE.
- "IMPORTANT"** – PLEASE DO NOT SET BETWEEN 21:00 AND 4:00 AS THIS WILL CAUSE A MALFUNCTION.

MANUAL WINDING

- 3.1 UNSCREW CROWN TO POSITION 1.
- 3.2 ROTATE THE CROWN CLOCKWISE AT NORMAL POSITION.
- 3.3 WIND TURNING THE CROWN 10-15 TIMES.

IF THE WATCH IS REPAIRED BY A NON-CREDITED TSOVET REPAIR TECHNICIAN THE WARRANTY WILL BE NULL AND VOID. LIMITED WARRANTY 2 YEARS FROM THE DATE OF PURCHASE.

VISIT WWW.TSOVET.COM FOR WARRANTY DETAILS.