

# YĀMAN

TOKYO JAPAN

## User's Manual

---

YA-MAN SPA STYLER  
BLOW DRY + SCALP MASSAGE  
HC20US

---

Congratulations on your purchase and thank you!

- Be sure to read the Safety Precautions (pages 3-12) before use.
- Please read this User's Manual carefully for information on how to use the dryer properly and safely.
- After reading the contents hereof, be sure to keep this User's Manual in an accessible location.
- Make sure to include this User's Manual if you are transferring ownership of the dryer to another person.
- Please keep the product away from water.
- Do not use in the bathtub or shower.
- This product is for household use.

# Table of Contents

---

Safety Precautions ————— p3

Parts Identification ————— p15

Modes and Settings ————— p16

How to Use ————— p17

Maintenance ————— p21

Troubleshooting ————— p28

FAQ ————— p29

Product Specifications ————— p30

Disposal Information ————— p31

# IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

## READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

### ■ SAFETY PRECAUTIONS

- Read these Safety Precautions carefully before using the dryer in order to use it correctly.
- Use the dryer sensibly in accordance with the prescribed steps.
- Immediately discontinue use and arrange to have the dryer repaired if any abnormality occurs.
- Do not use the dryer while it is in a defective state, as doing so could cause physical harm to the user.
- The precautions listed in the User's Manual are very important. For your safety, please follow them carefully.
- Precautions are classified as DANGER, WARNING, or CAUTION in order to clearly specify the level of danger and possible injury or damage that may occur if the dryer is misused.

#### Classifications of Precautions



**DANGER**

Improper use of this dryer poses a severe and likely risk of death or serious injury.



**WARNING**

Improper use of this dryer may pose a risk of death or serious injury.



**CAUTION**

Improper use of this dryer may cause an injury or property damage\*.

#### Symbols



This symbol shows you what you must NOT do.




This symbol shows you what you must do.




This symbol shows you what you must be careful with.

\* 'Property damage' refers to damage affecting dwellings, household belongings, or domestic animals and pets.

 **DANGER** – As with most electrical appliances, electrical parts are electrically live even when the switch is off:

To reduce the risk of death by electric shock:

1. Always "unplug it" immediately after using.
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquid.
5. If an appliance falls into water, "unplug it" immediately. Do not reach into the water.

 **WARNING** – To reduce the risk of burns, electrocution, fire, or injury to persons:

1. An appliance should never be left unattended when plugged in.
2. Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.

3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water. Return the appliance to a service center for examination and repair.
5. Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
7. Never use while sleeping.
8. Never drop or insert any object into any opening or hose.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Do not use an extension cord with this appliance.
11. Do not direct hot air toward eyes or other heat sensitive areas.
12. Attachments may be hot during use. Allow them to cool before handling.
13. Do not place appliance on any surface while it is operating.
14. While using the appliance, keep your hair away from the air inlets.
15. Do not operate with a voltage converter.



## **WARNING** (Regarding use and storage)

- Do not use continuously for excessively long periods.

Failure to comply may cause an accident, malfunction of the dryer, or injuries.

- Do not use the dryer near flammable substances (e.g. alcohol, thinner, benzene, nail polish remover, sprays).

Failure to comply may cause an explosion or fire.

- Do not use simultaneously with flammable hair styling products, etc.

Failure to comply may cause a fire or scorching of hair, or burns.

- Do not pull out the plug from a power outlet during use.


Failure to comply may cause an electric shock or a fire due to a short circuit.

- Do not insert foreign objects such as hairpins into the air inlet port and air outlet.

Failure to comply may cause a fire or electric shock.

- Do not leave the dryer turned on with the air inlet port placed downward on a surface.

Failure to comply may cause a fire or burns.

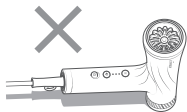

- Do not allow children or physically challenged persons to use the dryer unattended. Children should obtain the consent of their guardians before using the dryer and should only use it under the supervision of a guardian.

Failure to comply may cause accidents or injuries.

- Do not let individuals who are unable to express their intentions on their own or who have skin sensory impairments use the dryer.

Failure to comply may cause accidents or injuries.

- Keep the dryer away from children. Children shall not play with the appliance.

Failure to comply may cause accidents or injuries.



User restrictions

- Do not disassemble, attempt to repair or modify this dryer in any way.

Failure to comply may cause a fire, an electric shock or other injuries.

Contact our customer service for advice on repairing the dryer.



Disassembly is prohibited

## **WARNING** (Regarding use and storage)

- Do not place the dryer in an unstable location. Do not drop or strike the dryer. Failure to comply may cause malfunction. An injury may also be caused if the dryer is dropped on a foot or other exposed body parts.



Dropping prohibited

- Do not use the dryer for any purpose other than those stated in the User's Manual. Failure to comply may cause injury or malfunction.



Non-intended uses are prohibited

- Do not place inside a microwave oven or high-pressure container. Failure to comply may cause generation of heat, a fire, or a malfunction of the dryer.



Caution against rupture

- If you feel an earthquake, see lightning or hear thunder, turn off the power and unplug the dryer. Failure to comply may cause a fire or electric shock.



Remove the plug

- Do not use or store the dryer in the following locations:
  - A location where there is exposure to direct sunlight
  - A slope or a location where there are vibrations or shocks
  - Outdoors
  - A location where there are strong radio waves or magnetism
  - A location where there is exposure to oil smoke or steam
  - A location that may become hot, such as near a heater
  - A location with drastic temperature changes (e.g. near an air conditioner or heater)Failure to comply may cause a fire, electric shocks, accidents, malfunction of the dryer, falls or injuries.
- Do not look into the air outlet during use. Dust or other foreign objects may be blown out with the air flow from the dryer, which could cause burns or other injuries.



Prohibited

## **WARNING** (Regarding use and storage)

- Make sure to use the dryer in an operating voltage of AC120V. Make sure the plug is fully inserted into the power outlet.  
Failure to comply may cause a fire, electric shock or accident.  
\* The free-repair warranty is only valid in Japan.
- If any of the following abnormalities or malfunctions are detected, stop using the dryer, unplug it from the power outlet immediately, and contact customer service.
  - The inside of the dryer becomes bright red and smoke or a strange odor is emitting from the dryer.
  - Air flow from the dryer is intermittent during use.
  - The power cord has become twisted and will not return to its normal shape.
  - There is a sound of a foreign object inside the dryer. Abnormal heat, etc.Continued use of the dryer in this state may cause a fire or malfunction of the dryer.
- If water or a foreign object, etc. gets inside the dryer, immediately cease use and request an inspection.  
Failure to comply may cause a fire or electric shock.



Must Comply

- If the dryer is dropped or damaged, turn off the power immediately, pull out the plug, and request a repair/inspection.  
Failure to comply may cause a fire or electric shock.
- Inspect the plug and power outlet regularly.  
Failure to comply may cause a fire or electric shock.
- Do not block the air outlet.  
Failure to comply may cause a fire or malfunction of the dryer.



Must Comply

- Do not store near fire, under direct sunlight, in hot, humid, or dusty locations, or near combustible gases or items that catch fire easily. Also, do not throw into the fire or place it close to heaters.  
Failure to comply may cause generation of heat, fire, or breakage, leading to malfunction of the dryer.



Fire  
Alert

## CAUTION (Regarding use and storage)

- Do not wipe the dryer with alcohol, thinner, benzene, nail polish remover, kerosene or other solutions, chemicals, or polishing powders, etc.  
Failure to comply may cause damage to the surface of the dryer.
- Do not leave any treatment agents or hair styling products, etc. on the dryer.  
Failure to comply may cause a malfunction of the dryer, deformation, or cracks.
- Do not use while dust, etc. is left on the air inlet port and air outlet.  
Failure to comply may cause a fire or malfunction of the dryer.
- Do not operate the switch with excessive speed or leave the switch in the middle.  
Failure to comply may cause a malfunction of the dryer.
- The air outlet is very hot during and immediately after use, so do not touch.  
Failure to comply may cause burns.
- Do not apply continuously on one section.  
Failure to comply may cause low-temperature burns. Always move the dryer around when using.




Prohibited

- If the dryer has not been used for a long period of time, check that it works properly before using it again.  
Failure to comply may cause an accident or malfunction of the dryer.
- Use only for drying and styling human hair. (Do not use on wigs or hairpieces, pets, clothing, or shoes, etc.)  
Failure to comply may cause a fire, burns, or malfunction of the dryer.
- During use, keep the air inlet port at least 4 in. away from the hair to prevent the hair from being sucked into the dryer.  
Failure to comply may cause the hair to become entangled inside the dryer or cause burns or a malfunction of the dryer.




Must Comply

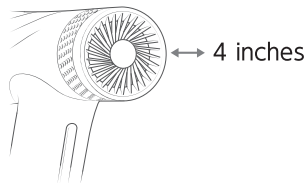

## CAUTION (Regarding use and storage)

- Keep the air outlet at least 1 inch away from the hair.

Failure to comply may cause the hair to burn.

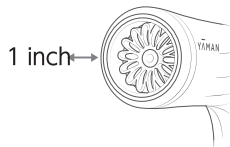

Must Comply

- Use at no more than 2,000 m above sea level.

- When cleaning the dryer, be sure to turn the dryer off, remove the plug from the power outlet, and follow the instructions in this User's Manual. Wait until the dryer has cooled down before doing so.

Failure to comply may cause an accident, malfunction of the dryer, or burns.




Remove the plug

## WARNING (Regarding power source)

- Do not damage or modify the power cord. Do not apply unnecessary force, bundle or twist. Failure to comply may cause the cable to break, resulting in a fire or an electric shock.
- Do not wrap the power cord around the dryer when storing.

Failure to comply may cause the power cord to break, resulting in electric shock or short circuit.

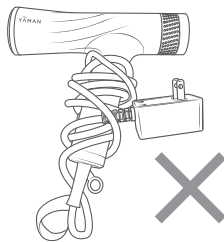

Careless or reckless use is prohibited

- Do not use if the power cord is damaged or the wall socket is too loose.

Failure to comply may cause an electric shock, short circuit, fire, or malfunction of the dryer. Contact customer service for advice on repairing the dryer.



Use of a damaged cable or plug is prohibited

## **WARNING** (Regarding power source)

- Do not connect too many plugs to one outlet.

Failure to comply may cause an electric shock, short circuit, fire, or malfunction of the dryer.



Overloading of  
an electric circuit  
is prohibited

- Do not submerge the dryer or power cord in water, or douse or wash them with water.

Do not use near water or in very humid places.



Do not use  
near water

Failure to comply may cause an electric shock, short circuit, fire, or malfunction of the dryer.

- Do not move or raise the dryer by pulling on the power cord.

Failure to comply may cause an electric shock, short circuit, fire, or malfunction of the dryer.



Prohibited

- Disconnect the plug from the power outlet if it will not be used for an extended period.

Failure to comply may cause a fire.

- After use, be sure to turn the dryer off and remove the plug from the power outlet.

Failure to comply may cause a fire or accident.

- When disconnecting the plug from a power outlet, be sure to pull it out by holding its head instead of the cord (do not touch the metal parts). Do not insert or disconnect the plug with wet or damp hands.

Failure to comply may cause an electric shock, short circuit, fire, or malfunction of the dryer.



Remove  
the plug

## WHEN USING THE SCALP LIFT ATTACHMENT

### **DANGER** (Regarding use and storage)

- The following individuals should not use the dryer:
  - ◆ Do not use the dryer in conjunction with any medical electronic equipment, including: pacemakers or other implanted electronic medical device; artificial heart-lung machines or other electronic life-support medical device; electrocardiograph or other worn electronic medical device.



Prohibited

### **WARNING** (Regarding use and storage)

- The following individuals should not use the dryer:
  - If you have existing or suspected epilepsy, heart disease, or related disorders
  - Infants or those who are unable to express their intentions on their own
  - If you are unable to sense temperature or stimulation • If you have an autoimmune disease
- Do not allow physically challenged persons to use the dryer unattended. Consult a physician prior to use under the following conditions:
  - If you have an acute disease • If you have an infectious disease • If you have a malignant tumor
  - If you have a febrile disease • If you have high blood pressure or a blood disease
  - If you have a fever • If you have sensory impairment due to severe peripheral circulatory dysfunction (e.g. diabetes)
  - If you have a nerve damage • If you have a skin disease or atopic dermatitis
  - If you are a hospital outpatient and are taking medication
  - If you have a pre-existing skin condition, such as an allergic constitution or contact dermatitis, or if you have a concern about your skin when using this dryer



Prohibited

## **WARNING** (Regarding use and storage)

- Do not use in the following cases or on the following areas.
  - If you are under the influence of alcohol
  - Areas other than your scalp
  - If you are suffering from scalp inflammation
- Do not overuse. For usage time and frequency, follow the instructions in the User's Manual. Failure to comply may cause physical injuries.
- Before use, check the Scalp lift attachment for cracks, deformation, or breakage, and do not use if broken or malfunctioning. Failure to comply may cause injuries or skin problems.



Prohibited

## **CAUTION** (Regarding use and storage)

- Do not press strongly or use it intensively on a single area.
  - Pressing stronger than necessary or using it intensively on a single area may damage the scalp.



Prohibited

- Check carefully that your scalp is not showing any abnormalities during use. Stop use immediately if you start to feel pain or fatigue or if you see any scalp skin reaction during use. Failure to comply may cause scalp skin problems.
  - Stop use immediately if the treatment does not agree with your scalp.



Must Comply


# SAVE THESE INSTRUCTIONS



# Quick Start Guide

1

Insert the plug into the wall socket

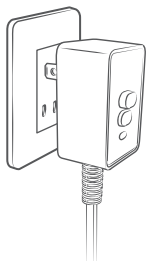


2

Turn on the power

Slide the power switch upwards to turn on the power.


\*Due to the safety function, it takes approx. 2 seconds until the air flow comes out.

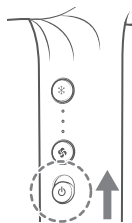

3

Select the level


Press and hold (approx. 0.5 sec) the button to select your desired air flow/speed from Gentle, Medium and Fast.

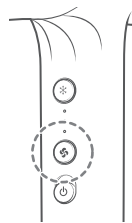

4

Turn off the power

Slide the switch downwards to turn off the power.

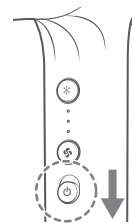

# OPERATING INSTRUCTIONS

This appliance is intended for household use only. Use on Alternating Current (60 hertz) only. Standard dryers are designed to operate at 120 volts AC.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.


## CHECK ALCI SAFETY FEATURE EVERY TIME YOU USE APPLIANCE

This appliance is equipped with an Appliance Leakage Circuit Interrupter (ALCI), a safety feature that renders it inoperable under some abnormal conditions, such as immersion in water. To make sure the ALCI is functioning properly, perform the following test. The purpose of this test is to allow you to make sure the water sensing system (ALCI) is working.

1. Plug in the appliance and press test button on plug.
2. The appliance will stop working. There will be an audible click and reset button will pop out.
3. To reset ALCI, unit should be unplugged. Then push reset button in and reinsert plug into outlet.
4. If ALCI is not functioning properly, contact customer service.

5. It is important that if immersion occurs, contact customer service. Do not try to reset.
6. Be sure to repeat test every time you use the unit to confirm ALCI is operational.

Should the appliance go off and the reset button pop up during use, this could indicate a malfunction in the unit. Remove plug from outlet and allow the appliance to cool. Push reset button and reinsert plug into outlet. The appliance should then function normally. If not, please contact our customer service for further assistance.

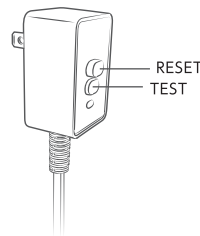


## ■ PARTS IDENTIFICATION

### ATTACHMENTS

- Scalp lift attachment\*
- Air concentrator



\*Do not use on any other dryer.

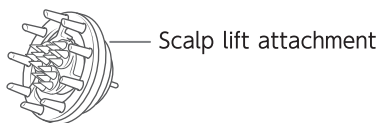


Air concentrator

\*A slight surface color unevenness is due to the material and is acceptable.

### DRYER

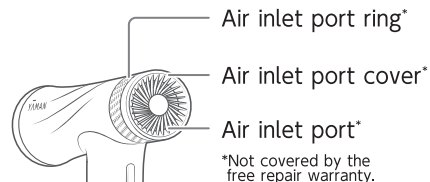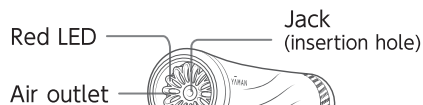


\*Not covered by the free repair warranty.

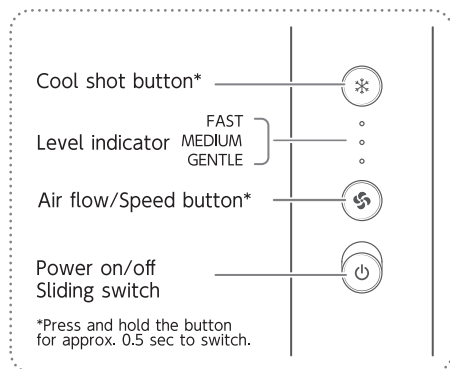

\*Press and hold the button for approx. 0.5 sec to switch.

Cord band


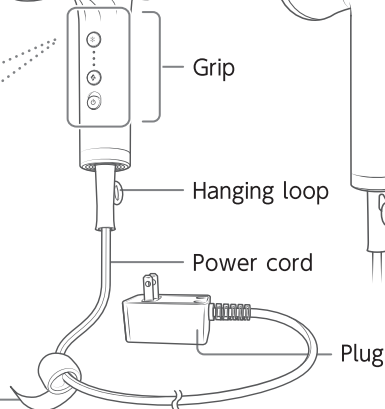


The design and/or specifications of the dryer and its accessories are subject to change without notice for quality improvement reasons.

## ■ MODES AND SETTINGS

We recommend to use the Scalp Lift mode before styling for optimal results.

Scalp Lift mode can be used on both wet or dry hair.

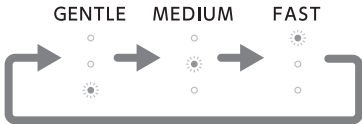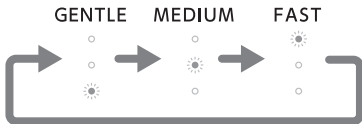Mode	Function	Indicator/Action	Level	
<b>Scalp Lift</b> Insert the Scalp lift attachment to activate the Scalp lift mode.	Vibration Red LED Ionic	One blue solid LED indicates the selected level and will change in the order below each time you press and hold (approx. 0.5 sec) the airflow/speed button.  	FAST	Soft, gentle warm air flow with vibration provides a perfect massage to your scalp. Select the vibration pattern that you feel most comfortable.
			MEDIUM	
			GENTLE	
<b>Styling</b>	Blow-Dry Red LED Therapy Ionic  * Red LED Therapy will be turned off during cool air flow.  * Cool shot button can be switched on at any setting.	One blue solid LED indicates the selected level and will change in the order below each time you press and hold (approx. 0.5 sec) the airflow/speed button.  	FAST	Lifts hair from the roots by using fast air flow with medium heat (approx. 140°F/60°C).
			MEDIUM	Smooths and creates shine by using medium air flow with high heat (approx. 194°F/90°C).
			GENTLE	Styles bangs and ends by using gentle air flow with slightly high heat (approx. 167°F/75°C).

## ■ HOW TO USE

### 1 Preparation


- After washing your hair, lightly towel dry.
- Comb through your hair with your fingers or a brush to remove any tangles.

### 2 Insert the plug into the wall socket

Make sure to untie the power cord before inserting the plug into the wall socket.

- Make sure the power is switched OFF before inserting the plug into a wall socket.

### 3 Insert the Scalp lift attachment when using Scalp Lift mode

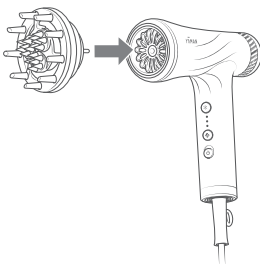


Align the plug into the jack. Make sure to push it in all the way in.

---


**CAUTION** • The air outlet and attachments may be hot during and immediately after use. Allow them to cool before handling.

#### 4 Turn on the power

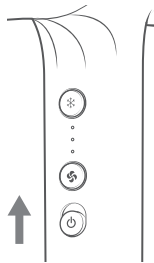

Slide the slide switch upwards to turn on the power.  
\*Due to the safety function, it takes approx. 2 seconds until the air flow comes out.


#### 5 Select the level

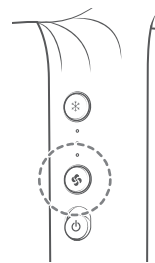


Press and hold the button (approx. 0.5 sec) to select the desired air flow/speed from Gentle, Medium and Fast.

### CAUTION

- Do not block the air inlet of the dryer or place it on a soft surface that may block the air inlet. Doing so may cause the dryer to overheat, which would trigger the dryer's safety mechanism to automatically shut off.

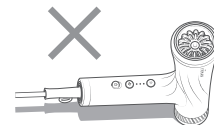

## 6 Turn off the power

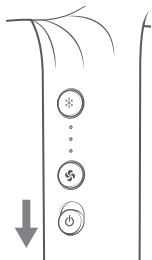


Slide the switch downwards to turn off the power.

## SCALP LIFT

<Suggested usage time: approx. 2.5 minutes>

Place the Scalp lift directly onto your scalp.

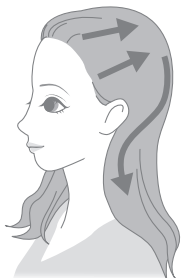

- Gently lift the scalp with the dryer and move from front to back towards the crown of the head. Then move from the crown of the head towards the base of your neck.
- Make sure not to get any hair product residue on the dryer.
- Scalp Lift mode can be used on wet or dry hair.

## STYLING (without Scalp lift attachment)

Blow-dry your hair overall.



- To activate the cool shot, press and hold (approx. 0.5 sec) the cool shot button. To deactivate it, press the button again.
- Red LED Therapy will turn off while using cool air flow.

---

## CAUTION

- Do not use continuously on one area of the scalp.
- Do not use scalp lift mode more than 5 minutes a day in total. 2.5 minutes daily is recommended.




## ■ MAINTENANCE (AFTER USING THE DRYER)

### 1 Turn the dryer off and remove the plug from the wall socket

Turn the dryer off by sliding the power switch downward, then remove the plug from the wall socket.

### 2 Once the dryer has completely cooled down, store it in a dry location.

- Do not wrap the power cord around the dryer when storing.

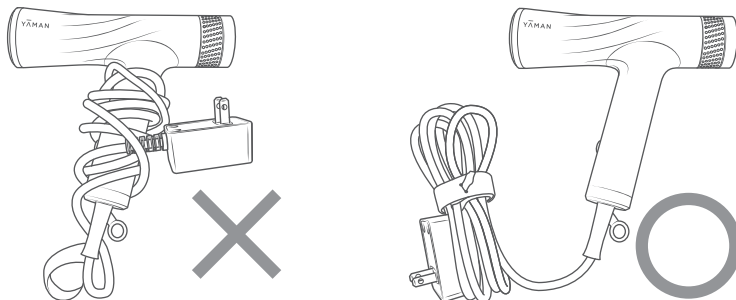

## HOW TO CLEAN YOUR DRYER

Clean your dryer regularly to maintain its performance.

### Dryer Exterior

#### Wipe away any surface dirt with a dampened, well wrung cloth

- For stubborn stains, wipe with a sponge or cloth soaked in a diluted neutral detergent. Wipe again with a clean damp cloth to remove any remaining detergent, then wipe well with a dry cloth.
- Always wipe off any hair styling residue. Failure to do so may cause discoloration or peeling of the surface coating.

### Scalp Lift Attachmnet

#### Regularly move any hairs or dust, etc. on the Scalp lift attachment

- The Scalp lift attachment cannot be washed with water. Wipe away any dirt with a dampened, well wrung cloth.

### CAUTION


- Do not wipe the dryer with alcohol, thinner, benzene, nail polish remover, kerosene or other solutions, chemicals, or polishing powders, etc.
- Unplug your dryer from the wall socket and allow to cool down before cleaning.



## Air inlet port


Do this at least once a month to use safely.

### 1 Remove the air inlet port cover

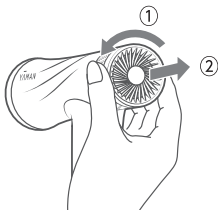


Turn the air inlet port cover counterclockwise and pull away from the air inlet port.

### 3 Remove any dust, hair, etc.

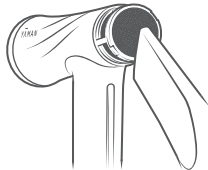


Place the vacuum cleaner nozzle on the air inlet port to remove any dust, hair, etc.

### 2 Remove the air inlet port ring

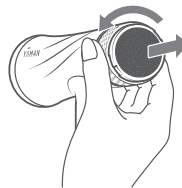

Rotate the air inlet port ring counterclockwise and pull away from the air inlet port.


### 4 Reattach the air inlet port ring

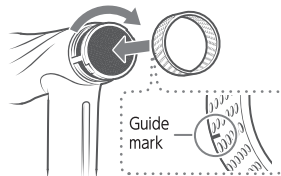

Rotate the air inlet port ring clockwise to put it back into position.

- Make sure the side with guide mark is facing the dryer.

## 5 Reattach the air inlet port cover

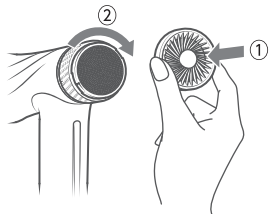


Put the air inlet port cover on the dryer and turn it clockwise until you hear a click.

- Pull the air inlet port cover to check that it is firmly attached. If the air inlet port cover comes off, make sure the air inlet port ring is all the way in.

## STORAGE

- Store in a clean, well-ventilated location and keep out of reach of children.
- Clean the dryer before storing if you do not plan to use it for a long period of time (refer to “How to Clean Your Dryer” on page 22).
- Turn the dryer off and unplug it from the wall socket when not in use.
- Avoid storing the dryer near a stove or heater, warm and humid places such as bathrooms, and places that are exposed to direct sunlight.
- Do not store the dryer with the power cord wrapped around.

Especially make sure that the base of the cord is not bent. If bent repeatedly, it may cause disconnection.

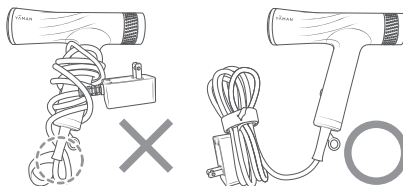

## MAINTENANCE AND INSPECTION

- If the dryer has not been used for a long period of time, be sure to check that it works properly and safely before using it again.
- If the dryer gets wet, wipe away any residue with a dry cloth and ensure that it is completely dry before using it.
- If the dryer stops working properly, refer to “Troubleshooting” (page 28) to confirm symptoms before requesting a repair.
- If the dryer malfunctions or is damaged, contact customer service.

## INSPECT YOUR DRYER REGULARLY

Dryers have a service life. Please inspect your dryer regularly.

If you notice the following types of abnormality, cease use immediately and consult the distributor where you purchased the dryer.

- The air flow sometimes stops when you move the dryer during use.
- No air flow coming out.
- There is a burning smell.
- The dryer is extremely hot.
- A strange noise can be heard during use.
- A screw has come loose and the housing is open or partially deformed.
- The red LED does not illuminate when using hot air flow.

## SERVICING OF DOUBLE-INSULATED APPLIANCES

In a double-insulated appliance, two systems of insulation are provided instead of grounding. No grounding means is provided on a double-insulated appliance, nor should a means for grounding be added to the appliance. Servicing a double-insulated appliance requires extreme care and knowledge of the system, and should be done only by qualified service personnel. Replacement parts for a double-insulated appliance must be identical to the parts they replace. A double-insulated appliance may be marked with the words "DOUBLE INSULATION" or "DOUBLE INSULATED." The symbol (square within a square) may also be marked on the appliance.

# GROUND FAULT CIRCUIT INTERRUPTER INSTRUCTIONS



This message is about...

## GROUND FAULT CIRCUIT INTERRUPTERS

...can save a life!

### IF YOU MUST USE YOUR HAIR DRYER IN THE BATHROOM, INSTALL A GFCI\* NOW!

Your local electrician can help you decide which type is best for you – a portable unit that plugs into the electrical outlet or a permanent unit installed by your electrician. The National Electrical Code now requires GFCIs in the bathrooms, garages, and outdoor outlets of all new homes.



### WHY DO YOU NEED A GFCI?

Electricity and water don't mix. If your hair dryer falls into water while it's plugged in, the electric shock can kill you...**even if the switch is off.** A regular fuse or circuit breaker won't protect you under these circumstances. A GFCI offers you far greater protection.

**A GFCI can save your life! Compared to that, the price is small! Don't wait...install one now!**

\*A GFCI is a sensitive device that reacts immediately to a small electric current leak by stopping the electricity flow.

## ■ TROUBLESHOOTING

Symptoms	Possible Cause and Solution
<ul style="list-style-type: none"><li>● Power does not turn on</li><li>● Power shuts off</li></ul>	<ul style="list-style-type: none"><li>● Do not use an extension cord and make sure the plug is firmly inserted into the wall socket.</li><li>● If the power cord is damaged, request a repair/inspection.</li></ul>
<ul style="list-style-type: none"><li>● Air flow alternates between hot and cool</li><li>● Sparks can be seen from the air outlet (sparks are due to the activation of the safety switch and are not a malfunction)</li><li>● The air flow is extremely hot</li></ul>	<ul style="list-style-type: none"><li>● Check to make sure there is no dust, hair or other blockage in the air inlet port (page 23).</li><li>● The air inlet port may have been blocked by hair or your hand. Make sure not to block the air inlet port when using the dryer.</li></ul>
<ul style="list-style-type: none"><li>● The plug is extremely hot</li></ul>	<ul style="list-style-type: none"><li>● Check to make sure that the wall socket is 15A or higher.</li><li>● Do not use an extension cord and make sure that the plug is firmly inserted into a wall socket.</li></ul>
<ul style="list-style-type: none"><li>● No air coming out</li></ul>	<ul style="list-style-type: none"><li>● The safety switch may have been activated. Request a repair/inspection.</li></ul>



## ■ FAQ

Q Air doesn't come out right after turning on. Is this a malfunction?

A No, this dryer is designed to check the internal system and temperature as a safety function before blowing air and is not a malfunction.

Q What should I do if the air inlet port cover or ring breaks?

A The air inlet port ring and cover are not covered by the free repair warranty. Please contact customer service where you purchased the dryer about purchasing an extra cover or ring.

Q How many minutes a day do you recommend using Scalp lift mode?

A We recommend using it once a day for 2.5 minutes (up to 5 minutes at maximum).

Q Unusual smell?

A It is normal to expect a smell from a brand new with a heater element (e.g. toaster/oven/kettle) within the first few uses. The smell will fade with time and usage.

## ■ PRODUCT SPECIFICATIONS

Rated Power Supply	AC120V 60Hz
Power Consumption	1200W
Outer Dimensions	W2.28 x D7.91 x H7.20 in Cord length: 9 ft
Weight	Approx. 0.86 lb (excluding power cord)
Materials	Dryer: Polycarbonate, ABS plastic, PPS Scalp lift attachment: Polycarbonate, silicon rubber Air concentrator: PPS
Country of Origin	PRC
Accessories	1 Scalp lift attachment 1 Air concentrator attachment User's Manual

## ■ DISPOSAL INFORMATION

- Follow your local government rules on separation of trash for proper disposal of this product.

Distributed by  
YA-MAN U.S.A. LTD  
San Diego, CA 92121  
[www.ya-manusa.com](http://www.ya-manusa.com)  
Customer Service: [contactus@ya-man.com](mailto:contactus@ya-man.com)

©2023 YA-MAN LTD. ALL RIGHTS RESERVED. Unauthorized copying or reproduction is prohibited.