

INSTALLATION INSTRUCTIONS - INS103

FUEL RAIL KIT

Part # 5010 // Ford Mustang 5.0L



SPECIAL TOOLS REQUIRED: Hose Cutter, T-20 Torx, Ratchet, Allen Wrench set, Phillips head screwdriver, 5/16" & 1/2" sockets and Fuel Line Disconnect tool (spring lock type)



INSTALL TIME: Approximately 2 hours.



DIFFICULTY: Average.



WORKING WITH FUEL SYSTEMS IS HAZARDOUS.
Extinguish any open flames and ignition sources when working with gasoline and vapors.
Always wear protective eye-wear!

MADE IN U.S.A.

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.

UPDATED LAST: March 2019



FOLLOW THESE INSTRUCTIONS CAREFULLY TO ENSURE CORRECT FITMENT AND OPERATION

STEP 1

Disconnect negative battery terminal.

STEP 2

Remove intake hose between the mass air meter and throttle body.

STEP 3

Remove the distributor. (Use a marker pen to mark the position of the rotor on the lower cup of the distributor. Also note where the distributor base is at the engine block. Your distributor should have a hash mark on it for ease of reference. This will help reassembly)

STEP 4

If your intake manifold has a decorative plate (5.0 H.O.) on top, you will need to remove the plate. Use the T-20 Torx to remove the screws. Unclip the wiring harness locator from the manifold.

STEP 5

Disconnect the electrical, coolant, vacuum, and cable connections at the throttle body, EGR valve, fuel pressure regulator, IAC valve, and the upper intake manifold. (Some of the vacuum lines are underneath and behind the upper manifold)

STEP 6

Using a ½" socket and extension remove the upper intake manifold bolts. Slide the manifold towards the front of the car and disconnect the vacuum lines that attach to the rear of the manifold and the PCV. Remove the upper manifold.

STEP 7

Unplug the wiring harness from the fuel injectors (Be sure to only pull on the plastic plugs, never pull by the wires.)

WARNING!

FUEL SYSTEM MAY BE UNDER PRESSURE. USE EXTREME CAUTION WHEN RELEASING PRESSURE. EXTINGUISH ALL OPEN FLAMES AND IGNITION SOURCES.

STEP 8

Remove the black plastic cap on the fuel feed line near the front end of the passenger side valve cover (near oil filler cap). While holding a rag over the valve to avoid fuel spray, carefully release any fuel system pressure by depressing the Schrader valve using a small screwdriver or pick.

STEP 9

Use the fuel line disconnect tools to separate the fuel feed and return lines from the injector rails.

STEP 10

Unbolt and remove the injector rails from the lower manifold (The fuel rails will have excess fuel in them, use caution when removing to avoid spillage)

STEP 11

Remove the fuel injectors from the lower manifold. (Check each injector to make sure that both of the O-rings are in place. The O-rings have a tendency to get stuck in the fuel rails)

MADE IN U.S.A.

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.

UPDATED LAST: March 2019



FOLLOW THESE INSTRUCTIONS CAREFULLY TO ENSURE CORRECT FITMENT AND OPERATION

STEP 12

Separate the fuel pressure regulator from the stock fuel rail. (Skip this step if you are installing an after market regulator).

STEP 13

Inspect the injector tips and O-rings for cracks or damage. If you have any questionable items we recommend replacing them (available through auto parts stores).

STEP 14

Install the supplied mounting tabs onto the fuel rails using 8 of the 9 supplied 10-32 x 5/8" button head screws.

STEP 15

Assemble the fuel pressure regulator mount and your choice of regulator using the 3 supplied screws and regulator-to-mount gasket.

STEP 16

Place one of the supplied O-rings into the groove in the bottom of the regulator mount and install the fuel pressure regulator/mount assembly onto the rear of the passenger side rail. Fasten it to the rail using the supplied 6-32 x 3/4" screws.

STEP 17

Place the remaining O-ring over the fuel rail end cap and push the cap into the front end of the driver side rail. Secure it using the remaining 10-32 x 5/8" button head screw.

STEP 18

Thread the 1 of the supplied 90° fittings into the rear of each fuel rail until snug. Then continue tightening until the outlets will face each other once the rails are installed.

STEP 19

Push one end of the supplied crossover hose fully onto one of the 90° fittings.

STEP 20

Thread the long pre-assembled hose into the regulator mount until its snug. Then tighten it until it is following the rail forward to meet up with the stock fuel return line.

STEP 21

Thread the short pre-assembled hose into the front end of the passenger side rail until its snug. Then tighten it until it is pointing towards the passenger side of the car to meet up with the stock fuel feed line.

STEP 22

Insert the injectors into the rails (we recommend lightly lubricating the outside of each O-ring to ensure proper seating).

STEP 23

(Follow for both rail/injectors assemblies) carefully guide each injector into its injector port on the lower manifold. Tighten the supplied fasteners through the fuel rail mounting tabs and into the lower manifold.

 **MADE IN U.S.A.** 

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.

UPDATED LAST: March 2019



FOLLOW THESE INSTRUCTIONS CAREFULLY TO ENSURE CORRECT FITMENT AND OPERATION

STEP 24

Determine the proper length for the crossover hose and cut it to fit. Push the cut end fully onto the other 90° fitting (if necessary, rotate the fittings to line up.)

STEP 25

Connect the spring lock fittings on the fuel rails and regulator to the stock fuel feed and return lines.

TESTING THE FUEL RAILS FOR LEAKS

TO AVOID SHOCK/ FIRE/WORSE, WE STRONGLY RECOMMEND FOLLOWING THE INSTRUCTIONS FOR THE NEXT PROCEDURE CLOSELY!

STEP 1

Disconnect the electrical connector from the ignition coil (this may require removing the plastic cover located between the battery and the strut tower).

STEP 2

If the car has automatic door locks or an alarm, be sure to leave the driver door open while following this step. Otherwise the doors might lock with the key in the ignition). With the negative battery cable disconnected turn the ignition key to the on position. While watching the fuel rails and connections, touch the negative battery cable to the negative terminal of the battery for 3 seconds then stop. (This will turn the fuel pump on momentarily and pressurize the fuel rails. If you have any leaks in the connections or fittings this will allow you to find and repair them before you put the upper intake manifold back on). Once you have verified that there are no fuel leaks in your system turn the key back to off.

STEP 3

Re-install the upper intake manifold and re-establish all electrical, coolant, vacuum, and cable connections at the throttle body, EGR valve, IAC valve, ignition coil, and the upper intake manifold.

STEP 4

If you followed STEP 3; re-install the lower cup, rotor, cap, and distributor wires.

 MADE IN U.S.A. 

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.

UPDATED LAST: March 2019

BBK PERFORMANCE LLC / For any questions, email us:
3060 Performance Circle / TECH@BBKPERFORMANCE.COM
Deland, FL 32724



FOLLOW THESE INSTRUCTIONS CAREFULLY TO ENSURE CORRECT FITMENT AND OPERATION

STEP 5

Connect the intake hose between the mass air meter and throttle body.


STEP 6

Re-connect the negative battery terminal.

KIT LAYOUT



KIT INSTALLED WITH OPTIONAL REGULATOR SHOWN

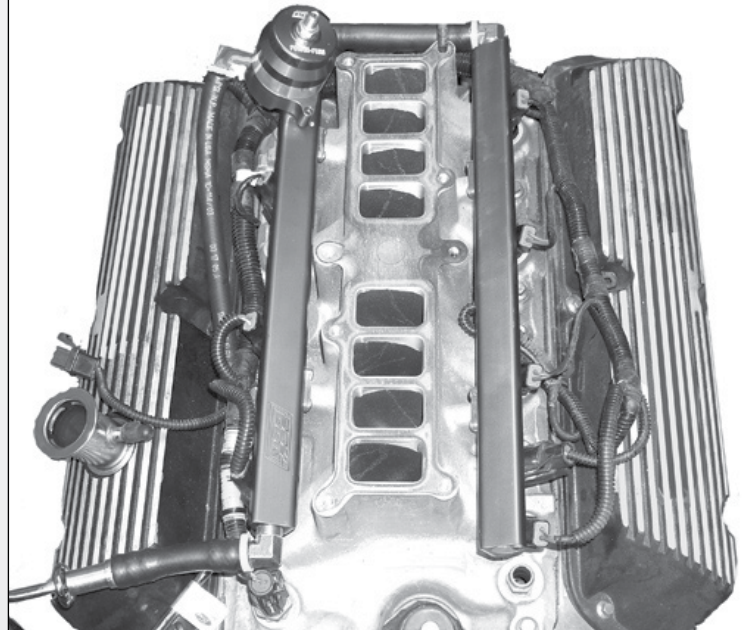

PASSENGER SIDE RAIL ASSEMBLED



*OPTIONAL REGULATOR SHOWN

MADE IN U.S.A.

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.

UPDATED LAST: March 2019

