





Android


iOS


Exway APP Scan the QR code for more details



- 1. Please read and understand the user manual before riding your Exway electric skateboard. You are responsible for the operation and control of the electric skateboard and you must know how to control it before you ride.
- Exway board you risk great bodily injury, disability, or death from loss of control, collision or falls
- 3. The Exway electric skateboard can lose connection with the remote control. If this happens the skateboard becomes a non motorized longboard. Please always ride within your ability to control the board in case power loss occurs. Prepare to lose your ability to
- 4. Skate only in an open area free from vehicles and pedestrian traffic, and other physical obstacles. You are responsible for learning the basic features of the board such as braking, accelerating, and switching gears. Always wear a helmet and full protective gear while
- 5. Do not ride on slippery or uneven surfaces. Only ride in areas with good visibility. Avoid riding in close proximity to vehicle and pedestrian traffic.
- 7. Please refer to the Exway APP or the official website for the latest version of the product

Screen: OLED 0.9 inch Wireless Solution: 2.4GHz Input Voltage: 5V= 1A

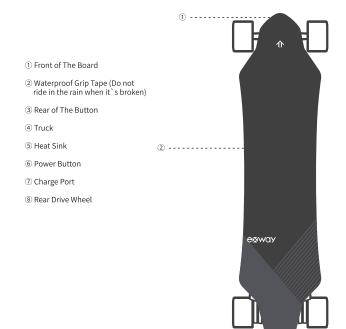

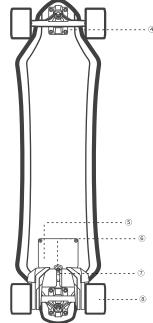

Max. Speed: 45km/h Max. Climbing Grade: 30% / 16.8° Range: 25km Gross Weight: 7.3±0.2kg Torque: 5.2Nm × 2 Maximum Power: 1500W × 2 Rated Motor Power: 750W × 2 Rated Charger Power: 75W Input Voltage: 100-240VAC,50/60Hz Battery Capacity: 193Wh Charging Time: 2h 45min Truck: Seismic Aeon 45° Braking Mode: Regenerative Braking Applicable Age Range: 16 ~ 50 Years old Maximum Load: 200kg / 440lbs Water Proof Level: IP55

The state of the indicator lights:



The board turned on/Pairing



Red Light Charging



Flashing red and green lights



Flashing red light Low Battery (Fast) Disconnection(Low)

! SAFETY WARNING:

- 1. When the skateboard battery has 5% left, the power output will be cut off to better protect the battery. (In free mode, both the power output and brakes will be restricted)
- 2. Connect the magnetic port on the charger to the power button on the board before plugging into the wall outlet. (Only use an original Exway charger)



⚠ SPECIAL NOTES:

- 1. The Exway board can be fully charged in about 2 hours 45 minutes. When fully charged, the battery charger indicator light is green.
- 2. Please refer to the Exway APP or the official website for the latest version of the product manual

Security Warning & Disclaimer


- 2. Riding an Exway electric skateboard is extremely dangerous. Whenever you ride your

- 6. The Exway electric skateboard is not a toy and is not intended for children under 16.

① Accelerating(Roll the remote wheel forward) 2 Roller

③ Braking (Roll the remote wheel backward)

4 Multifunctional Button A

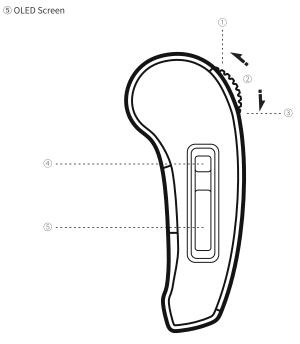

How to operate the remote:



· Long press button A for 3S to turn it on



· Short press A to switch gears



accelerate androll the remote wheel



Short press button A for 3 times

02. Long press the remote button A for 5S,enterring into the setting mode

REPAIR

YES NO

04. Choose the corresponding Exway

How to RE-PAIR the remote and the Exway board:



01. Completely turning off the Exway board and then longpress the board' s power button for 8S to enter into paring mode



03. Choose the first option "RE-PAIR'



Exway X1 Riot



Product List:

2.0mm Allen Wrench





T Skate Tool

2.5mm Allen Wrench







Belt $\times 2$



Charger

Product Manual

Please log onto www.exwayboard.com or follow Exway App for more information.