


**CHEFMAN**<sup>®</sup>

---

**CORDLESS GLASS**  
**ELECTRIC**  
**KETTLE**

**USER GUIDE**

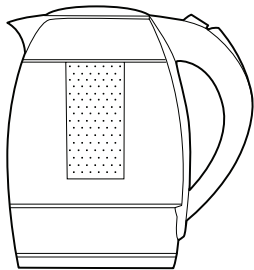

# COOKING FORWARD

**Thanks for purchasing a Chefman® appliance.**

Love to cook or rarely enter the kitchen? We've got you covered. Creating innovative kitchen appliances and guides for all skill levels just so happens to be our expertise.

Saving time, reducing stress and cooking more efficiently are just a few things to enjoy as you create restaurant-quality meals using our products. You'll embrace a new world of culinary possibilities and cook with confidence. We like to call this the cooking forward effect!

So go ahead, promote yourself from cook to head chef in your household. (You deserve it!)

From our kitchen to yours,  
**Chefman® Team**



## **READ ALL INSTRUCTIONS BEFORE USE**

**For your safety and continued enjoyment of this product, always read the instruction manual before using.**

# **INTRODUCTION**

We're so happy you've chosen the Chefman Cordless Glass Electric Kettle as your newest kitchen essential. Before you get started using it for all your favorite drinks, please read this User Guide in full.

# **CONTENTS**

- 1** Safety Instructions
- 6** Features
- 7** Operating Instructions
- 9** Cleaning and Maintenance
- 11** Terms and Conditions
- 13** Chefman® Warranty Registration

# SAFETY INSTRUCTIONS

## IMPORTANT SAFEGUARDS

This appliance is for **HOUSEHOLD USE ONLY**.

When using an electrical appliance, basic safety precautions should always be taken, including the following:

1. READ ALL INSTRUCTIONS.
2. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning appliance.
3. Do not touch hot surfaces. Use handle.
4. To protect against fire, electric shock and injury to persons, **DO NOT IMMERSE CORD, PLUG, BASE, OR UNIT** in water or other liquids.
5. Close supervision is necessary when the kettle is used by or near children.
6. Do not operate any appliance with a damaged cord or plug, or after the kettle has malfunctioned or has been damaged in any manner. In such instances, contact Chefman Customer Support.
7. The use of accessory attachments not recommended by Chefman may result in fire, electric shock or injury to persons.

# SAFETY INSTRUCTIONS

## IMPORTANT SAFEGUARDS

8. Do not use outdoors.
9. Do not let power cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heatable oven.
11. Always put kettle on base, then plug cord into wall outlet. To disconnect, press the power button, then remove plug from wall outlet.
12. Do not use the kettle for other than its intended use.
13. Scalding may occur if the lid is opened during the heating cycle.
14. Ensure lid is securely closed before serving any beverages.
15. The kettle is designed for use with this appliance. It must never be used on a range top. (Unless specific instructions for use on a range top are provided and include the precautions to be observed.)
16. Do not set a hot container on a wet or cold surface.

# SAFETY INSTRUCTIONS

## IMPORTANT SAFEGUARDS

17. Do not use a cracked container or a container having a loose or weakened handle.
18. Do not clean container with cleansers, steel wool pads, or other abrasive material.
19. Never operate the kettle on a gas or electric stovetop, even if the stovetop is off and completely cool.

## SAVE THESE INSTRUCTIONS

# SAFETY INSTRUCTIONS

## IMPORTANT SAFEGUARDS

**WARNING:** This appliance has a polarized plug (one blade is wider than the other). This plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way or force it into the outlet. This could result in injury or electric shock.

### SHORT CORD INSTRUCTIONS

A short power supply cord is provided to reduce the hazards of entanglement or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply extension cord is used:

1. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
2. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.



# SAFETY INSTRUCTIONS

## IMPORTANT SAFEGUARDS

### POWER CORD SAFETY TIPS

3. Never pull or yank on cord or the appliance.
4. To insert plug, grasp it firmly and guide it into outlet.
5. To disconnect appliance, grasp plug and remove it from outlet.
6. Before each use, inspect the power cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced, and the power cord replaced. Please contact Chefman Customer Support for assistance.
7. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.

**DO NOT OPERATE APPLIANCE IF THE POWER CORD SHOWS ANY DAMAGE OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.**

California Proposition 65:  
(Applicable for California Residents only)




**WARNING:**  
Cancer and Reproductive Harm -  
[www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).



**Do not place the appliance on a stovetop or any other heatable surface.**

# FEATURES

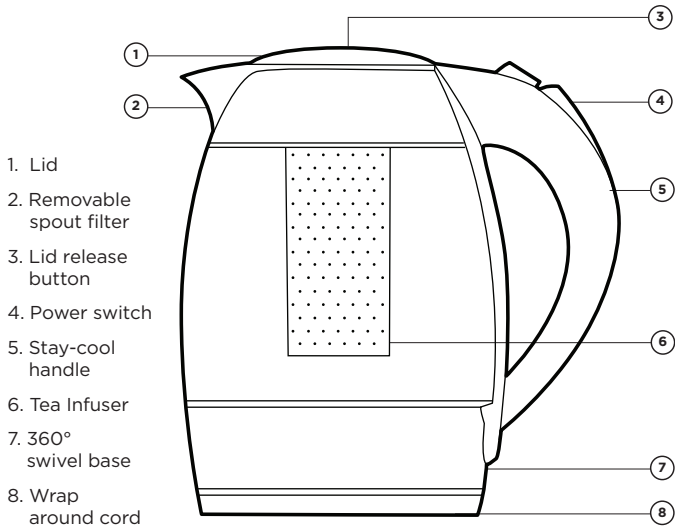

# OPERATING INSTRUCTIONS

## CLEANING THE KETTLE FOR FIRST USE

Remove all packing and materials. Be sure that all parts are included before discarding any packaging.

1. Pull out the power cord from the compartment under the base, and place base on a flat surface.
2. Open the lid, then fill kettle with water to the MAX line.
3. Close the lid, and place the kettle back on the base unit, and plug into a power outlet.
4. Switch the kettle on by pressing the switch to the "I" position, the blue LED light inside the glass jar will illuminate to indicate the water is heating.
5. The kettle will automatically switch to the "O" position once the water has boiled and the blue LED indicator light has gone off.
6. Empty the kettle then rinse the kettle with clean water. It is now ready for use.

**NOTE:** Never fill the water above the MAX line or below the MIN line indicated on the glass jar.

# OPERATING INSTRUCTIONS

## MAKING TEA

1. Remove tea infuser from kettle by grasping the handle of the tea infuser and pulling upwards.
2. Add fresh, cold water to the kettle, filling it at least to the MIN line but not above the MAX line. Place kettle securely onto base and insert plug into an outlet.
3. Insert tea infuser into the kettle and ensure it is securely in place.
4. Flip the power switch to "I" on position to initiate boiling. The switch will automatically flip to "O" off position when the water has boiled. Once water has boiled, open lid and carefully add tea leaves or tea bags to the tea infuser. Securely close the lid.

**WARNING:** Use extreme caution when adding tea leaves. The kettle is very hot.

5. Tea should steep an average of 4 minutes. Steeping too long will cause the tea to become bitter.
6. Carefully remove the infuser from the kettle by opening the lid and pulling upwards on the infuser handle.

**CAUTION:** The infuser will be hot. Handle with care.

## **CLEANING AND MAINTENANCE**

Unplug the kettle and allow it to cool completely before cleaning. When needed, clean the kettle by removing the infuser and rinsing the inside with soapy water. Rise thoroughly before use.

Due to minerals in water, deposits may form on the base of the kettle and cause discoloration.

To remove mineral deposits on the bottom of the kettle:

Combine 3 cups of water with 1 cup of distilled white vinegar and bring to a boil. Wipe the bottom of the kettle and rinse thoroughly before use.

Tea infuser and spout filter are top-rack dishwasher safe.

For best results, dry all parts between uses.

Never immerse kettle or power base in water.



# TERMS & CONDITIONS

## Limited Warranty

Our products are backed by a limited 1-year warranty. To register, follow the instructions on the Chefman Warranty Registration page in this User Guide.

We offer a limited 1-year warranty from the date of purchase. This warranty is void without proof of purchase within the USA, Canada or Mexico. Service centers and retail stores do not have the right to alter or change the Terms & Conditions of this warranty.

## WHAT THE WARRANTY COVERS

- **Manufacturer Defects**

Chefman products are warranted against defects in material and workmanship for a period of 1 year from the date of purchase, when used in accordance with the Chefman User Guide.

- **Qualified Replacements**

If your product does not work as it should, we will send you a new one. If the product is no longer available, we will replace it with one that is comparable.

# TERMS & CONDITIONS

## Limited Warranty

### THIS WARRANTY DOES NOT COVER


- **Misuse** - Damage that occurs from neglectful or improper use of products; damage that occurs as a result of usage with incompatible voltage. See Safety Instructions for information on proper use.
- **Poor Maintenance** - General lack of proper care. See Cleaning & Maintenance Instructions for information on proper maintenance.
- **Commercial Use** - Damage that occurs from commercial use.
- **Altered Products** - Damage that occurs from alterations or modifications by any entity other than Chefman®; removal of rating label.
- **Catastrophic Events** - Damage that occurs from fire, floods, or natural disasters.
- **Loss of Interest** - Claims of loss of interest or enjoyment.



# CHEFMAN® WARRANTY REGISTRATION

Register your product to add an additional 3 months to your warranty.

## What do I Need to Register my Product?

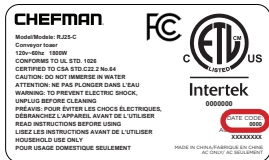

- Contact Information
- Model Number
- Proof of Purchase  
(online confirmation, receipt, gift receipt)
- ←•Date code

## How Do I Register my Product?

We offer 2 convenient ways to access the Chefman registration form:

1. Visit [chefman.com/register](http://chefman.com/register).
2. Scan the QR code below to access site:



# CHEFMAN® WARRANTY REGISTRATION

## Have a Question?

Please reach out to us at [Chefman.com/contact](http://Chefman.com/contact).

## Need More Help?

We're here for you! Contact us at [customersupport@chefman.com](mailto:customersupport@chefman.com) or 888.315.6553 Monday-Friday.

OTHER LIMITATIONS: ALL WARRANTIES OF ANY KIND WHATSOEVER, EXPRESS, IMPLIED AND STATUTORY, ARE HEREBY DISCLAIMED. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED, PROVIDED THAT IF ANY IMPLIED WARRANTIES OF ANY KIND IS REQUIRED BY ANY JURISDICTION, INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, THE DURATION OF SUCH IMPLIED WARRANTY IS LIMITED TO ONE (1) YEAR. THIS WARRANTY DOES NOT COVER, AND CHEFMAN® SHALL NOT BE LIABLE, FOR INCIDENTAL, INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES, INCLUDING WITHOUT LIMITATION, DAMAGE TO, OR LOSS OF USE OF THE PRODUCT, OR LOST SALES OR PROFITS OR DELAY OR FAILURE TO PERFORM THIS WARRANTY OBLIGATION. THE REMEDIES PROVIDED HEREIN ARE THE EXCLUSIVE REMEDIES UNDER THIS WARRANTY, WHETHER BASED ON CONTRACT, TORT OR OTHERWISE.

This Warranty gives you specific legal rights, and you may also have other rights that vary from state to state or Province to Province. Some states or Provinces do not allow the exclusions or limitations set forth in this Warranty, so the above limitations or exclusions may not apply to you depending on the jurisdiction of purchase.

Chefman® is a registered trademark of RJ BRANDS, LLC.

**CHEFMAN®**



**CHEFMAN.COM | @MYCHEFMAN**

©CHEFMAN 2019