


CHEFMAN

EASY-STEEP 1.8L KETTLE

USER GUIDE

- Safety Instructions
- Features
- Operating Instructions
- Cleaning and Maintenance
- Notes
- Terms and Conditions
- Warranty Registration

 RJ11-17-TI-RL

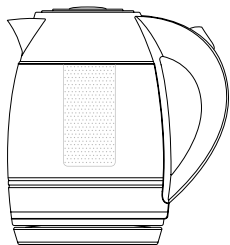

COOKING FORWARD™

Welcome!

Whether this is your first Chefman® appliance or you're already a part of our family, we're happy to be in the kitchen with you. The Easy-Steep 1.8L Kettle was designed to easily brew tea or quickly bring a pot of water to a boil for other hot beverages. Perfect for at home or in the office, the kettle's rapid-boil technology means you can be steeping in mere minutes. The blue LED indicator lights that run along the bottom of the kettle make it easy to see at a glance that your water is ready.

We know you're excited to start sipping, but please take a few minutes to read our directions, safety instructions, and warranty information.

From our kitchen to yours,
The Chefman® Team



READ ALL INSTRUCTIONS BEFORE USE

For your safety and continued enjoyment of this product, always read the instruction manual before using.

CONTENTS

- 4** Safety Instructions
- 8** Features
- 9** Operating Instructions
- 12** Cleaning and Maintenance
- 13** Notes
- 16** Terms and Conditions
- 18** Warranty Registration

SAFETY INSTRUCTIONS

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electrical shock, and injury to persons, do not immerse the cord, plug, charging base, or unit in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from the outlet when not in use and before cleaning. Allow the appliance to cool before putting on or taking off parts, and before cleaning.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. If this should occur, contact Chefman® Customer Support.
7. The use of accessory attachments not recommended by Chefman® may result in fire, electrical shock, or injury to persons.
8. Do not use outdoors.
9. Do not let the cord hang over the edge of a table or counter or touch hot surfaces.

SAFETY INSTRUCTIONS

IMPORTANT SAFEGUARDS

10. Do not place the unit near or on any type of heat source, such as a gas or electric burner, stove, or oven, even if not on. Do not use near an open flame or flammable materials.
11. To disconnect, turn any control to off, then remove the plug from the wall outlet.
12. Do not use the appliance for other than its intended use.
13. Scalding may occur if the lid is opened during the heating cycle.
14. Ensure the lid is securely closed before serving any beverages.
15. Do not set a hot container on a wet or cold surface.
16. Do not use a cracked container or a container having a loose or weakened handle.
17. Do not clean the container with cleansers, steel wool pads, or other abrasive materials.

California Proposition 65:
(Applicable for California Residents only)



WARNING:
Cancer and Reproductive Harm -
www.P65Warnings.ca.gov.



Do not place the appliance on a stovetop or any other heatable surface, even if the stovetop is not on. Doing so is a fire hazard.

SAFETY INSTRUCTIONS

IMPORTANT SAFEGUARDS

WARNING: This appliance has a polarized plug (one blade is wider than the other). This plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way or force it into the outlet. This could result in injury or electrical shock.

SHORT CORD INSTRUCTIONS

A short power-supply cord is provided to reduce the hazards of entanglement or tripping over a longer cord. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply extension cord is used:

1. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
2. The cord should be arranged so that it will not drape over a countertop or tabletop, where it can be pulled on by children or tripped over unintentionally.

SAFETY INSTRUCTIONS

IMPORTANT SAFEGUARDS

POWER CORD SAFETY TIPS

 
1. Never pull or yank on the cord or the appliance.
2. To insert the plug, grasp it firmly and guide it into the outlet.
3. To disconnect the appliance, grasp the plug and remove it from the outlet.
4. Before each use, inspect the power cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced and the power cord replaced. Please contact Chefman® Customer Support for assistance.
5. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.

DO NOT OPERATE APPLIANCE IF THE POWER CORD SHOWS ANY DAMAGE OR IF THE APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

FEATURES

1. Spout (with Filter)
2. Lid
3. Power Switch
4. Stay-Cool Handle
5. Tea Infuser
6. 360° Swivel Power Base
7. Wrap-Around Cord Storage

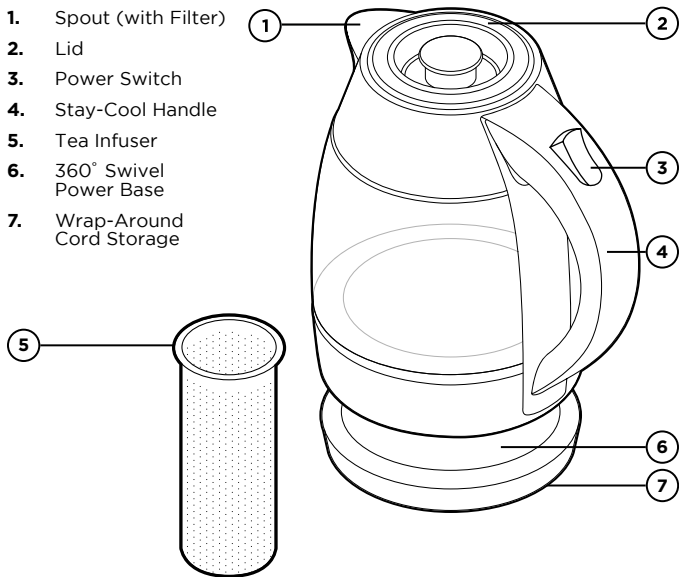

OPERATING INSTRUCTIONS

BEFORE FIRST USE

To rinse the pot of any packing debris, “brew” a pot of plain water without tea. To do so, follow the directions below.

1. Remove all packing materials. Be sure that all parts are included before discarding any packaging.
2. Pull out the power cord from the compartment under the base, and place base on a flat surface. (Make sure the power cord comes out of the opening in the base so the unit can sit level.)
3. To rinse the pot of any manufacturing residue, “brew” a pot of plain water without tea. To do so, lift off the lid and fill the kettle with water to the MAX line.
4. Put the lid with the infuser attached (but empty) back in the kettle. Place the kettle on the base unit, and plug into a power outlet.
5. Switch the kettle on by pressing the power switch on (the “I” position). The blue LED lights inside the kettle will illuminate to indicate the water is heating.
6. Once the kettle boils, the blue indicator lights will turn off, and the kettle will automatically switch off to the “O” position.
7. Empty the kettle (discard the water), then rinse it with fresh water.

OPERATING INSTRUCTIONS

HOW TO MAKE TEA WITH TEA INFUSER

1. Remove the infuser from the lid by twisting it and sliding it in the direction indicated on the lid.
2. Add fresh, cold water to the kettle to at least the MIN line and not past the MAX line.
3. Fill the infuser with tea. Use loose tea (about 2 teaspoons per cup) or tea bags based on the amount of water you are heating. (Wait to insert the infuser until the kettle has come to a boil.)
4. Switch the kettle on by pressing the switch to the “I” position; the blue LED lights inside the kettle will illuminate to indicate the water is heating.
5. Once the water has boiled and the blue lights have turned off, carefully lift off the kettle lid. Slide the tea-filled infuser onto the underside of the lid (a slight twist helps), insert it into the kettle, and press the lid to close.
6. Let tea steep according to directions or as you like. When finished steeping, carefully remove the infuser by lifting off the lid. If you would like to return the lid to the kettle, let the infuser cool (you can run it under water), then carefully twist/pull it off, and return the lid (without the infuser) to the kettle; press to close.

OPERATING INSTRUCTIONS

HOW TO HEAT WATER WITHOUT MAKING TEA

Follow the directions for making tea with the infuser but leave the tea and infuser out of the kettle. Use hot water as desired.

BOIL-DRY PROTECTION

The Easy-Steep 1.8L Kettle comes equipped with boil-dry protection. While you should never heat the kettle without water at least to the MIN line, should the unit go dry or start without water, it will automatically shut off completely to avoid damaging the heating element. It will not come back on, even if you replace it to the base, until it has cooled down.

CLEANING AND MAINTENANCE

1. Unplug the kettle and allow it to cool completely before cleaning.
2. Clean the interior of the kettle as needed by removing the infuser and carefully rinsing the inside with soapy water. Rinse the inside of the kettle thoroughly. Wipe the outside of the kettle and power base with a damp cloth. **WARNING:** Never immerse the kettle or power base in water or wash in the dishwasher; doing so will damage the unit.
3. To clean the spout filter, rinse it under hot water while gently rubbing with a clean cloth or brush.
4. Wash tea infuser in warm, soapy water and rinse thoroughly; the infuser is not dishwasher safe.

CLEANING AND MAINTENANCE

GENERAL CLEANING NOTE

Reheating tea in your kettle may result in a bronze-colored tea stain on the kettle. This is caused by tea residue that adheres when reheated at high temperatures. To avoid tea-staining, do not reheat the same pot of tea twice and always rinse the inside of your kettle before each brew. To remove the bronze-colored staining, add a small amount of food-grade white vinegar to a fresh kettle full of water and boil. After boiling, allow the kettle to cool, discard the water, and thoroughly wash and dry the kettle before your next use.

DECALCIFYING

Due to minerals in water, deposits may form on the base of the kettle and cause discoloration. To get the best performance from your kettle, decalcify it from time to time. Frequency will depend on the hardness of your water and how often you use the kettle. You can either use a commercial descaler or use vinegar and water and follow the directions below:

1. Fill the kettle with enough white vinegar to cover the bottom by about $\frac{1}{2}$ inch. Heat the vinegar to a boil.
2. Repeat this with fresh vinegar until all deposits are removed.
3. When the descaling process is complete, empty the kettle and rinse it out several times with clean water.

TERMS AND CONDITIONS

Limited Warranty

RJ Brands, LLC d/b/a Chefman® offers a limited 1-year Warranty (the “Warranty”) available on sales through authorized distributors and retailers only. Please note that this Warranty becomes valid from the date of initial retail purchase and that the Warranty is non-transferable and applies only to the original purchaser.

This Warranty is void without proof of purchase within the United States and Canada. Please be aware that this Warranty supersedes all other warranties and constitutes the entire agreement between the consumer and Chefman®. Any changes to the Terms and Conditions of this Warranty must be in writing, signed by a representative of Chefman®. No other party has the right or ability to alter or change the Terms and Conditions of this Warranty.

We may ask you to please submit, via email, photos and/or video of the issue you are experiencing. This is to help us better assess the matter and possibly offer a quick fix. Photos and/or video may also be required to determine Warranty eligibility.

We encourage you to register your product. Registering can make the Warranty process easier and can keep you informed of any updates or recalls on your product. To register, follow the directions on the Chefman® Warranty Registration page in the Chefman® User Guide. Please retain your proof of purchase even after registering. In the event that you do not have proof of your purchase date, we may declare your Warranty void or we may, at our sole discretion, apply the date of manufacture as the purchase date for purposes of this Warranty.

TERMS AND CONDITIONS

Limited Warranty

WHAT THE WARRANTY COVERS

 
- **Manufacturer Defects** - Chefman® products are warranted against defects in material and workmanship, under normal household use, for a period of 1 year from the date of purchase when used in accordance with the directions listed in the Chefman® User Guide. If your product does not work as it should, please contact Customer Support at support@chefman.com so that we may assist you.

THIS WARRANTY DOES NOT COVER

- **Misuse** - Damage that occurs from neglectful or improper use of products, including, but not limited to, damage that occurs as a result of usage with incompatible voltage, regardless of whether the product was used with a converter or adapter. See Safety Instructions in the Chefman® User Guide for information on proper use of product;
- **Poor Maintenance** - General lack of proper care. We encourage you to take care of your Chefman® products so that you may continue to enjoy them. Please see Cleaning and Maintenance directions in the Chefman® User Guide for information on proper maintenance;
- **Commercial Use** - Damage that occurs from commercial use;
- **Altered Products** - Damage that occurs from alterations or modifications by any entity other than Chefman® such as the removal of the rating label affixed to the product;
- **Catastrophic Events** - Damage that occurs from fire, floods, or natural disasters;
- **Loss of Interest** - Claims of loss of interest or enjoyment.

CHEFMAN® WARRANTY REGISTRATION

What do I need to register my product?

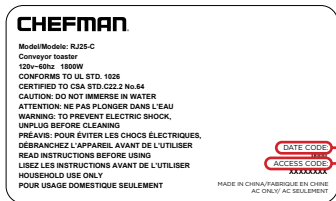

- Contact Information
- Model Number
- Proof of Purchase (online confirmation, receipt, gift receipt)
- Date Code
- Access Code

NOTE: Label depicted here is an example.

How do I register my product?

All you need to do is fill out a simple Chefman® registration form. You can easily access the form in one of the two ways listed below:

1. Visit Chefman.com/register.
2. Scan the QR code to access site:



CHEFMAN® WARRANTY REGISTRATION

For product information

Please visit us at Chefman.com.

EXCEPT WHERE SUCH LIABILITY IS REQUIRED BY LAW, THIS WARRANTY DOES NOT COVER, AND CHEFMAN® SHALL NOT BE LIABLE FOR, INCIDENTAL, INDIRECT, SPECIAL, OR CONSEQUENTIAL DAMAGES, INCLUDING WITHOUT LIMITATION, DAMAGE TO, OR LOSS OF USE OF THE PRODUCT, OR LOST SALES OR PROFITS OR DELAY OR FAILURE TO PERFORM THIS WARRANTY OBLIGATION. THE REMEDIES PROVIDED HEREIN ARE THE EXCLUSIVE REMEDIES UNDER THIS WARRANTY, WHETHER BASED ON CONTRACT, TORT OR OTHERWISE.

Chefman® is a registered trademark of RJ Brands, LLC.
Cooking Forward™ is a trademark of RJ Brands, LLC.

CHEFMAN®



CHEFMAN.COM | @MYCHEFMAN

©CHEFMAN 2022