

**ICEMAN**


**PORTABLE MIRRORED**

# 4L BEAUTY FRIDGE

## USER GUIDE

- Safety Instructions
- Features
- Operating Instructions
- Cleaning and Maintenance
- Storage
- Terms and Conditions
- Warranty Registration

 RJ48-M-4-UK-SERIES

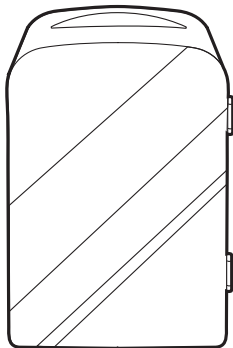

# COOKING FORWARD™

## Welcome!

When we designed our Portable Mirrored 4L Beauty Fridge, we had your beauty and skincare routine in mind. Refrigerating cosmetics, toners, serums and moisturizers can extend their shelf life, and applying chilled products delivers a cooling effect that can reduce inflammation and the appearance of under eye bags.

Not just for skincare, the fridge also keeps your drinks, food and medicine cold—or, with the flip of a switch, can keep hot items warm. And the fridge's compact size and carrying handle make it perfect for the bedroom, powder room, office and even your car.

Before you use your new fridge, please take a moment to read all about it, including important safety information.

Sincerely,

**The Iceman™ Team**




## **READ ALL INSTRUCTIONS BEFORE USE**

**For your safety and continued enjoyment of this product, always read the instruction manual before using.**



## CONTENTS



- 4** Safety Instructions
  - 8** Features
  - 9** Operating Instructions
  - 10** Cleaning and Maintenance
  - 11** Storage
  - 12** Terms and Conditions
  - 14** Warranty Registration
- 



# SAFETY INSTRUCTIONS

## IMPORTANT SAFEGUARDS



When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
  2. To protect against electrical shock, do not immerse cable or plugs in water or other liquid.
  3. Close supervision is necessary when this appliance is used by or near children.
  4. Unplug from socket when not in use and before cleaning. Allow to cool prior to cleaning the product.
  5. Do not operate any appliance with a damaged cable or plug or after the appliance malfunctions or has been damaged in any manner. Should this occur, please contact Chefman® Customer Support for examination, repair or adjustment.
  6. Do not let cable hang over edge of table or worktop or touch hot surfaces.
  7. Do not place on or near a hot gas or electric hob, or in a heated oven.
- 
- 



# **SAFETY INSTRUCTIONS**

## **IMPORTANT SAFEGUARDS**

- 
- 
8. Always attach plug to appliance first, then plug cable into the wall socket. To disconnect, turn any control to OFF, then remove plug from wall socket.
  9. Do not use appliance for other than intended use.
  10. When alternating between Hot and Cold functions, turn the switch to OFF first. After 2 minutes, turn the switch from COLD to HOT.
  11. When using in a car, disconnect the plug from the socket when not in use or the car is not running.
  12. Allow adequate ventilation on all sides of the unit when in operation. Keep the fan free of obstructions.

## **SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY**




# SAFETY INSTRUCTIONS


## IMPORTANT SAFEGUARDS

**WARNING:** Please ensure that the electrical socket can accommodate the product's standard plug. Do not attempt to alter the plug in any way.

### SHORT CABLE INSTRUCTIONS



A short power-supply cable is provided to reduce the hazards of entanglement or tripping over a longer cable. Longer detachable power-supply cables or extension leads are available and may be used if care is exercised in their use. If a longer detachable power-supply extension lead is used:





1. The marked electrical rating of the extension lead should be at least as great as the electrical rating of the appliance.
2. The longer cable should be arranged so that it will not drape over the worktop or tabletop where it can be pulled on by children or tripped over.



# SAFETY INSTRUCTIONS

## IMPORTANT SAFEGUARDS

### POWER CABLE SAFETY TIPS

 
1. Never pull or yank on cable or the appliance.
  2. To insert plug, grasp it firmly and guide it into the socket.
  3. To disconnect the appliance, grasp the plug and remove it from the socket.
  4. Never use the product if the power cable shows signs of abrasion or excessive wear. Contact Chefman® Customer Support for additional guidance and support.
  5. Never wrap the cable tightly around the appliance, as this could place undue stress on the cable where it enters the appliance and cause it to fray and break.
- 
- 

**DO NOT OPERATE APPLIANCE IF THE POWER CABLE SHOWS ANY DAMAGE OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.**



Do not place the appliance on a hob or any other heatable surface, even if hob is not on. Doing so is a fire hazard.

## FEATURES

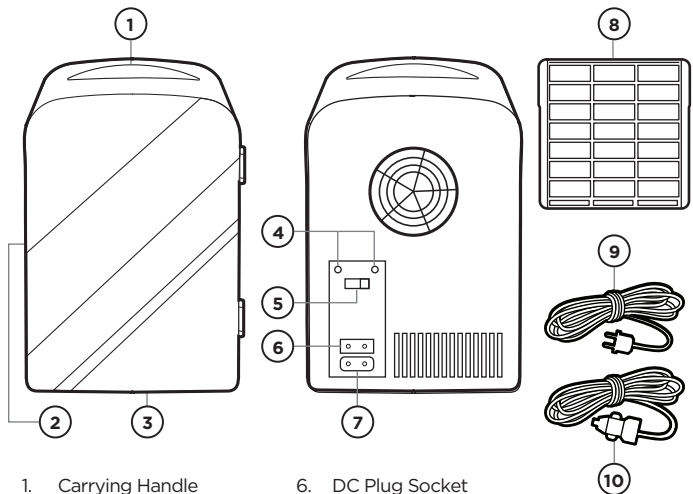



1. Carrying Handle
2. Door Handle
3. Mirrored Door
4. Red and Green Indicator Lights
5. HOT/COLD/OFF Switch
6. DC Plug Socket
7. AC Plug Socket
8. Removable Shelf
9. AC Cable and Plug
10. DC Cable and Plug





## OPERATING INSTRUCTIONS

- When using your mini fridge in a car, you can plug it into the 12V power socket. When using it at home or at the office, you can plug it into a wall socket.
  - Before using, first connect the plug of the cable into the socket of the personal mini fridge, then connect the other end to the power socket.
  - Once plugged in, you can choose either the COLD or HOT function. Turn the switch to COLD for cooling mode; the green LED light will illuminate. Or, turn the switch to HOT for warming mode; the red LED light will illuminate.
  - When the switch is turned to OFF, the personal mini fridge will function as an insulated box.
  - For best results when cooling or heating items, refrigerate items before placing in the personal mini fridge on cooling mode, or heat items before putting in warming mode.
  - With the interior shelf in place, the fridge can hold four 330 mL cans; to accommodate six, simply remove the shelf.
- 
- 



## CLEANING AND MAINTENANCE

- Wipe the outside of the mini fridge with a clean cloth.
- Wash the shelf with warm soapy water and dry thoroughly. (Shelf is NOT dishwasher safe.)
- Do not immerse mini fridge or power cables in water.
- **IMPORTANT:** In the COLD operation mode, the unit may develop frost that can lead to liquid condensation when switched OFF or to HOT. This is normal. Periodically wipe the interior surfaces with a dry cloth to ensure clean and dry operating conditions.



## STORAGE

- Store the appliance in a cool, dry, clean place, out of reach of children and pets.
- Keep the packaging in order to transport the appliance or store the appliance when not in use.





## TERMS AND CONDITIONS

### Limited Warranty

RJ Brands, LLC d/b/a Chefman® offers a limited 2-year Warranty (the “Warranty”) available on sales through authorised distributors and retailers only. Please note that this Warranty becomes valid from the date of initial retail purchase and that the Warranty is non-transferable and applies only to the original purchaser.

This Warranty is void without proof of purchase within the United Kingdom, the Republic of Ireland, Channel Islands or Isle of Man. Please be aware that this Warranty supersedes all other warranties and constitutes the entire agreement between the consumer and Chefman®. Any changes to the Terms and Conditions of this Warranty must be in writing, signed by a representative of Chefman®. No other party has the right or ability to alter or change the Terms and Conditions of this Warranty.

We may ask you to please submit, via email, photos and/or video of the issue you are experiencing. This is to help us better assess the matter and possibly offer a quick fix. Photos and/or video may also be required to determine warranty eligibility.

We encourage you to register your product. Registering can make the Warranty process easier and can keep you informed of any updates or recalls on your product. To register, follow the directions on the Chefman® Warranty Registration page in the Chefman® User Guide. Please retain your proof of purchase even after registering. In the event that you do not have proof of your purchase date, we may declare your Warranty void or we may, at our sole discretion, apply the date of manufacture as the purchase date for purposes of this Warranty.







# TERMS AND CONDITIONS

## Limited Warranty

### WHAT THE WARRANTY COVERS

 
- **Manufacturer Defects** - Chefman® products are warranted against defects in material and workmanship, under normal household use, for a period of 2 years from the date of purchase when used in accordance with the directions listed in the Chefman® User Guide. If your product does not work as it should, please contact Customer Support at support@chefman.co.uk so that we may assist you.

### THIS WARRANTY DOES NOT COVER

- **Misuse** - Damage that occurs from neglectful or improper use of products, including, but not limited to, damage that occurs as a result of usage with incompatible voltage, regardless of whether the product was used with a converter or adapter. See Safety Instructions in the Chefman® User Guide for information on proper use of product;
  - **Poor Maintenance** - General lack of proper care. We encourage you to take care of your Chefman® products so that you may continue to enjoy them. Please see Cleaning and Maintenance directions in the Chefman® User Guide for information on proper maintenance;
  - **Commercial Use** - Damage that occurs from commercial use;
  - **Normal Wear and Tear** - Damage or degradation expected to occur due to normal use over time;
  - **Altered Products** - Damage that occurs from alterations or modifications by any entity other than Chefman® such as the removal of the rating label affixed to the product;
  - **Catastrophic Events** - Damage that occurs from fire, floods or natural disasters; or
  - **Loss of Interest** - Claims of loss of interest or enjoyment.
- 
- 

# CHEFMAN® WARRANTY REGISTRATION

## What do I need to register my product?

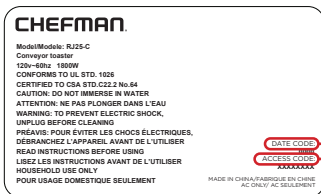

- Contact Information
- Model Number
- Proof of Purchase (online confirmation, receipt, gift receipt)
- Date Code
- Access Code

**NOTE:** Label depicted here is an example.

## How do I register my product?

All you need to do is fill out a simple Chefman® registration form. You can easily access the form in one of the two ways listed below:

1. Visit [Chefman.com/register](http://Chefman.com/register).
2. Scan the QR code to access site:






# CHEFMAN® WARRANTY REGISTRATION


## For product information

Please visit us at [Chefman.com](http://Chefman.com).

**EXCEPT WHERE SUCH LIABILITY IS REQUIRED BY LAW, THIS WARRANTY DOES NOT COVER, AND CHEFMAN® SHALL NOT BE LIABLE FOR, INCIDENTAL, INDIRECT, SPECIAL, OR CONSEQUENTIAL DAMAGES, INCLUDING WITHOUT LIMITATION, DAMAGE TO, OR LOSS OF USE OF THE PRODUCT, OR LOST SALES OR PROFITS OR DELAY OR FAILURE TO PERFORM THIS WARRANTY OBLIGATION. THE REMEDIES PROVIDED HEREIN ARE THE EXCLUSIVE REMEDIES UNDER THIS WARRANTY, WHETHER BASED ON CONTRACT, TORT OR OTHERWISE.**



Chefman® is a registered trademark of RJ Brands, LLC.  
Iceman™ is a trademark of RJ Brands, LLC.  
Cooking Forward™ is a trademark of RJ Brands, LLC.



Chefman UK Limited  
Victoria House, 50-58 Victoria Road  
Farnborough, Hampshire  
United Kingdom GU14 7PG



**ICEMAN**

@mychefman          
[www.chefman.com/iceman](http://www.chefman.com/iceman)

---

ICEMAN™ designed by ©CHEFMAN 2023

RJ48-M-4-UK-SERIES\_UG\_FINAL\_OTP\_042723