 


CORDLESS VACUUM CLEANER

USER MANUAL

—

Elite 5

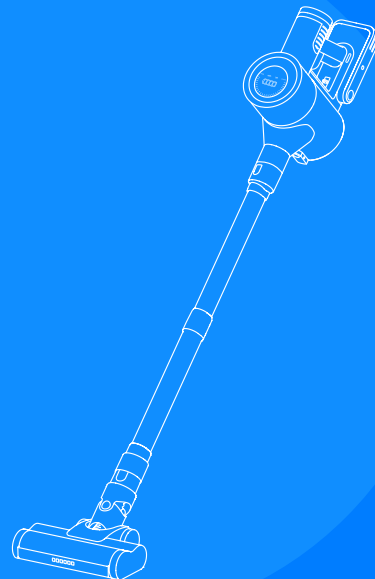

Laresar

CONTENTS

1. IMPORTANT SAFETY WARNING	06
1.1 Precautions When Using	06
1.2 Notes on the Battery Pack	07
1.3 Notes on Charging	08
1.4 Storage and Maintenance Precautions	09
2. PACKAGE CONTENT	11
3. OVERVIEW & ACCESSORIES	13
3.1 Overview	13
3.2 Digital Display Screen	14
4. ASSEMBLING & WALL MOUNTING	15
4.1 Product Assembling	15
4.2 Wall Mount	16
5. HOW TO USE	17

5.1 Start to Work	17
5.2 Select Cleaning Mode	17
5.3 Abnormal Indicator	18
6. CHARGING METHODS	20
6.1 Charging Methods	20
6.2 Battery Indicator	21
7. MAINTENANCE	22
7.1 Main Body Cleaning	22
7.2 Dust Cup & Filter Cleaning	22
7.3 Brush Roller Cleaning	24
8. SPECIFICATION	25
9. TROUBLESHOOTING	25
10. WARRANTY	26

1.IMPORTANT SAFETY WARNING

⚠ ATTENTION: Before using this machine, please read all instructions in the manual and cautionary markings on the machine carefully.

1.1 Precautions When Using

01. This Laesar machine is not intended for use by persons (including children) with reduced physical, sensory or reasoning capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the machine by a person responsible for their safety.
02. Use only as described in this Laesar User Manual. If the machine is not working as it should, if it has received a sharp blow, if it has been dropped, damaged, left outdoors, or dropped into water, do not use and contact the Laesar Support Team.
03. Suitable for dry locations ONLY. Do not install, charge or use this machine outdoors, in a bathroom or within 10 feet (3 meters) of a pool. Do not use on wet surfaces and do not expose to moisture, rain or snow.
04. When using this machine, please keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts. Do not point the hose, aluminium alloy tube or other accessories at your eyes or ears or put them in your mouth.
05. Do not use to pick up hard objects, such as glass slag, needles, nails, etc.
06. Do not touch the charger with wet hands to avoid electric shock.
07. Use only Laesar recommended accessories and replacement parts.

08. Do not use without the dust cup and filter(s) in place.
09. When removing or replacing a motorized brush bar, be careful not to pull the power button until the cleaner head has been reassembled.
10. Do not water or spill liquid onto the vacuum cleaner. If that happens, it will increase the risk of electric shock.
11. Use extra care when cleaning on stairs.
12. Please do not use the vacuum cleaner to suck the detergent, kerosene, soot, wet dust, water, sewage, matches and other items.
13. Please do not use a vacuum cleaner to suck up small particles such as cement, gypsum powder, wall powder, or large objects such as toy paper balls, otherwise it will cause the vacuum cleaner to block and the motor to burn out.

1.2 Notes on the Battery Pack

01. Do not throw the battery pack away, and it should be safely disposed in accordance with local regulations.
02. Do not use a battery pack or machine that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
03. Do not incinerate batteries or expose to high temperatures, as they may explode.
04. The battery is a sealed unit and under normal circumstances poses no safety concerns. In the unlikely event that liquid leaks from the battery, do not touch the liquid as it may cause irritation or burns, and observe the following precautions:

Skin contact – can cause irritation. Wash with soap and water.

Inhalation – can cause respiratory irritation. Expose to fresh air and seek medical advice.

Eye contact – can cause irritation. Immediately flush eyes thoroughly with water for at least 15 minutes. Seek medical attention.

Disposal – wear gloves to handle the battery and dispose of immediately, following local ordinances or regulations.

05. When the battery pack is not in use, keep it away from paper clips, coins, keys, nails, screws or other small metal objects that could make a connection from one terminal to another.

1.3 Notes on Charging

01. Before use, check the charger cord for signs of damage or ageing. A damaged or entangled charger cord increases the risk of fire and electric shock.
02. Never modify the charger in any way.
03. The charger has been designed for a specific voltage. Always check that the mains voltage is the same as that stated on the rating plate
04. Unplug the charger when not in use for extended periods.
05. When your vacuum cleaner is fully charged , needs to be cleaned or repaired, please unplug the charger in time and do not pull the power cord directly.
06. Do not pull the cord to disconnect from a socket, grasp the plug and pull to disconnect.
07. Don't wrap the cord around the charger when storing.
08. Please fully recharge the battery, when first used or used after long time storage. If the product is not used for long time, please make sure the battery is recharged and used each three months at least.
09. If smoke or fire occurs during charging, unplug the charger immediately, and use a fire extinguisher to put out the

fire . Do not use water to extinguish the fire, it will increase the risk of electric shock.

10. Follow all charging instructions and do not charge the battery pack or the machine outside of the temperature range specified in the instructions. Charging improperly or at a temperature outside of the specified range may damage the battery and increase the risk of fire.To ensure maximum battery life, Laesar recommends the following:

When not in use the machine should be stored at room temperature. Recommended range: 64°F (18°C) to 82°F (28°C).

The ambient temperature range for operation and charging should be 50°F (8°C) to 86°F (35°C).

1.4 Storage and Maintenance Precautions

01. Please store the product under cool and dry environment. Please avoid long-time sunshine on the product.
02. The charger must be removed from the socket before removing the battery, cleaning or maintaining the appliance.
03. Please use dry cloth to clean the vacuum cleaner. Please do not use gas or liquid that can make the surface cracked or color faded.
04. Do not apply any fragrance or scented product to the filter(s) of this machine. The chemicals in such products are known to be flammable and can cause the machine to catch fire.
05. Do not carry out any maintenance other than that shown in this manual, or advised by the Laesar Support Team.
06. Do not disassemble the machine as incorrect reassembly may result in an electric shock or fire. Contact the Laesar Support Team when a service or repair is required.

SAVE THESE INSTRUCTIONS



Do not use near open flames.



Do not store near heat sources.



Do not pick up water or liquids.



Do not pick up burning objects.



 
 
 
 
 

 
Do not put hands near the brush bar when the machine is in use.







Do not place on or near the cooker.

2.PACKAGE CONTENT

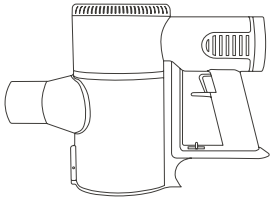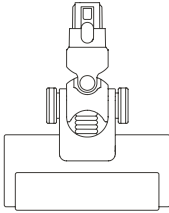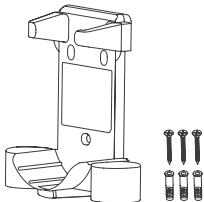 Please check and confirm the accessories and parts according to the following sheet before using.

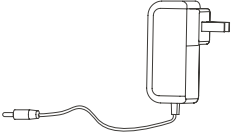
Main Body	Retractable Tube		Motorized Brush Head
			
Wall Mount (Screw*3, Expansion Nails*3)	2 in 1 Upholstery Brush	Long Crevice Nozzle	Battery Pack
			

 Charger	Mini Cleaning Brush	User Manual	HEPA Filter
			


3.OVERVIEW & ACCESSORIES

3.1 Overview

 - 01. Motorized Brush Head
- 02. Release Button of Motorized Brush Head
- 03. Retractable Tube
- 04. Main Body Release Button
- 05. Speed Knob
- 06. Digital Display
- 07. HEPA for Air Outlet
- 08. Battery Pack
- 09. Switch Button
- 10. Charging Port
- 11. Dust Cup Release Button
- 12. Battery Removal Button
- 13. Dust Cup
- 14. Dust Cup Emptying Button
- 15. 2 in 1 Roller Brush

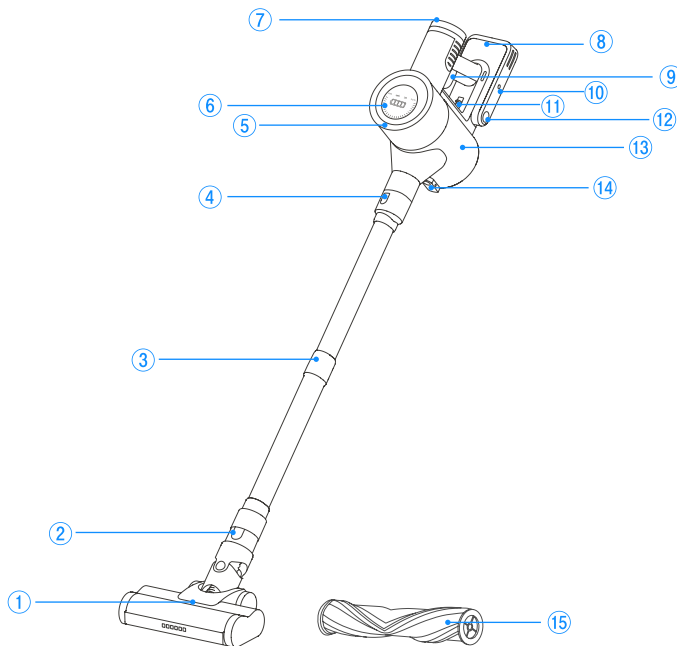

 3.2 Digital Display Screen

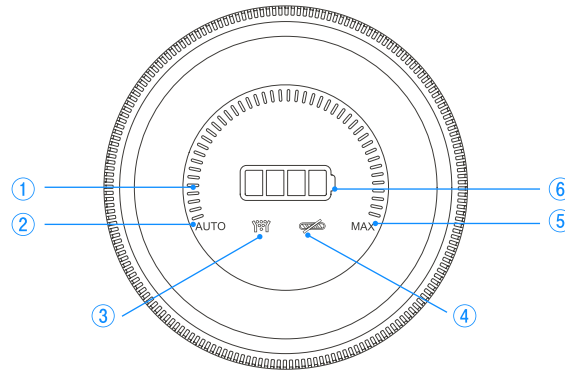


01. Suction Power Indicator
02. Auto Mode
03. Dust Full Indicator
04. Floor Brush Block Indicator
05. Highest Power
06. Power Indicator


4.ASSEMBLING & WALL MOUNTING

4.1 Product Assembling

 4.1.1 Install the Battery Pack

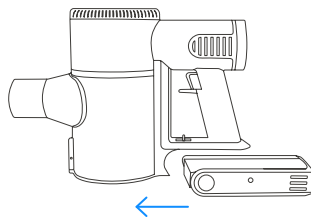

 4.1.2 Install Cleaning Accessory

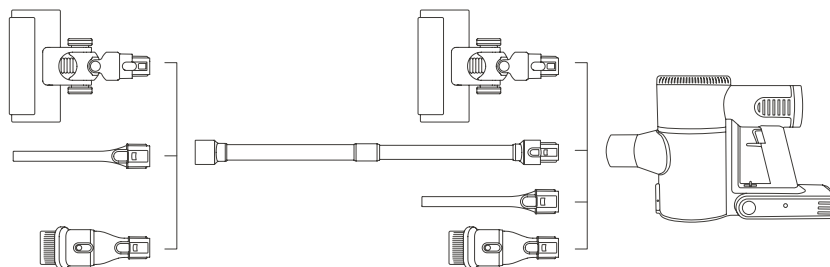


4.2 Wall Mount

Hold the charging wall mount against the wall through the Three fixing screw holes and fix it onto the wall with screws, and then hang the vacuum cleaner on the wall.



Warning

 - Please make sure there is no gas, water or electrical cables and wires behind the mounting area.
- To avoid the dock dropping down, please make sure it must be installed firmly.

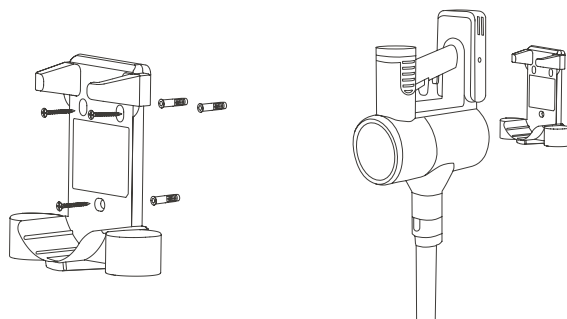

5.HOW TO USE

 


Before use, make sure that

- The battery is fully charged, and fixed in place.
- The dust cup and filters are cleaned, dried, and fixed in place.

5.1 Start to Work

Press the switch button, the appliance will start to work. Press the button again to shut down the appliance.

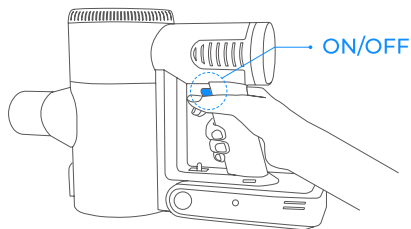


5.2 Select Cleaning Mode

- Power on, AUTO shows blue, for “Automatic” Mode.
- Adjust the knob clockwise to the right to enter the “Manual” Mode, AUTO shows white.


- Set to the highest gear, MAX shows red.
- Counterclockwise to the lowest gear back to “Automatic” Mode, AUTO becomes blue light.
- MAX red light state clockwise adjustment, back to “Automatic” Mode, AUTO light shows blue.

5.3 Abnormal Indicator

 
- When the ground brush roller is blocked, the LED light on the electric floor brush goes out, and the red brush roller indicator blinks and then goes out.

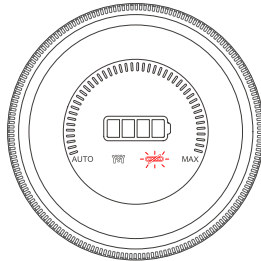

 
- When the air duct or filter is blocked, the machine stops running and the dust full logo keeps flashing for 10S and then goes out until the blockage is lifted.

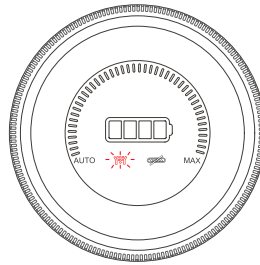

 - When the vacuum cleaner is turned off, the first LED light is orange, and it continues to flash for 5s and then goes out, indicating that the power is lower than 25% and needs to be charged in time.

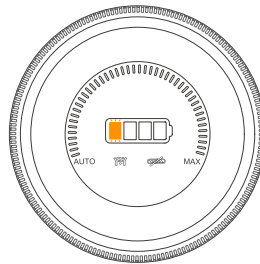

 
- When the power is less than 15%, the first LED of the battery shows a red color and flashes continuously.

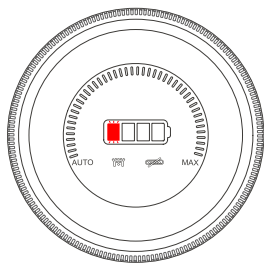


6.CHARGING METHODS

6.1 Charging Methods

 
①

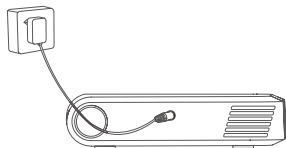

②

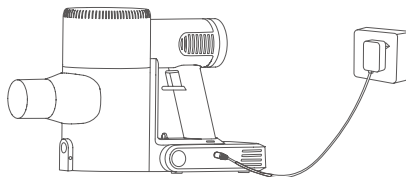 


③

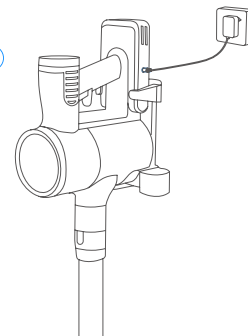 


6.2 Charging Indicator

 - The battery indicator will flash blue when charging, and will be steady blue when fully charged.

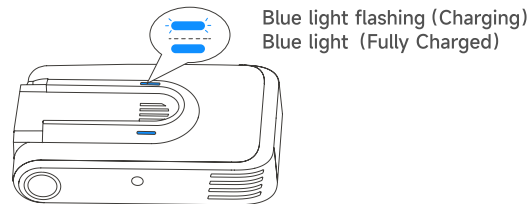

 - When charging, the 4 green light cycle flashing.

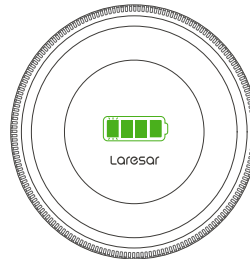


7.MAINTENANCE

Please clean it regularly to prolong the service life of the vacuum cleaner.

7.1 Main Body Cleaning

 - Turn off the power before cleaning the body.
- Please use a neutral detergent, wipe the body with half-wet cloth.
- Please avoid sun exposure and store in a cool and dry place.




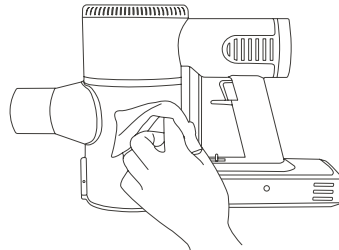


7.2 Dust Cup & Filter Cleaning

7.2.1 Empty the Dust Cup




- Press the dust cup release button to empty the dust.

    - When using, if the garbage in the dust cup exceeds MAX line, please empty it in time.

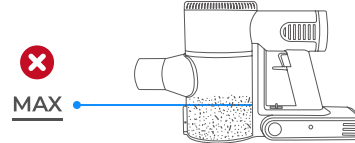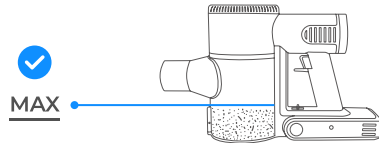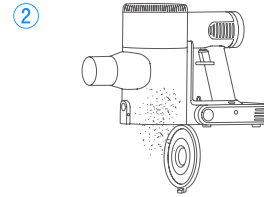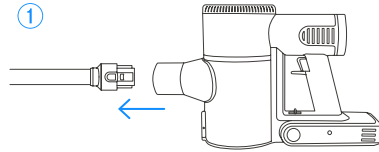

7.2.2 Clean the Dust Cup & Filter

   - The dust cup release lever is pulled back and the dust cup can be disengaged and unlocked for cleaning.

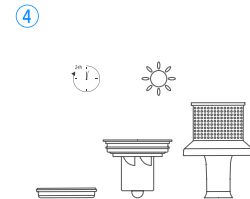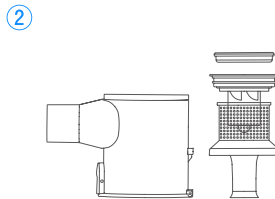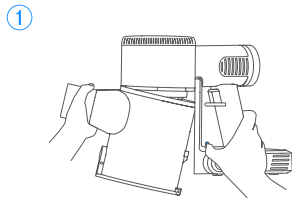




Note:

- Wash the filters with cold water at least once every month.
- Please use a cleaning brush to remove dust on the surface of the HEPA filter, and then rinse with water.
- Please ensure the filters are completely dry before reassembly.

7.3 Brush Roller Cleaning

Note:

 - After long periods of use, the bristle may be jammed by hair or similar build-up. It's recommended to clean the brush roller periodically to ensure efficient operation and maintain suction.

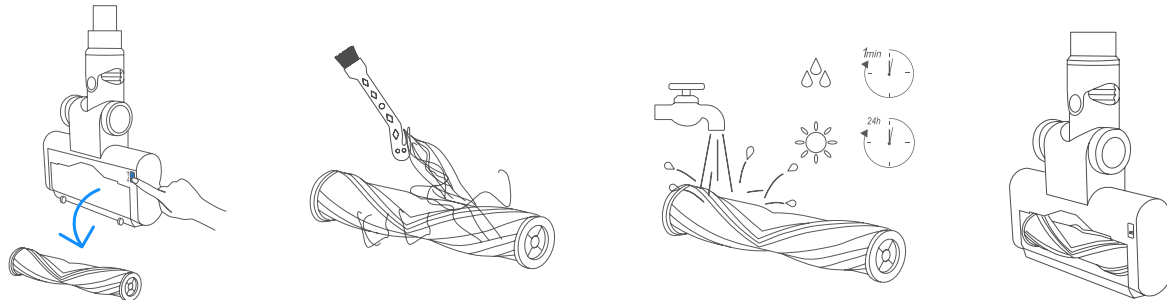

8.SPECIFICATION

Product	Cordless Vacuum Cleaner
Model	Elite 5
Rated Voltage	25.9V ⁼⁼
Cleaning Modes	Manual/Automatic

9.TROUBLESHOOTING

ISSUE	CAUSE	SOLUTION
Weak suction power	<ul style="list-style-type: none">a. Filter element blocked/deformedb. The expansion tube is blocked by foreign objectsc. Air leakage from broken brush hose	<ul style="list-style-type: none">a. Clean/replace the filterb. Clean the telescopic tubec. Contact customer service to replace the floor brush
Cannot be turned on	<ul style="list-style-type: none">a. The switch of vacuum cleaner is not workingb. The filter system is blocked and the main unit is blocked to trigger automatic protectionc. Battery damage/short circuit in other parts	<ul style="list-style-type: none">a. Contact customer service to replace the switchb. Clean/replace the filterc. Contact customer service for investigation

The brush does not rotate	<ul style="list-style-type: none"> a. The brush is entangled with hair b. The electric floor brush is damaged/short-circuited c. Metal tube short circuit failure 	<ul style="list-style-type: none"> a. Clean the hair on the roller b. Contact customer service to replace the brush c. Contact customer service to replace the metal tube
Battery cannot be charged	<ul style="list-style-type: none"> a. Loose charging port b. Wrong adapter c. Adapter/battery damaged 	<ul style="list-style-type: none"> a. Reconnect charging b. Use the correct adapter c. Contact customer service to replace the adapter/battery
Auto shutdown after power on	<ul style="list-style-type: none"> a. Battery is not fully charged (wrong adapter/loose charging port) b. The filter system is blocked, the host blockage triggers automatic protection c. Short circuit of the telescopic tube/folding tube/electric floor brush 	<ul style="list-style-type: none"> a. Reconnect charging / use the correct adapter b. Clean/replace the filter c. Contact customer service for replacement

10.WARRANTY

The 2-Year Limited Warranty

- Your Laesar machine has a 2-year warranty against original defects in material and workmanship, when used for private household purposes in accordance with the Laesar Instruction Manual.
- This warranty provides, at no extra cost to you, **all** labor and parts necessary to ensure your machine is in proper operating condition during the warranty period.

WHAT IS COVERED?

- According to the requirements outlined in this instruction manual, subject to the following conditions and exclusions.
- Only applies to purchases made from authorized retailers of Laesar.
- This warranty will only be valid if the machine is used in the country in which it was sold.

WHAT IS NOT COVERED?

Laesar shall not be liable for costs, damages or repairs incurred as a result of:

- Machines purchased from an unauthorized dealer.
- Careless operation or handling, misuse, abuse and/or lack of maintenance or use not in accordance with the Laesar Instruction Manual.
- The machines are used for commercial or rental purposes in addition to normal domestic use.
- Use of parts not in accordance with the Laesar Instruction Manual.
- Use of parts and accessories other than those produced or recommended by Laesar.
- External factors unrelated to product quality and use, like accidental water damage.
- Repairs or alterations carried out by unauthorized parties or agents.
- Normal wear and tear, including Dust Cup, Belt, Filter, HEPA, Brush Roller, and Power Cord (or where external damage or abuse is diagnosed), carpet or floor damage due to use not in accordance with manufacturer's instructions or failure to turn the brush roller off when necessary.
- Reduction in battery discharge time due to battery age or use.

HOW TO CLAIM?

- Please keep your proof of purchase. To make a claim under our Limited Warranty, you need to provide your original purchase receipt with the purchase date and order number on it.
- All work will be carried out by Laesar or its authorized agency.
- Any replaced defective parts will become the property of Laesar.
- Service under this warranty will not extend the period of this warranty.

If your machine is not functioning properly, or you still have any questions after reading this manual carefully, please feel free to contact us, we will try our best to provide you with a satisfactory solution.



E-mail our Customer Service:
support01@laresar.us

Laresar is here to help and we are glad to serve you.





CONTACT INFORMATION

