



DOS

Burro Ridge 2-Person Cotton Canvas Tent
Owner's Manual



IMPORTANT!! To ensure the safe and proper usage of the DOS Burro Ridge Tipi Tent, please fully read and follow all instructions contained in this manual.

WARNING



This tent may be flammable! While our tent fabric is made to be ember resistant, please keep all flame and heat sources away from this product. Stoves, campfires, or any other flame source should not be used inside your tent. Death by carbon monoxide poisoning and/or serious burns are possible.



Carefully consider the location you place this product. Falling rocks or tree limbs, flash floods, avalanches, strong winds, and other environmental hazards may cause risk of loss or injury to the tent or occupants.



Always maintain proper ventilation inside your tent.



Do not allow children to assemble or disassemble the tent. Do not leave children unattended inside the tent. Children should not be allowed to remain closed-up inside the tent on hot days. Supervise children and do not allow children to swing or hang from any part of this tent. Failure to follow these warnings may result in injury and/or death.

Parts List

Identify all parts and ensure that they are in good condition and working order each time you use the DOS Burro Ridge Tipi Tent. The product contents include:

QUANTITY	ITEM
1	Burro Ridge Tipi Tent Fabric
1	Tent Storage Bag
4	Steel Tent Poles
4	Steel Tent Stakes

Use

It is important to read these instructions carefully before taking the Tent on your first trip.

Preparation

- Before using the Burro Ridge Tipi Tent on its first camping trip, it is recommended for all users to assemble this tent at home to familiarize yourself with the assembly process. Make sure all the components of your tent are present and in working order.
- It is recommended to season the canvas fabric used for the Tent walls. To do this, spray the assembled tent lightly with water and allow it to dry completely. This allows the cotton to naturally seal any small holes in the fabric. This process is only required once.
- Additional waterproofing of the canvas is recommended after seasoning. While our tents are made with a canvas material that naturally repels water, it is recommended that all users regularly lightly treat the tent with a *SILICONE* based waterproofing compound. Other types of waterproofing compounds may affect the breathability of the canvas material.

Assembly

Step 1

- Loosely spread the tent fabric on the floor. Although our heavy-duty tent floor is designed to resist punctures and tears, a groundsheet is recommended for longevity. Select a site where water will not flow towards the tent.
- Remove the 4 steel tent poles from the tent storage bag. Assemble each tent pole by sliding the ends of each section together.
- Insert the tent poles into the pole sleeves located at all four corners of the tent. This step is most easily done before fully spreading the tent's footprint.
- Locate the four metal ring rods attached to each corner of the tent. Insert each ring rod into the holes located at the bottom of the tent poles.

Step 2

- Carefully raise the tent into a standing position.
- Slowly pull the poles away from each other. This will stretch out the connecting fabric wall of the tent.
- Once loosely opened, it may be helpful to stake down one corner of the tent before fully spreading the poles apart.
- Continue to expand the tent until the wall fabric is tight.

Step 3

- Stake down each corner of the tent.
- Tighten the bottom straps located on each corner of the tent floor.
- Make sure to create adequate ventilation inside the tent by opening the top ventilation flaps and secure them in place with the supports.

Step 4

ENJOY!

Storing the Tent

Step 1

- Empty all belongings out of the tent.
- Clean out the interior of the tent by sweeping out any dirt or debris.
- Allow the tent fabric to dry completely if humidity has built up inside, or if it has rained.
- If you must pack the tent wet, be sure to allow it to dry once you have returned home.

Step 2

- Remove ground stakes.
- Move each tent pole towards each other and slowly collapse the tent inwards.
- Carefully tilt the tent and lay it on the ground.

Step 3

- Remove each ring rod from the bottom of each tent pole.
- Remove each tent pole from its corresponding sleeve.
- Break down the poles to their individual sections

Step 4

- Carefully fold and roll up the tent. This is best done by laying the square floor of the tent down and folding inwards from the corners.
- Store the tent and tent poles in their respective bags.

Use and Care

- While the Burro Ridge Tipi Tent is built with durability and longevity in mind, please be sure to occasionally use a damp rag and wipe the tent fabric clean.
- While the canvas material is naturally breathable, condensation could still build up inside the tent. Condensation can be reduced by allowing air ventilation. Tents should be allowed to dry completely before storage. If a tent must be stored while wet, loosely roll the tent for transport and then immediately unroll and set up after transport to dry thoroughly before long-term storage. Failure to do so could cause rot or mildew in the canvas material.

- Keep tent fabric away from sharp objects such as rough stones and rocks, thorns, metal edges, etc.
- Keep zippers free from dirt and excessive force in order to prolong zipper life.
- A groundsheet underneath your tent is recommended to maximize the life of your tent's floor.
- We do not recommend spraying insecticides or bug repellent directly onto the tent fabric. If you must do so (we fully understand), use a fabric-safe repellent such as Picaridin, **not** DEET.

A MESSAGE FROM DOS

Thank you for choosing the DOS Burro Ridge Tipi Tent for your new camping setup. We take pride in our design and manufacturing, and hope that this tent accompanies you on many exciting trips.

For any questions or inquiries, please feel free to email support@desertoverlandsupply.com

We wish you all the best! Safe travels!