

TM25BFI Monitor Instruction Manual



Please read this manual thoroughly before use, and keep it handy for future reference

EMAIL: INFO@TWISTEDMINDS.CO WEBSITE: WWW.TWISTEDMINDS.CO

SAFETY INFORMATION

- Read these instructions All the safety and operating instructions should be read before this
 product is operated.
- Keep these instructions The safety and operating instructions should be retained for future reference
- Heed all warnings All warnings on the appliance and in the operating instructions should be adhered to.
- Follow all instructions All operating and usage instructions should be followed.
- Do not use this equipment near water, or in humid environments The appliance should not be used near water or moisture e.g. in a wet basement or near a swimming pool.
- Clean only with a dry cloth. Do not use solvents or petroleum based fluids.
- Do not block any ventilation openings.
- Do not install near any heat sources such as radiators, stoves or other apparatus (including amplifiers) that produce heat.
- Do not tamper with the supplied plug. This plug is a BS1363 standard plug.
- Protect the power cord from being walked on or trapped, particularly at the plug and at the point where it exits from the appliance.
- Only use attachments/accessories specified by the manufacturer.
- Use only with a cart, stand, tripod, bracket or table specified by the manufacturer or sold with the apparatus. When a cart or stand is used, use caution when moving it to avoid any injuries or damage from it tipping over.
- Unplug the apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified personnel. Servicing is required when the apparatus has been
 damaged in any way, such as if the power supply cord or plug is damaged, liquid has been spilled or
 objects have fallen into the apparatus or it has been exposed to rain or moisture, it does not operate
 normally or has been dropped.
- Please keep the unit in a well-ventilated environment.
- The monitor should only be connected to a mains power supply as rated on the back of the equipment.
- To prevent overload, do not share the same power supply socket with too many other electronic components.
- Do not place any connecting wires where they may be stepped on or tripped over.
- Do not place heavy items on the cable as this may cause damage.
- When removing from a socket hold by the plug and not the wires.
- Disconnect the power immediately and seek professional help if the plug or cable is damaged, liquid has spilt onto the set, if accidentally exposed to water or moisture, if anything accidentally penetrates the ventilation slots or if the set does not work normally.
- Do not remove the safety covers. There are no user serviceable parts inside.

- Trying to service the unit yourself is dangerous and may invalidate the product's warranty. Only qualified personnel should service this apparatus.
- Do not block ventilation slots on the back cover. The monitor can be placed in a cabinet but ensure at least 5cm (2") clearance all around. Do not tap or shake the screen, this may damage internal components.
- WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and objects filled with liquids, such as vases, shall not be placed on the apparatus.
- WARNING: The wall plug socket is used as a disconnection device and should remain readily accessible.
- WARNING: The batteries shall not be exposed to excessive heat such as direct sunlight or fire.



AT FULL VOLUME, PROLONGED LISTENING MAY DAMAGE THE USER'S HEARING.



This warning sign is to warn of dangerous voltage inside the product.



CAUTION: To reduce the risk of electric shock, DO NOT remove the cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.



This warning sign is to alert you of important instructions accompanying the product.

WHAT'S INCLUDED










User manual

Power supply Power cable

CONNECTIONS AVAILABLE ON THE MONITOR

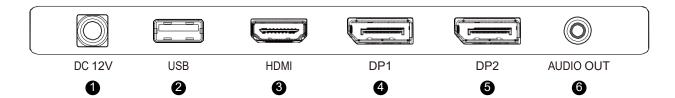


- Power
- 2 USB (Firmware upgrade)
- 3 HDMI (240Hz, FreeSync, HDR, MPRT)
- 4 DP1 (360Hz, G-Sync, HDR, MPRT)
- **5** DP2 (360Hz, G-Sync, HDR, MPRT)
- 6 AUDIO OUT

WALL MOUNTING

The monitor is provided with mounting holes for a VESA approved wall moun ng bracket (not supplied) The VESA mounting pa ern is: 100x100mm and the size of the screws is 4×10 (not supplied) Do not use screws longer than specified or damage will occur to the internal components.

NOTE: As the monitor is considered heavy, please consult with a professional wall mount installer to perform the installa on.

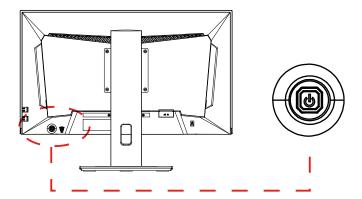

1.POWER

Press and hold the switch to turn it on, and take a look to enter the selection menu mode.

2.UP

Change the value on selected menu/Switch a menu on OSD.

3.DOWN

Change the value on selected menu/ Switch a menu on OSD.

4.LEFT

Change the value on selected menu/ Switch a menu on OSD.

5.RIGHT

Change the value on selected menu/ Switch a menu on OSD.

Shortcut Key Guide

- ◆ Activate the Signal Input Selection menu. Use ◆ and ▶ to navigate and M to select the source.
- 2 Activeate the Line of Sight feature. Further press to cycle between the colors or turn off.








INITIAL SETUP

Connect the monitor to a power outlet.

- 1. Press the POWER bu on on the monitor or to turn it on (The indicator will be blue)
- 2.Connect the relevant cable to the corresponding input on the monitor. The source will be automatically detected.
- 3. To change between inputs, press the "Source" bu on to enter the source menu. Use the "◀" and "▶" bu ons to choose the input source between Auto Select, DP1,DP2 and HDMI.

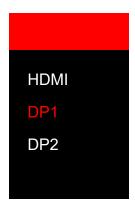


MENU OPTIONS

The menu for the monitor can be accessed by pressing the menu bu on on the control panel.

This menu is separated into the following sub menus: Picture Se ings, Image Se ngs, Colour Temperature, OSD Se ings, Reset, and Miscellaneous op ons, details of each menu can be found in the following sec on


OSD MENU

A. Input Source

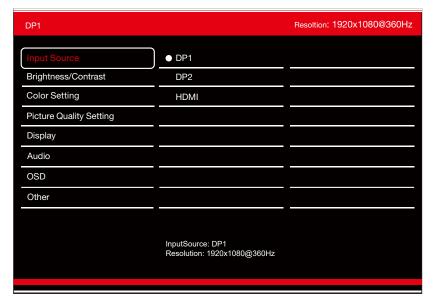

Switch the signal input to DP1,DP2,HDMI.

B . Brightness/Contrast

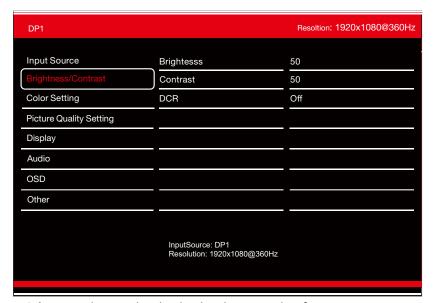

Brightness:Change the display brightness value from 0 to 100.

Contrast: Adjust the display contrast value from 0 to 100.

DCR:Turn the Dynamic Contrast Ratio feature On or Off.

C. Color Settings

DP1		Resoltion: 1920x1080@360Hz
Input Source	Gamma	2.2
Brightness/Contrast	Picture Mode	Standard
Color Setting	Color Temperature	Warm
Picture Quality Setting	Hue	50
Display	Saturation	50
Audio	Low Bule Light	0
OSD		
Other		
	InputSource: DP1 Resolution: 1920x1080@360Hz	

Gamma: Change the display Gamma Value to:2.0,2.2,2.4.

PictureMode: Change the picture mode to Standard/photo/movie/ game.

Color Temperature: Change the color temperature to Standard/warm/cool/user.

Hue: Change the display Hue value from 0 to 100.

Saturation: Change the display Saturation value from 0 to 100.

Low Blue Light: Change the display blue light from 0 to 100.

D. Picture Quality Settings



Sharpness: Change the display Sharpness value from 0 to 100.


Reponse Time: Select the Reponse time Value from Low, Middle, High or turn it Off.

Dynamic Noise Reduction: Select the Noise Reduction Value from Low, Middle, High or turn it Off.

Super Resolution: Select the Super Reduction Value from Low, Middle, High or turn it Off.


Dynamic Luminance Control: Turn the Dynamic Luminance Control feature On or Off.

E. Display Settings

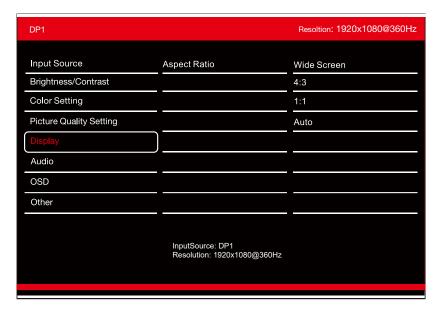

Aspect Ratio: Change the image aspect ratio to Wide Screen,4:3,1:1,Auto.


F. Audio Settings

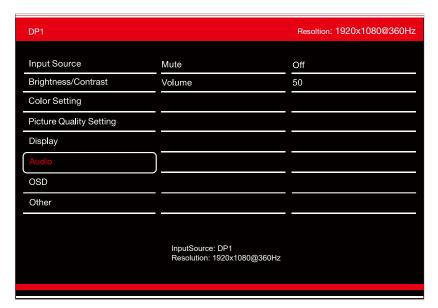

Mute: Turn On or Off to mute the audio source.

Volume: Change the audio source volume from 0 to 100.

G . OSD Setting

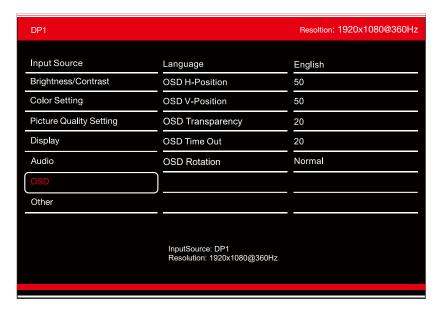

Language: Change the OSD Menu display language.

OSD H Position:Change the horizontal position of the OSD Menu.


OSD V Positon:Change the vertical position of the OSD Menu.

OSD Transparency:Change the transparency value of the OSD Menu from 0 to 100.

OSD Timer:Change how long the OSD Menu is on before it automatically exits.

OSD Rotation: Rotate the OSD Menu.

H. Other Settings

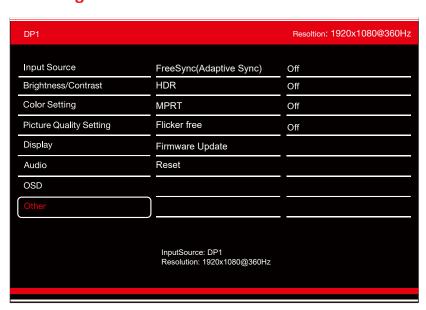

FreeSync Mode:Turn FreeSync On or Off.

HDR:Turn HDR On(requires HDMI 2.0 input).

MPRT:Turn MPRT On or Off.

Flicker free: Turn Flicker free On or Off.

Firmware Update: Update the monitor firmware with proper firmware Using the USB port.

Reset: Restore factory default setting.



SPECIFICATION

Model	TM25BFI				
Screen Size	24.5"	24.5"			
Aspect Ratio	16:9				
Backlight	LED				
Brightness	400cd/m²				
Panel Type	IPS				
Resolution	1920x1080	1920x1080			
Refresh Rate	360Hz	360Hz			
Response Time	1ms	1ms			
Viewing Angle	178º/178º (CR>10)	178º/178º (CR>10)			
Contrast Ratio	1000:1	1000:1			
VESA Mounting	100x100mm				
Colours	16.7M	16.7M			
AMD FreeSync	Yes				
G-Sync	Yes				
HDR	Yes				
Signal Input	HDMI2.0+DP1.4x2+USB				
Audio	out				
Speakers	2x3W				
Cables					
Power Cable	Yes				
DP Cable	Yes	Yes			
Additional Functions					
Low Blue Light	Yes	Yes			
Flicker Free	Yes	Yes			
Power	40W				
Consumption					
Power Type	12V,4A				

EMAIL: INFO@TWISTEDMINDS.CO WEBSITE: WWW.TWISTEDMINDS.CO