



www.kuma.co.uk



4297 My-WiFi QSG V2



Contents - Please check you have the following in your kit:

1 x Wi-Fi Main AP/Router 1 x Main body holder

2 x Omni antennas 2 x Cable ties

1 x Power Adapter 1 x Screw fittings 1 x POE Converter 1 x Quick Installation

1 x RJ-45 LAN 1 x MagPole Mount solution **Networking Cable**

1 x Metal Mount Disc (MMD)

Primary Extender

RP-SMA Antenna Connectors

2 3 x Wi-Fi Signal LEDs

Wi-Fi LED

4 WAN/LAN LED

6 POWER LED


6 Reset button

WAN/LAN Port (POE)

Grounding Terminal

Default Settings

Login Password: admin 2.4G SSID: WAVLINK-N 5G/AC SSID: WAVLINK-AC

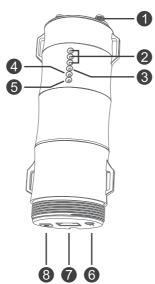

Assembly

Please note

In Point 2 the rubber seal may need cutting to allow the cable to slide in.

Spin 5G antenna into the 5G External RP-SMA connector


Spin 2.4G antenna into the 2.4G External RP-SMA connector

Connect the RJ45 cable to RJ45 Port

3 Pass RJ45 cable through the holder

2 Pass RJ45 cable through the Rubber seal

 Pass RJ45 cable through the spiral cover










KUMA My-WiFi

Easy Set Up Guide

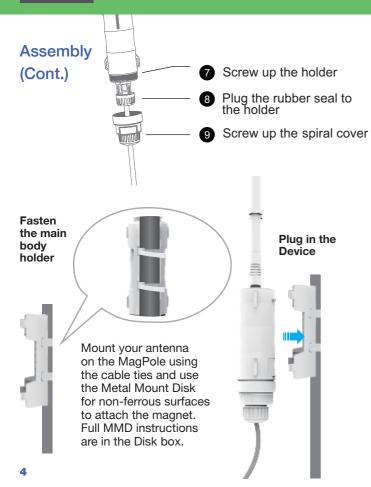

Now power on the repeater by connecting the power lead to the small white POE converter and plugging the white LAN Networking cable in to the POE socket. Press the small grey button and the LEDs will light on the main unit. Wait 30 seconds for the kit to start up completely.

Connect your device (laptop, smartphone, tablet etc), to the repeater

Click the network icon on the right bottom of your laptop, or search for Wireless Networks – you will find Wavlink-AC (=5GHz) or Wavlink-N (=2.4GHz)

Click Connect – wait a few seconds.......

Your device is now connected to My-WiFi

Now, connect My-WiFi to the chosen network

Open a web browser and type http://192.168.10.1 or http://ap.setup in the browser address box. This number is the default IP address for My-WiFi.









If you get an error message and cannot connect, make sure your device is connected to the either the Wavlink-AC or Wavlink-N networks and try again.

To reset to factory settings, unscrew the lower screw cover and hold the reset button for 10 seconds. This will erase all data and restore the device to factory defaults.

To proceed past the Login screen, use Password 'admin'


Then, select your region ie. 'EU'


Select your Time Zone ie. 'England'


Create a password longer than 6 characters.

Log back in with your new password.



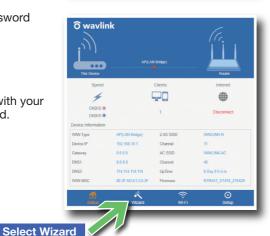

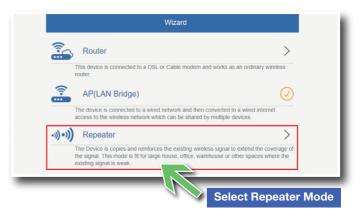

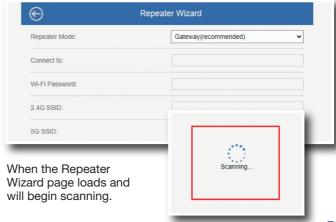



6






Selecting Networks that are secured (with a padlock icon)

Networks requiring a password to connect, will have a padlock next to them.

If no padlock, please go to page 11



Select the network you wish to connect to.

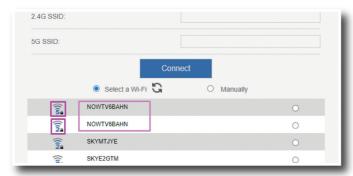

Networks with 5GHz and 2.4GHz transmissions will be shown as above.

Select your preferred network then enter the network password in the box shown below. Then click 'Connect'.



Wait a few seconds.

My-WiFi will restart and will re-appear in your list of networks using the site network name with _EXT5G or _EXT2G added. Use the same password as the site network to connect your device to My-WiFi.

That's it! You are extending and boosting a weak signal with KUMA My-WiFi.



If you wish to change the SSID names or passwords these can be found in the 'Wi-Fi menu'. You can also reduce the My-WiFi power output using the 'Wi-Fi Signal' option for confined or sensitive areas.


32 devices can connect to My-WiFi.







Networks that are NOT secured (NO padlock icon)

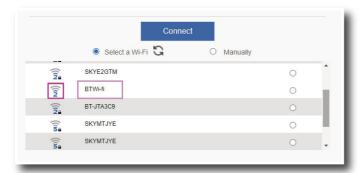

If there is no padlock icon you will not require a password at this stage. (Once connected to the desired network you may still require a password to get onto the internet see page opposite)

Wait a few seconds.

My-WiFi will restart and will re-appear in your list of networks using the site network name with _EXT5G or _EXT2G added. Use the same password as the site network to connect your device to My-WiFi.

That's it! You are extending and boosting a weak signal with KUMA My-WiFi.



When you open a browser you should be connected to the internet.

If your campsite or internet connection requires a Username and Password, a login page should pop up similar to the one below, or it may be your campsite branded page. Enter the details your campsite/BT etc gave you and follow the instructions on the page.



If you wish to change the SSID names or passwords these can be found in the 'Wi-Fi menu'. You can also reduce the My-WiFi power output using the 'Wi-Fi Signal' option for confined or sensitive areas.

32 devices can connect to My-WiFi.

For safe keeping, write your password here

