INSTRUCTIONS FOR THE CAMPAIGN BOXTM

Mount blocks and hardware can be found inside the main compartment of the box.





Tripod Mount Blocks

Hardware

MOUNTING ON A TRIPOD

Remove the wing nuts and washers from the bolts. There are four holes on the back of the box. Insert the bolts with the head on the inside of the box.







There are two ways to put the mount blocks on which affect the way the box sits on the tripod.

LEVEL BOX

Attach the mount blocks with the wide part of block at the top



Attach the mount blocks with the narrow part of block at the top











After installing the hardware, hook the mount blocks onto the tripod legs. Mount blocks can be moved in or out to adjust the Campaign Box's height on the tripod.

Adjusted in

Adjusted out



Mount blocks can either be tightened or left looser for use and can remain on the box after use.

FEATURES

For more effective brush support open the slide out panels slightly and put the brush handles inside.



Extra main compartment dividers are available.



INSTRUCTIONS FOR THE NO 17 FLEX EASELTM

Loosen the knobs and fold out the top and bottom shelf.



Attach the tripod quick release plate to the back of the easel.

Connect the quick release plate to the tripod. For the most versitility of positioning, have the tripod head adjustment handle pointing up.



The Flex Easel™ can be adjusted to any angle from flat to past vertical.

Can be used for watercolor.







ACCESSORIES FOR THE CAMPAIGN BOX™

104.16PAL Palette for the Campaign Box™



236.12 9x12 Covered Palette Tray



210JR Mignty Mite Jr™ Brush Washer



217SV2 10 oz Brush Washer



700FR Medium Handle Brush Set - Filbert



A - 2496 **Telescoping** Mahl Stick

B - 2250 Composition Finder™

Brush Caddy™



D - 190HALF Half Sheet Watercolorboard™

E - 214 Tri-Brush Washer

F - 235.12 9x12 Covered Watercolor Palette

G - 125 Paper Tower Holder



H - 3001 N° 17 Flex Easel™

J - 124.12 Foam Lined Pastel Trays

I - 305K Field Tripod Kit

K- 127 Handy Hook