

RT_PYRO - Infra red remote control unit (optional)

parameter numbers for technician settings

(P1...P9)

Or

System status

(Auto / Manual ON /OFF)



Note: In MANUAL ON mode,

Note: Heaters will not start if the outdoor temperature is more than 2°C/4°F above the set point.

A digital display showing the number "88" followed by a decimal point and another "88".

A digital display showing the letter "P" followed by the number "3". To the right of "P" are two small superscript circles containing "°C" and "°F".


Parameters values for technician settings

Temperature scale
(°C/°F)

Turn system OFF

Switch between Parameter numbers of technician settings (press simultaneously with the [+] or [-])

Press to start AUTO MODE or Press and hold (3 seconds) to start MANUAL MODE.

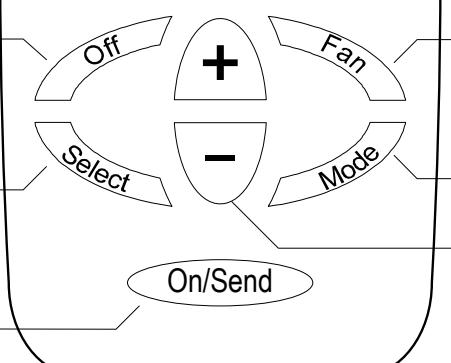

Switch between temperature scales °C/°F

Press and hold to enter technician settings

Adjust parameters values