

 


User Manual

Engineered & Tuned in Southern California, USA




Earbuds charging case * 1PCS

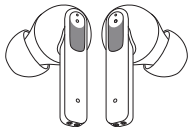

Earphones *1 Pair



Ear tips * 6 Pairs (S / M / L)
*Earphones have 1pair (L size)
already installed

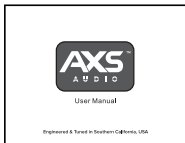


Online User Manual (Inner QR code)



Type-C charging cable * 1PCS

PRODUCT INTRODUCTION

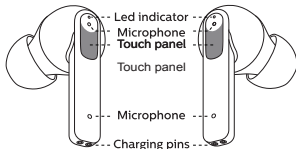


Specification

Pairing name	AXS Earbuds
Bluetooth version	V5.2
Battery	55mAh (each earbud) 500mAh (charging base)
Play time	10H (ANC off) 8+H (ANC on)
Call time	10H (ANC off) 8H (ANC on)
Earbuds charging time	1.5H
Case charging time	2H
Case standby time	180days
Charging port	Type-C



SELECTING EAR TIPS

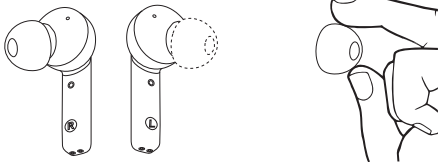


IMPORTANT!

Wear the right size ear tips for your ears.

Adjusting the earphones correctly achieves the best noise reduction performance and overall sound quality.

GET STARTED

Remove protective film on each earbud after first removal from charging case.

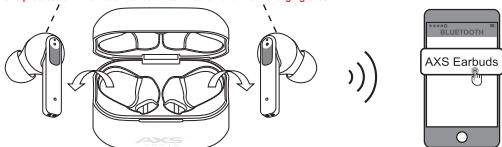

Take out earphones from the charging case (depending which side comes out first, it will be the main device), both of L&R earphones turn on and pair with each other automatically. Main device indicator blinks in red and green alternately.

Activate the bluetooth in your device and click on "AXS Earbuds" on the bluetooth list, (If they don't pair, please turn the Bluetooth on your device OFF and ON to discover your earphones) Once tapping on "AXS Earbuds" you will hear "Connected".


Note*

The earphones support single use. If your earphones don't pair to each other normally, put back both earphones into the charging case. With the cover open, hold down the multi-function button for 3S until the earphone LED indicator blinks red and green alternately. Then follow the above steps again.

After the first successful bluetooth connection, once you open the cover of the charging case, the device will reconnect automatically to the last connected device.


The earphones will automatically power off after 5 minutes without a connection.

CAPACITIVE TOUCH CONTROL

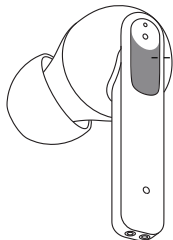


Left Earphone

Capacitive Touch Pad
Colored area designates control pad and is sensitive to touch/proximity. After locating with finger, allow 1-2 seconds for pad to reset prior to giving tap/touch commands.

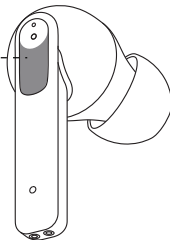

Right Earphone

OPERATING

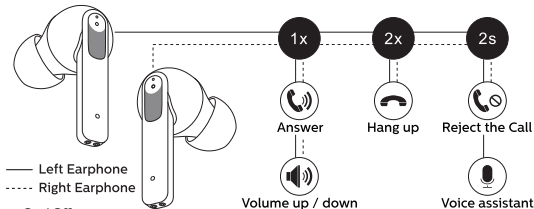

Power On / Off

As soon as you take out the earphones from the charging case, AXS Earphones turns on automatically. Put earphones into the charging case, AXS Earphones turns off automatically.
(Can not power On/Off manually)

Incoming Call

Accept / Answer Call: Tap the L or R earphone to answer.

Reject Call: Press for 2 seconds on the L or R earphone reject.

Hang up Call: Double tap the L or R earphone hang up.

Voice Assistant


When not in phone mode, press for 2 seconds on the L earphone to turn on voice assistant.

Volume Control

Up: Tap once on R earphone to increase the volume.

Down: Tap once on the L earphone to reduce the volume.

OPERATING

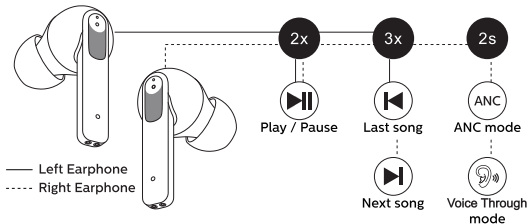

Play / Pause music

When playing music, double-click L or R earphone to play/pause music.

Last song / Next song

When playing music, three-click the L earphone to return to beginning of song. Then three-click the L earphone again to take you to previous song.


When playing music, three-click the R earphone to fastforward to next song.

ANC / Voice Through mode

The earphones default in Voice Through mode when first powered ON.

- Press the R earphone for 2 seconds to activate ANC.
- Continue to press the R earphone for an additional 2 seconds to deactivate ANC.
- Continue to press the R earphone for an additional 2 seconds to activate Voice Through.

VOICE PROMPTS

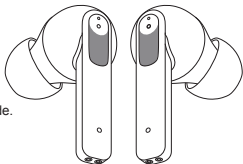

“Pairing”

Indicates that the earphones are in discoverable mode.

“Connected”

Confirms that the earphones are connected to your bluetooth device.

Note: When using both earphones, you will hear a second “Connected” prompt when the secondary earphone connect to the primary earphone for Left-Right stereo mode.

“Disconnected”

Indicates that the earphones have lost their bluetooth connection to your device.

“ANC On”

Indicates Active Noise Cancellation mode is activated. (20-25dB)

“ANC Off”


Indicates Active Noise Cancellation mode is deactivated.

“Voice Through”

Allows some environmental sounds through to the earphones.

“Low Battery”

Lets you know when your earphones have less than 30% battery life left.

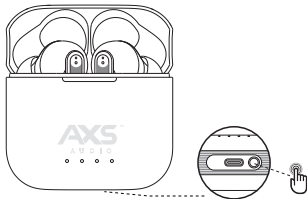

Factory Reset

Put back both earphones into the charging case, open the cover and hold the multi-function button of charging case for 10S until the charging case four LED indicator blinks 5 times at the same time. This confirms that the previous pairing records have been cleared successfully, close case. Then follow the "Get Started" page to connect with your bluetooth device.

CHARGING



LED



25%



50%



75%



100%



Case (0-100%) = 2 hours
Earphones (1-100%) = 1.5 hours

Charging case LED indicators in white pulse when charging.

After fully recharged, the 4 LED indicators on the charging case turn off.



Please use the provided charging cable to recharge the earphones by the charging case.

Also compatible with wireless charging.



1. Audio warning:

*Listen responsibly. The National Safety Council recommends limiting continuous exposure of 85dB for a maximum daily dose of 8 hours to prevent noise-induced hearing impairment. Turn the volume down before putting on your earphones, then adjust it to the right volume.

2. Don't use earphones while driving or riding your bike.

3. Stay away from sharp edges, uneven surfaces, metal parts, and anything that could damage the earphones.

4. Any attempt to modify, self-repair, disassemble or the tampering of our product may cause a hazard.

5. Do not use corrosive or volatile liquids to clean the earphones.

6. Do not use earphones in dangerous environments.

7. These earphones contain small parts, which may cause a choking hazard. Please keep away from children and pets to prevent accidents.

8. Battery warning:

- *Audio Expert Systems, Inc. does not assume any liability or responsibility from the improper use or external damage to the earphones and/or battery.
- *The battery can only be charged by using an adapter specially designed to accept the cable of this product.
- *Please dispose of the batteries according to local regulations. Recycle if possible. Do not dispose of the batteries as household waste or throw them into a fire, lest they explode.
- *Please refer to the user manual for instructions on the charging status indicator.

Thank You!



AUDIO EXPERT SYSTEMS, INC.

www.axsaudio.com

support@axsaudio.com