fuse – 24 MONTH WARRANTY

Fuse will replace the faulty product at no cost to the consumer. The warranty does not extend to any consequential damages or cost that may be incurred and is valid for 24 months from date of purchase. The consumer must return the faulty product to the retail store it was purchased from together with proof of purchase.

The warranty is provided by: Pacific Optics (in Australia) 18 Taree St, Burleigh Heads, QLD 4220 Telephone: (07) 5593 4222 Email: info@fuseaudio.com.au

 
Signature Marketing NZ Ltd (in New Zealand) 25a Triton Drive, Rosedale, Auckland 0632 Telephone (NZ): (09) 479 5524 Email (NZ): sales@signaturenz.com

The benefits to the consumer under this warranty are in addition to other rights and remedies of the consumer under Australian laws in relation to the goods to which the warranty relates. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



fuse QUICK START GUIDE

WHAT'S INCLUDED:




1. PLUG INTO LIGHTER SOCKET

Insert Neon Instant Handsfree into your vehicle's cigarette lighter socket and the device will power on automatically with your vehicle, then briefly display the vehicle's battery voltage. It will then flash "BT" indicating it is ready to pair via Bluetooth.




2. CONNECT YOUR PHONE

Turn **Bluetooth** on in your phone's settings and select **Fuse Instant BT** from the available Bluetooth devices.

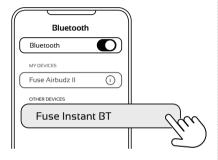


3. TUNE YOUR CAR RADIO

 Choose an unused FM frequency between 87.5-108MHz on your vehicle's stereo and adjust the volume to a comfortably low level. Set your phone volume to maximum for best results.



 4. TUNE YOUR FM TRANSMITTER



5. ENJOY YOUR MUSIC AND CALLS WITH FUSE INSTANT HANDSFREE!

Play/pause	Press (/)II
Previous track	Press I◀
Next track	Press ▶I
Activate voice assistant	Press C/NI for 2 seconds
Answer/Hang up call	Press C/>II
Reject incoming call	Press (/) for 2 seconds

Change light mode (RGB/White/OFF)	Press	<i>C</i> /≯II	twice
Adjust FM frequency (Frequency will flash)	Press	l∢ or ▶l	for 2 seconds
Frequency up	Press	►I	when frequency is flashing
Frequency down	Press	I⁴	when frequency is flashing

6. DOWNLOAD USER MANUAL

For the most up-to-date assistance, please scan this QR Code to download the full User Manual before using this product.





