

SIDE X SIDE DESTINATION STROLLER



J is for Jeep
Brand

INSTRUCTION MANUAL

ADULT ASSEMBLY REQUIRED
STYLES AND COLORS MAY VARY

11508



▲WARNING:
CHOKING HAZARD

Adult assembly required because of small parts. Keep assembly parts out of reach of children under 3 years.

Read all instructions BEFORE assembly and USE of product. KEEP INSTRUCTIONS FOR FUTURE USE.



www.DeltaChildren.com

Customer Care Tel. 1-(800)-377-3777

DCP 10 13 17 V1

WARNING

WARNING: Please follow all of these instructions to ensure the safety of your child. Keep these instructions for future reference.

WARNING: Failure to follow these instructions could result in serious injury or death.

WARNING: Avoid serious injury from falling or sliding out. Always insure that the child is properly positioned by using the safety harness according to these instructions.

WARNING: Never leave children unattended.

WARNING: CHOKING HAZARD Adult assembly required because of small parts.

Keep (assembly parts) out of reach of children under 3 years.

CAUTION: Purses, shopping bags, parcels, diaper bags or accessory items may change the balance of the stroller and cause hazardous unstable conditions.

- The maximum weight that can be carried in the lower basket, and child tray, each is 3 lbs (1.36 kg). Excessive weight may cause a hazardous unstable condition to exist.
- Before allowing the children near the stroller, be certain the stroller is fully erect and latched in the open locked position.
- Use of the stroller with children weighing more than 50 pounds or over 42 inches tall, will cause excessive wear and stress on the stroller and may cause hazardous unstable condition to exist. **NEVER** use the stroller on stairways or escalators.
- **NEVER** use the stroller with roller skates or in-line skates. Never allow your stroller to be used as a toy.

To prevent injury:

Make sure all body parts are clear of the stroller when folding and unfolding.

CARE AND MAINTENANCE

- To clean the plastic parts on stroller use a mild cleaning solution with warm water on a sponge or damp cloth. Hand wash fabric with damp cloth and air dry. Do not use bleach.
- To keep your stroller wheels from squeaking, use silicone or graphite based lubricant.
- Check your stroller for loose screws, worn parts, torn material or stitching on a regular basis. Replace or repair parts as needed.
- Discontinue use of stroller if it should become damaged or malfunctions.
- If you experience any difficulty with assembly, missing parts or use, please DO NOT return this item to the store. Retail stores are unable to properly assist you. Contact our Customer Service Department directly for assistance 1-800-377-3777.



Delta Childrens Products Corp.
114 West 26th Street
New York, NY 10001
1-800-377-3777
www.deltachildren.com

Parts

IMPORTANT! Please remove all parts from the package and identify them before assembly.

IMPORTANT! Before assembly and each use, inspect this product for damaged hardware, loose joints, missing parts, or sharp edges. NEVER use if any parts are missing or broken. Contact manufacturer for replacement parts and instructions if needed. Never substitute parts. **IMPORTANT!** Adult assembly is required.



Stroller Frame



Child Bar
Part # 50342



Front Wheels
Part # 50343



Back Rear Wheels
Part # 50344




Rear Wheel Axle
Part # 50345

Assembly



WARNING: Care must be taken when folding and unfolding the stroller to prevent finger entrapment.

Remove stroller from box. The front wheels, rear wheels, child bar and carrying strap need to be installed prior to use.

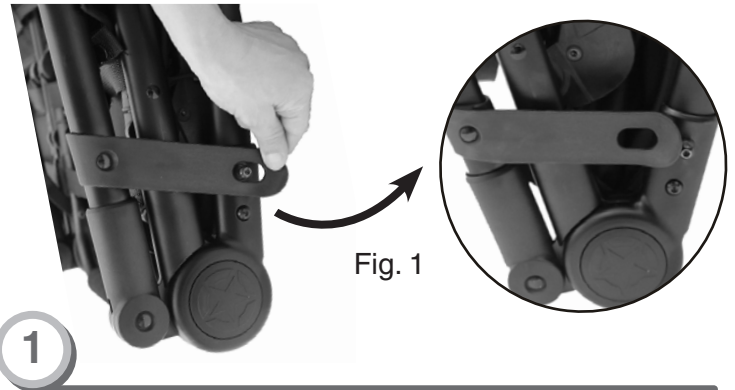

Opening Stroller

- First, release the locking latch clip which is located on the left side of the stroller (Fig. 1).

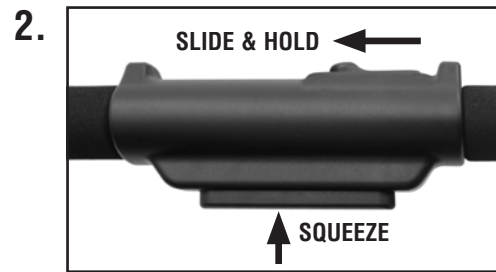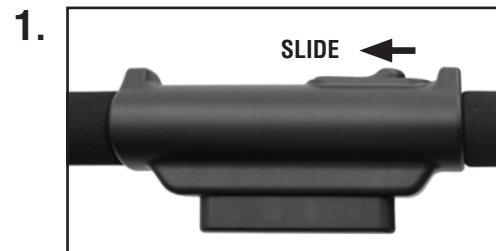

Lift Upward To Release
Fig. 1A



- Second, open the stroller.
A dual action is needed to open the stroller (Fig.1A).
Action 1: Slide from right to left the unlock tab with your thumb and hold.
Action 2: While squeezing bottom button and holding unlock tab, rotate handle forward into a fully open position (Fig. 1B).
Note: The stroller is in a fully locked position when stroller clicks. Prior to placing your child into the stroller, test to make sure stroller is in a fully opened and locked position.

Assembly

ATTACHING FRONT WHEELS

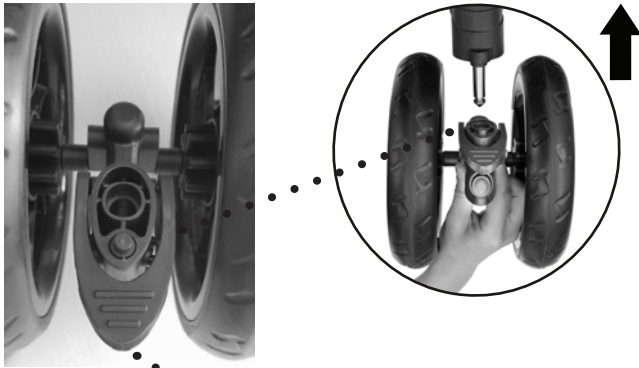


Fig. 2

Lock Swivel Pedal

2

Attaching Front Swivel Wheels

- Locate the legs on the front of the stroller.
- Attach one front swivel wheel to the stroller frame leg making sure the lock pedal on the wheel is facing up (Fig. 2). You will hear a “snap” once they are in a fully locked position. Check to make sure the front swivel wheel is fully secure by pulling downward.
- Repeat on opposite side.



Fig. 2B

To Lock Swivel
Press Downward On Lever



Fig. 2C

To Unlock Swivel
Push Upward Under Lever

Front Wheel Swivel Lock

- To lock swivel: Apply light downward pressure on the swivel lever located on the front of the wheel (Fig. 2).
- To release swivel: Gently lift upward under the swivel lever located on the front of the wheel (Fig. 2C).

DETTACHING FRONT WHEELS

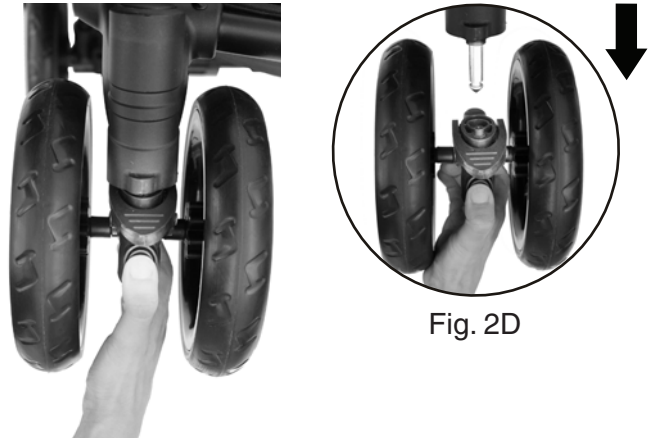


Fig. 2D

- To dettach wheels: Press the wheel release button located at the bottom of the wheel housing underneath the swivel lock and pull downward to release (Fig. 2D).
- Repeat on opposite side.

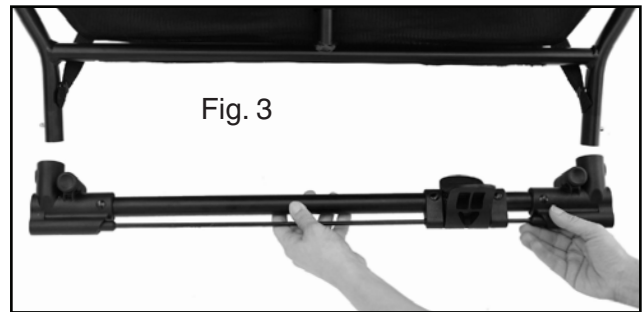


Fig. 3

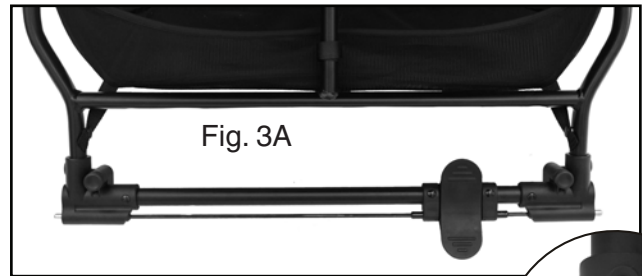


Fig. 3A

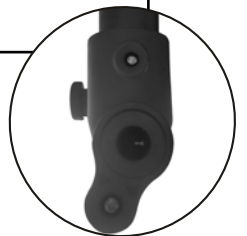


Fig. 3B

3

Attaching Rear Wheel Axle

Please follow these instructions for the proper installation of your rear axle assembly.

- To attach rear wheel axle: Attach the rear wheel assembly, line up the frame tubes with the rear wheel back leg housing with the brake pedal facing outward of the stroller (Fig. 3). Push both housings onto the rear frame tubes at the same time until they “CLICK” into a fully locked position (Fig. 3A). Check that the push buttons show through the small hole near the bottom of the inside housing (Fig 3B). Make sure the axle is firmly attached to the stroller by pulling downward on the rear wheel axle.

Assembly

BACK WHEELS

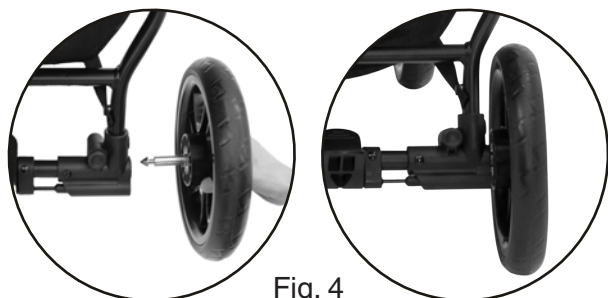


Fig. 4



Fig. 4A

4

Attaching Back Wheels To Wheel Axle:

Please follow these instructions for the proper installation of your rear axle assembly.

- To attach rear wheels: Align back wheel axle to the stroller's rear wheel axle housing (Fig.4) Push back wheel axle until you hear a "CLICK". Repeat steps for other side back wheel. Once the wheels are securely attached to the rear wheel axle (Fig. 4A) check to make sure back wheel is in a fully locked position by pulling outward.

NEVER use stroller if any wheels are not in a fully locked position. Please contact our customer server department immediately at 1-800-377-3777 for assistance.



Fig. 4B

- To dettach rear wheels: Press the wheel release button located on the sides of the wheel axle and pull outward until wheel is released (Fig. 4B).
- Repeat on opposite side.

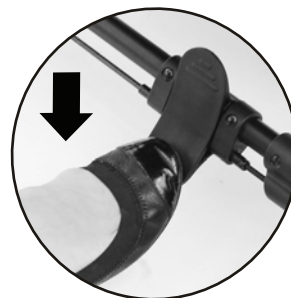


Fig. 4C
To Lock
Press Downward



Fig. 4D
To Unlock
Push Upward

WARNING: Always set brakes when the stroller is not being pushed so that the stroller will not roll away. Never leave stroller unattended on a hill or incline as the stroller may slide down the hill.

Back Wheel Brakes

- To lock brakes: Apply light downward pressure to the linked brake lever located on the rear wheel axle. (Fig. 4C) Check that the stroller will not move and that the brakes are properly applied.
- To release brakes: Gently step on top of the linked brake lever and push downward. (Fig. 4D)

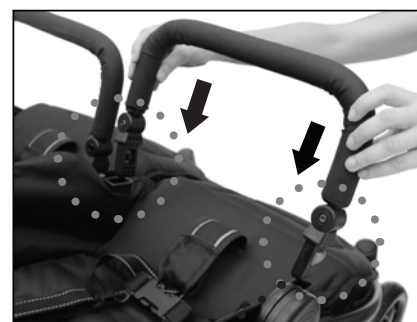


Fig. 5



Fig. 5A

5

Attaching / Removing Child Bar

To Attach Child Bar:


- Insert both sides of the child bar into the bottom of the child posts until child bar "CLICKS" into a fully locked position (Fig. 5). Repeat on other side.

Note: Pull upward on the child bar to ensure that the child bar is securely locked.


To Remove Child Bar:

- Press tabs inward located on both sides of the child bar and lift upward until child bar is fully removed (Fig. 5A).

Set Up and Use

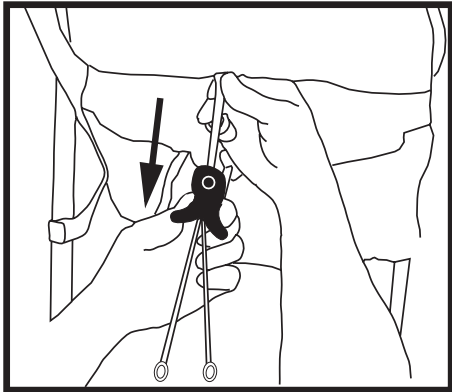

RECLINE POSITION
Fig. 7

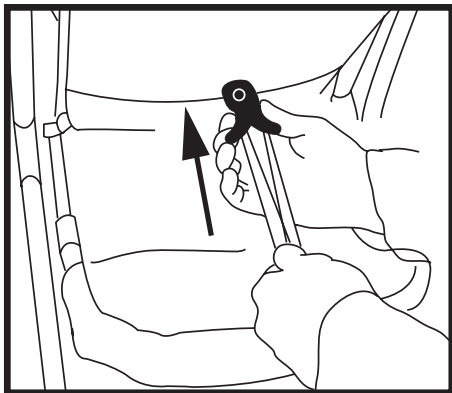

UPRIGHT POSITION
Fig. 7A

7

Seat Back Adjustment

- **Recline Position:** To place seat in a recline position, squeeze both sides on cord housing and pull away (Fig. 7)
- **Upright Position:** To return to an upright position, hold bottom cord loops while squeezing cord housing upwards toward backseat (Fig. 7A)




OPEN CANOPY
Fig. 8

CLOSE CANOPY
Fig. 8A

8

Canopy Adjustment

- To open canopy, push forward on the front frame of the canopy (Fig. 8).
- To close canopy, push on the front edge backward until canopy is all the way collapsed (Fig.8A).

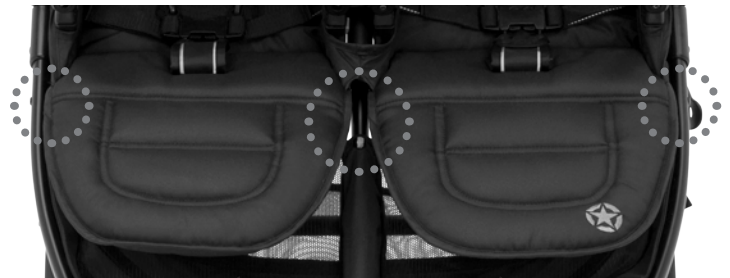

ADJUSTABLE FOOTREST
Fig. 9



9

Foot Rest Adjustment

- **To adjust foot rest:** Press both recline buttons located on left/right side of foot rest. While pressing both recline buttons, rotate foot rest upward or downward to its desired position until it “CLICKS” into a fully locked position (Fig. 9).



Securing Child

Before Placing your Child in Stroller:

Close Canopy. Press both brake pedals down until they “click” into the locked position.


Make sure the brake pedals are pressed down completely.

Always set both brake pedals when parking the stroller.

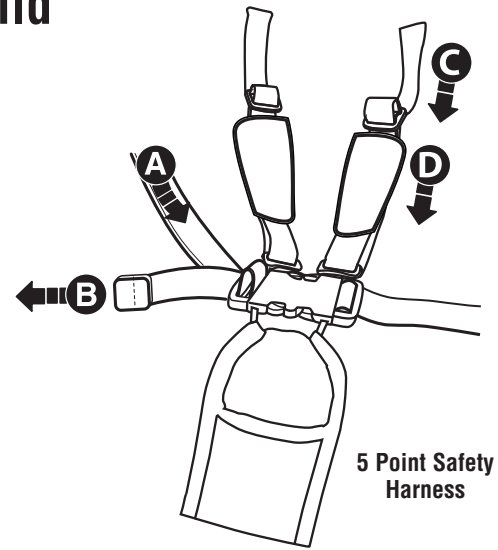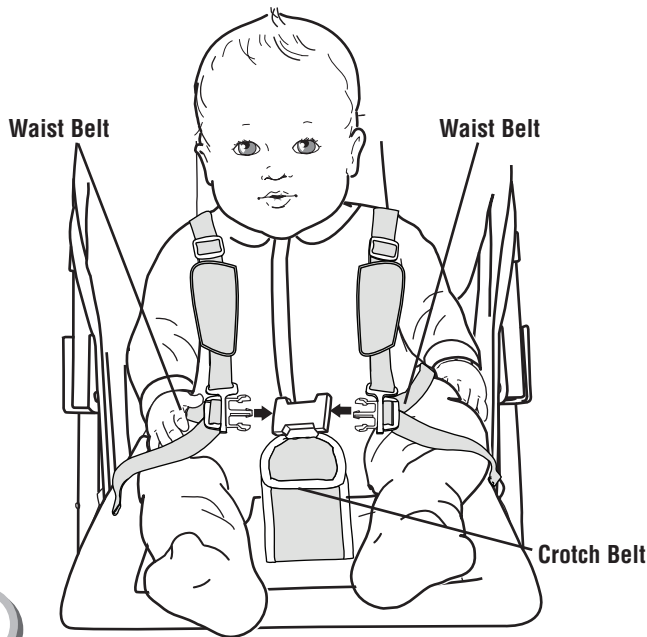

5 Point Safety Harness

TIGHTEN

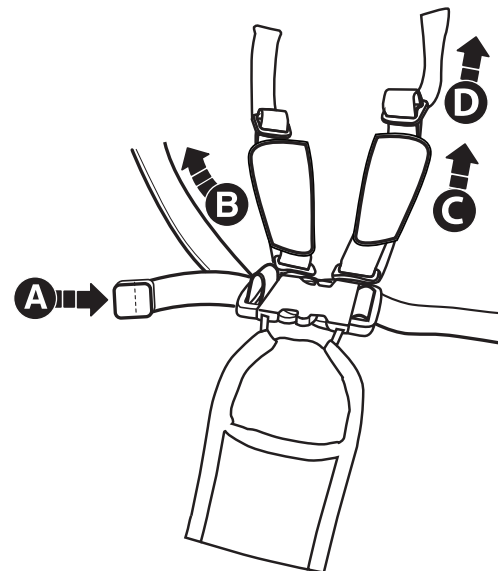


LOOSEN

1

Securing Child

- Place your child in the stroller. Position the crotch belt between your child's legs.
- Pull shoulder straps over child's arm and shoulder and fasten **both** strap ends to the restraint system.
- Fasten **both** waist belts to the buckle on each side of the crotch belt. Make sure you hear a “click” on both sides.
- Check to be sure the restraint system is securely attached by pulling it away from your child. The restraint system should remain attached.

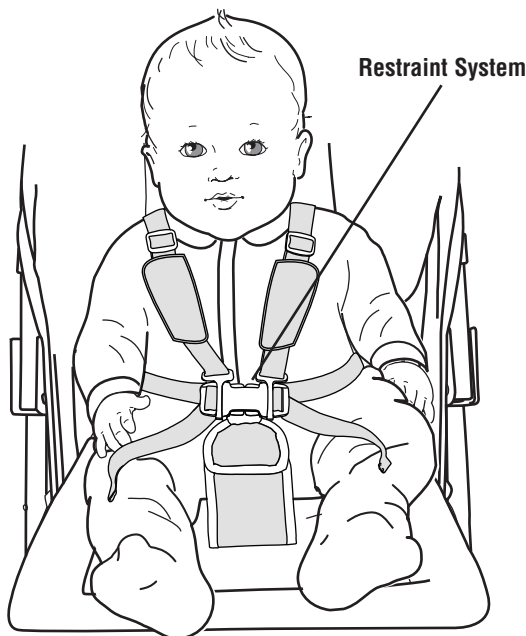

2

- Tighten each waist belt and shoulder strap so that the restraint system is snug against your child.
Please refer to the next section for instructions to tighten the waist belts.

3

To tighten the waist belts and shoulder straps:

- Feed the anchored end of a waist belt up through the buckle to form a loop **A**. Pull the free end of the waist belt **B**.
- Repeat this procedure to tighten the other waist belt.
- Feed the top end of the shoulder strap through the plastic stay to form a loop **C**. Pull the bottom end down to tighten the strap **D**.
- Repeat this procedure to tighten the other shoulder strap.


To loosen the waist belts and shoulder straps:

- Feed the free end of the waist belt up through the buckle to form a loop **A**. Enlarge the loop by pulling on the end of the loop toward the buckle. Pull the anchored end of the waist belt to shorten the free end of the waist belt **B**.
- Repeat this procedure to loosen the other waist belt.
- Feed the bottom end of the shoulder strap through the plastic stay to form a loop **C**. Pull the top end up to loosen the strap **D**.
- Repeat this procedure to loosen the other shoulder strap.

Please note: After adjusting the restraint system to fit your child, make sure you pull on it to be sure it is securely fastened.

Fold and Store

Fig. 10

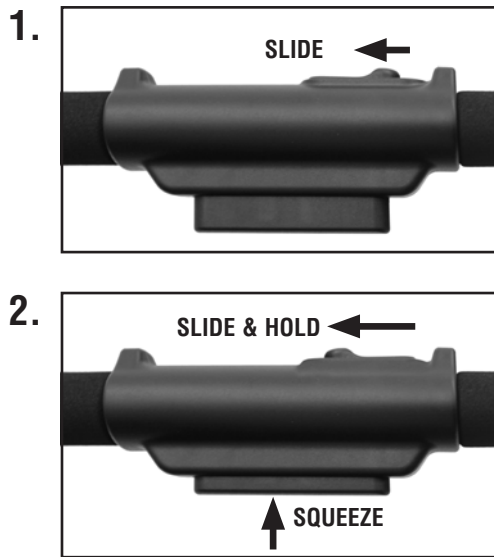

10

Folding Stroller

WARNING: Care must be taken when folding and unfolding the stroller to prevent finger entrapment.

Note: Canopy must be closed.

A dual action is needed to fold the stroller (Fig.10).

Action 1: Slide from right to left the unlock tab with your thumb and hold.

Action 2: While squeezing bottom button and holding unlock tab, rotate handle forward into a closed position (Fig. 10A).

Note: Press upward on stroller handle to make sure stroller is on a fully closed position. Locking latch will automatically close.



Fig. 10A



Delta Childrens Products Corp.
114 West 26th Street
New York, NY 10001
1-800-377-3777
www.deltachildren.com