

BREEZE STROLLER

Jeep®

INSTRUCTION MANUAL

13298

STYLES AND COLORS MAY VARY



**▲WARNING:
CHOKING HAZARD**

Adult assembly required because of small parts. Keep assembly parts out of reach of children under 3 years.

Read all instructions BEFORE assembly and USE of product. KEEP INSTRUCTIONS FOR FUTURE USE.

Customer Care Tel. 1 (646) 435-8726



DELTA CHILDREN

www.DeltaChildren.com

DCP-IM-01232020

WARNING

WARNING: Please follow all of these instructions to ensure the safety of your child. Keep these instructions for future reference.

WARNING: Failure to follow these instructions could result in serious injury or death.

WARNING: Avoid serious injury from falling or sliding out. Always insure that the child is properly positioned by using the safety harness according to these instructions.

WARNING: Never leave children unattended.

WARNING: CHOKING HAZARD Adult assembly required because of small parts.

Keep (assembly parts) out of reach of children under 3 years.

CAUTION: Purses, shopping bags, parcels, diaper bags or accessory items may change the balance of the stroller and cause hazardous unstable conditions.

- The maximum weight that can be carried in the lower basket, and child tray, each is 3 lbs (1.36 kg). Excessive weight may cause a hazardous unstable condition to exist.
- Before allowing the children near the stroller, be certain the stroller is fully erect and latched in the open locked position.
- Use of the stroller with children weighing more than 45 pounds or over 42 inches tall, will cause excessive wear and stress on the stroller and may cause hazardous unstable condition to exist.
NEVER use the stroller on stairways or escalators.
- **NEVER** use the stroller with roller skates or in-line skates.
Never allow your stroller to be used as a toy.

To prevent injury:

Make sure all body parts are clear of the stroller when folding and unfolding.

CARE AND MAINTENANCE

- To clean the plastic parts on stroller use a mild cleaning solution with warm water on a sponge or damp cloth. Hand wash fabric with damp cloth and air dry. Do not use bleach.
- To keep your stroller wheels from squeaking, use silicone or graphite based lubricant.
- Check your stroller for loose screws, worn parts, torn material or stitching on a regular basis. Replace or repair parts as needed.
- Discontinue use of stroller if it should become damaged or malfunctions.
- If you experience any difficulty with assembly, missing parts or use, please DO NOT return this item to the store. Retail stores are unable to properly assist you. Contact our Customer Service Department directly for assistance 1-646-435-8726 or gcs@DeltaChildren.com.



DELTA CHILDREN

Delta Children's Products Corp.
114 West 26th Street
New York, NY 10001
(646) 435-8726
www.DeltaChildren.com



Before returning this product to the store! Let's see if we can assist you!

- **Not sure how to assemble our product?**

Visit our site for easy to follow instructions along with some Tricks and Tips assembly video's <https://www.deltachildren.com/pages/instructions>

- **If you are missing a piece or have a damaged part**

Please contact our Consumer Experience Center for assistance at 646-435-8726 or email gcs@DeltaChildren.com. To better assist you please have your Style# or Model# and Lot# available. This can be found on a white rectangular sticker on your product, on the registration card, and on the product's box.

- **In the event we do not have a replacement part available**

You may need to return your product to the retailer for an exchange or refund.

- **Warranty**

In order to protect your investment, don't forget to register your product. You may also wish to consider purchasing our extended warranty.

Visit <https://www.deltachildren.com/pages/extended-warranty> for more details.

- **Please note:**

"All Final", "As Is" or Third Party/Liquidator sales are not covered under our Limited Limited Manufacturer Warranty..



LIMITED MANUFACTURER WARRANTY

This Delta product is warranted to be free from defects for a period of 90 days from the date of purchase under normal use. This warranty extends only to the original retail purchaser and is valid only when supplied with proof of purchase, or if received as a gift, when the registration is on file with Delta. This limited manufacturer warranty does not cover the following:

- Products purchased as floor models or samples.
- Items purchased on an “as-is” basis, as a second hand product, or as a resale product.
- Items purchased at a Final sale, a “Going out of Business” sale, or a Liquidation sale.

TO REGISTER YOUR PRODUCT for important safety alerts and updates to your product please visit www.deltachildren.com

TO REPORT A PROBLEM, please log on to www.deltachildren.com and click the Consumer Care Tab, or contact us by phone at (646) 435-8726 or email gcs@DeltaChildren.com

Date of Purchase: _____ (you should also keep your receipt)

EXTENDED WARRANTY

DON'T MISS YOUR CHANCE TO BE COVERED FOR ALL OF LIFE'S MISHAPS!

With Delta's Extended Warranty, you're covered for mechanical failure from normal use or if your item stops working due to normal wear and tear, plus all those unexpected surprises.

2 YEARS OF PROTECTION

For Additional Information:

Simply visit our Website, register your product, and add the Extended Warranty


<https://www.deltachildren.com/pages/product-registration>

Extended Warranty only available in the following States: Arkansas, Colorado, Delaware, District of Columbia, Georgia, Idaho, Illinois, Indiana, Iowa, Kansas, Kentucky, Louisiana, Maryland, Michigan, Mississippi, Missouri, Nebraska, Nevada, New Hampshire, New York, North Carolina, North Dakota, Pennsylvania, Rhode Island, South Dakota, Tennessee, Utah, West Virginia


Parts

IMPORTANT! Please remove all parts from the package and identify them before assembly.


IMPORTANT! Before assembly and each use, inspect this product for damaged hardware, loose joints, missing parts, or sharp edges. NEVER use if any parts are missing or broken. Contact manufacturer for replacement parts and instructions if needed. Never substitute parts. **IMPORTANT!** Adult assembly is required.

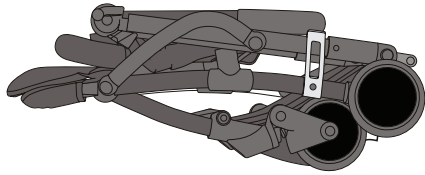

Stroller Frame

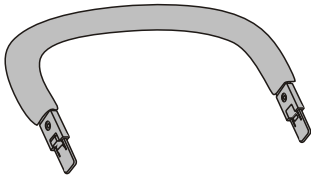

Child Bar


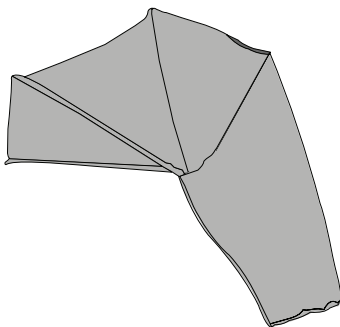


Canopy

Assembly

Remove stroller from box. The canopy, and child bar need to be installed prior to use.

WARNING: Care must be taken when folding and unfolding the stroller to prevent finger entrapment.

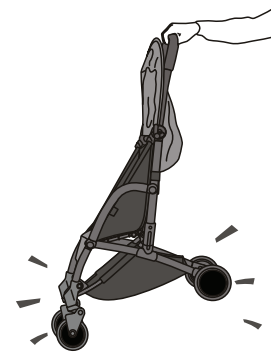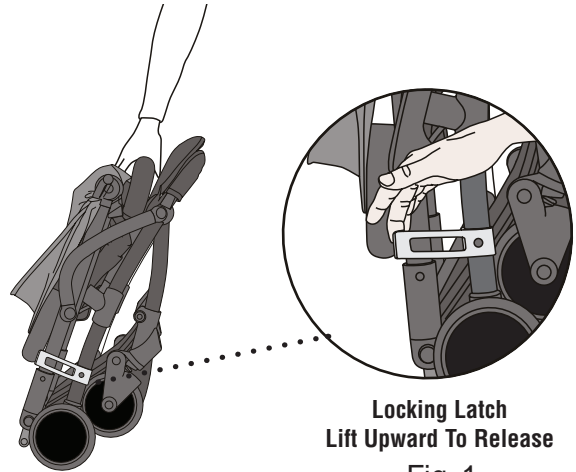

Correct Front Wheel Direction



Fig. 1B

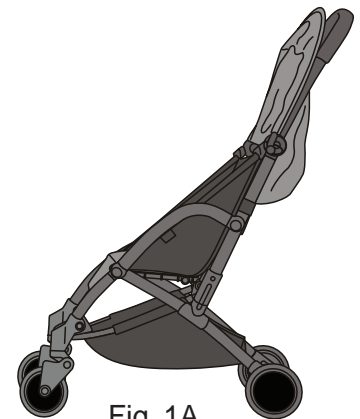


Fig. 1A


1

Opening Stroller

WARNING: Care must be taken when folding and unfolding the stroller to prevent finger entrapment.

- First, release the locking latch clip which is located on the left side of the stroller. (Fig. 1)
- Second, lift up on the stroller handle with both hands until the stroller frame is in a fully opened and locked position. (Fig. 1A) The stroller is in a fully locked position when stroller clicks. Prior to placing your child into the stroller, test to make sure stroller is in a fully opened and locked position.
- Make sure front wheels are facing the correct direction (Fig. 1B).

Assembly

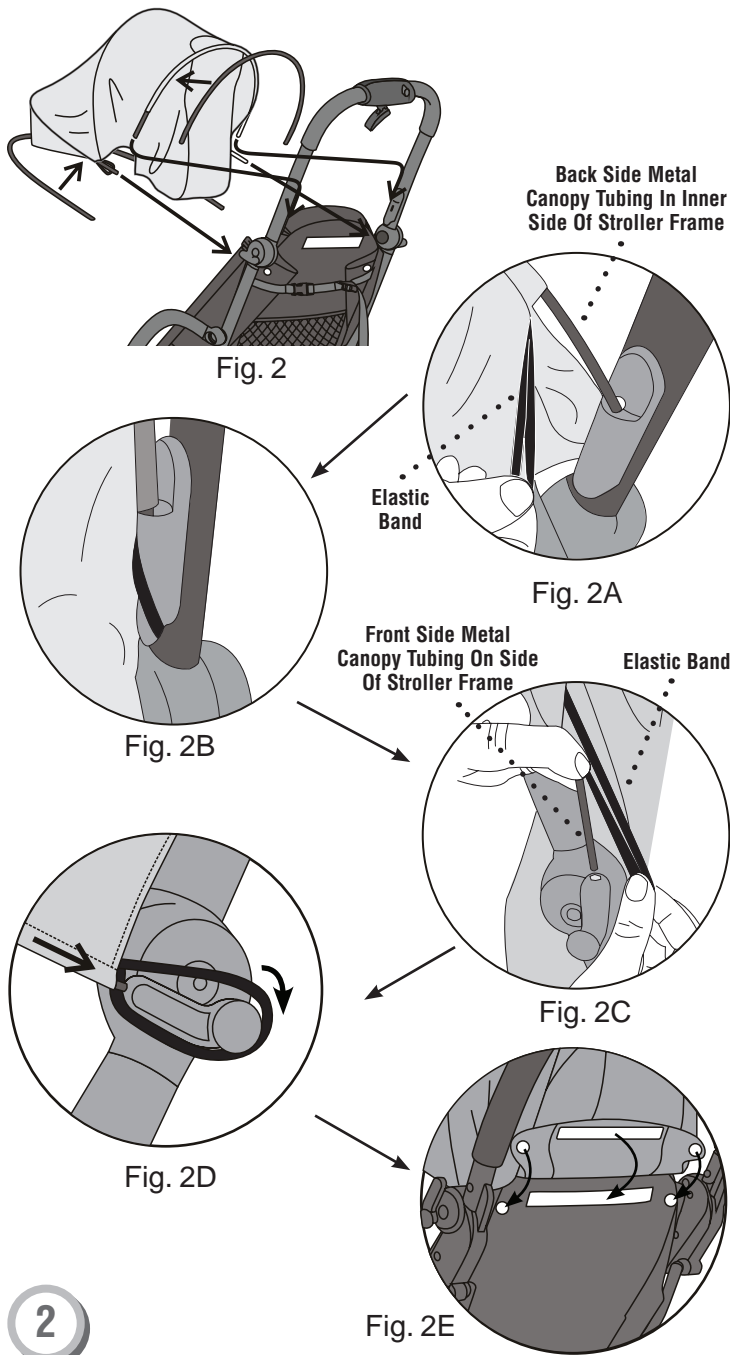

2 Attaching Canopy


To Attach Canopy:

- Locate the two metal tubing located on both sides of the front and back canopy. (Fig. 2).
- Insert the back canopy tubing into the inner piece housing located on the inner side of the stroller frame (Fig. 2A). Then wrap the elastic around the inner piece to fully secure (Fig. 2B). Repeat on opposite side of back canopy.
- Insert the front canopy tubing into the side of the stroller frame housing (Fig. 2C). Then wrap the elastic around the side of the stroller frame housing to fully secure (Fig. 2D). Repeat on opposite side of the front canopy.
- To securely fasten the canopy, velcro the back of the canopy to the back of the stroller seat (Fig. 2E).

Note: Pull outward on canopy to ensure that canopy is securely locked.

To Remove Canopy:

- First, remove all elastic bands located on both sides of the canopy. Then lift both metal tubing located on the front and back of the canopy upward until fully removed.

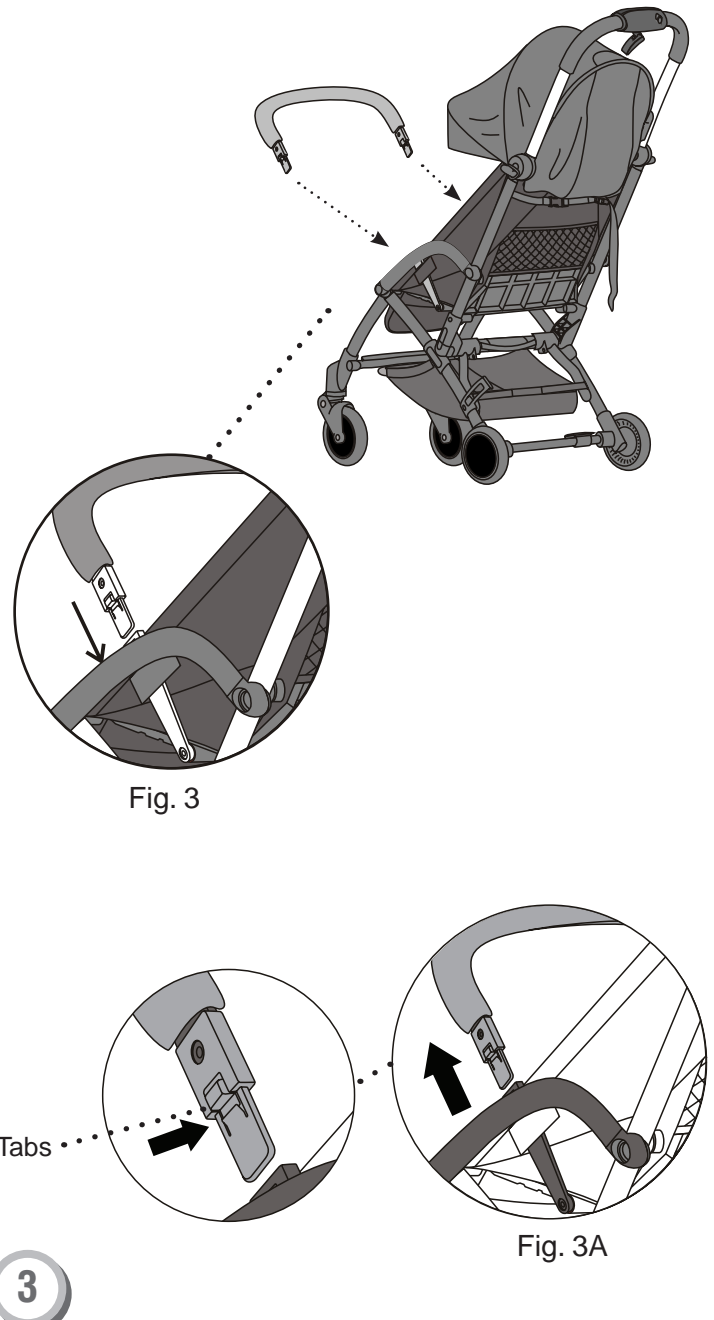

3 Attaching / Removing Child Bar

To Attach Child Bar:

- Insert both sides of the child bar into the bottom part of the child bar (Fig. 3) until child bar "CLICKS" into a fully locked position.

Note: Pull upward on the child bar to ensure that the child bar is securely locked.

To Remove Child Bar:

- Press the tabs inward located on both sides of the child bar and lift upward until child bar is fully removed (Fig. 3A).

Setup and Use

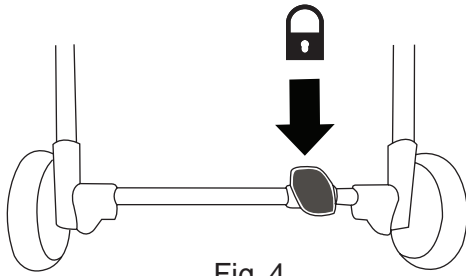


Fig. 4

Push downward on brake lever to lock stroller

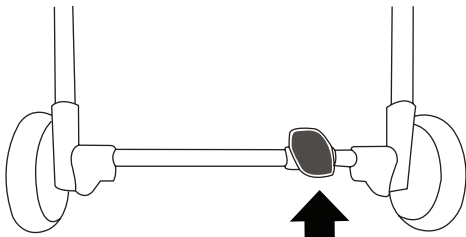


Fig. 4A


Push upward on brake lever to unlock stroller

4

WARNING: Always lock brakes when the stroller is not being pushed so that the stroller will not roll away. Never leave stroller unattended on a hill or incline as the stroller may slide down the hill. **WARNING:** NEVER leave child unattended in stroller.


Rear Non-Swivel Wheel Brakes - One Touch Brake System

- **To engage brakes:** Apply light downward pressure to the linked brake lever located on the right side of the rear wheel axle. (Fig. 4) Check to make sure the brakes are in a fully locked position, making sure stroller will not move when pushed.
- **To release brakes:** Gently lift up on the linked brake lever (Fig. 4A).

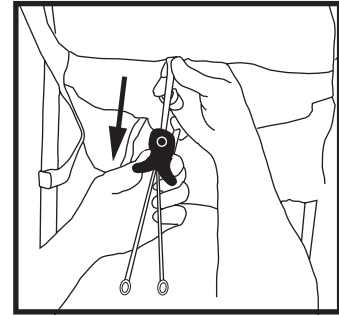


RECLINE POSITION

Fig. 5A

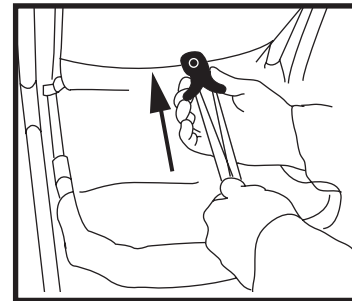


UPRIGHT POSITION

Fig. 5B

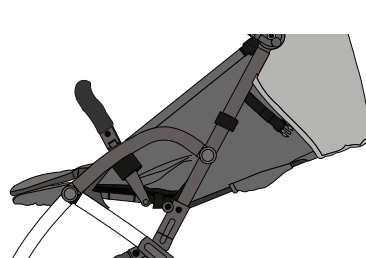

RECLINE POSITION

Fig. 5A

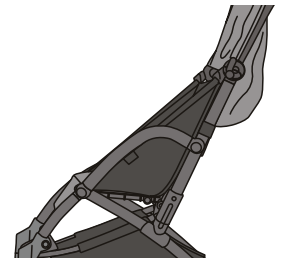

UPRIGHT POSITION

Fig. 5B

5

Seat Back Adjustment

- **Recline Position:** Squeeze both sides on cord housing and pull away to recline seat, as shown in (Fig. 5A)
- **Upright Position:** Hold bottom cord loops while squeezing cord housing and move cord housing upwards the backseat, as shown in (Fig. 5B)

Assembly

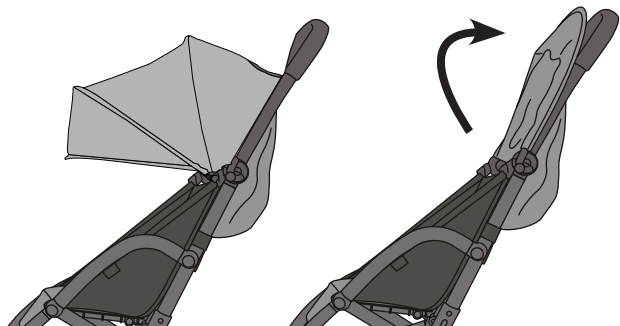


Fig. 6

Fig. 6A

6

Canopy Adjustment

- To open canopy, push forward on the front frame of the canopy. Pull backwards on the canopy frame to fold completely (Fig. 6).
- To close the canopy, push on the front edge backward until canopy is all the way collapsed (Fig. 6A).

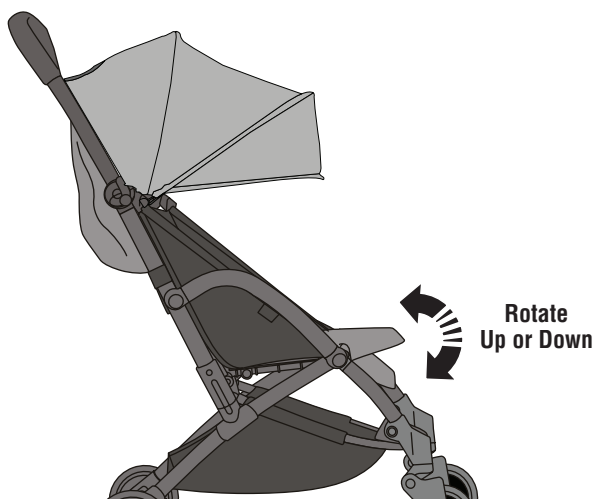


Fig. 7

7

Foot Rest Adjustment

- **To adjust foot rest:** Pull lever located underneath footrest outward and rotate upward or downward to adjust to its desired position (Fig. 7). There are 2 footrest positions.

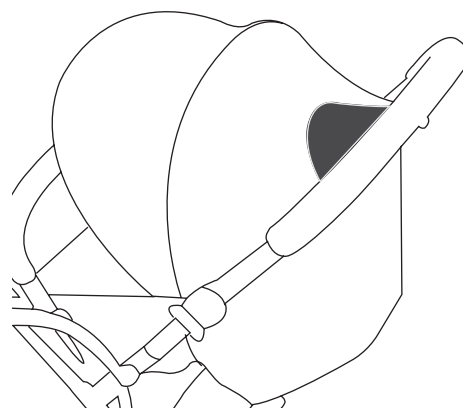


Fig. 8

8

Peek-A-Boo

- Peek-A-Boo window is located on the top center of the canopy (Fig. 8).



SECURING CHILD

Before Placing your Child in Stroller:

Close Canopy. Press both brake pedals down until they “click” into the locked position.

Make sure the brake pedals are pressed down completely.

Always set both brake pedals when parking the stroller.

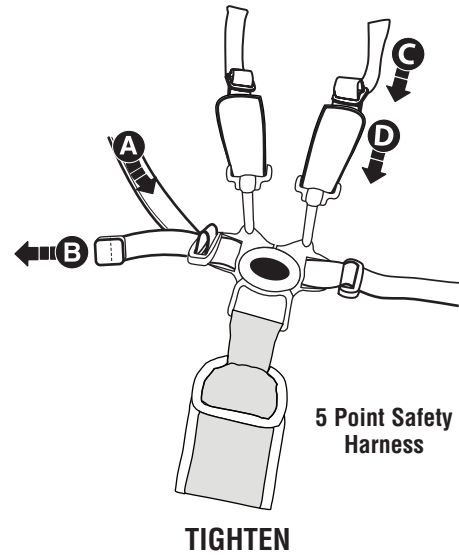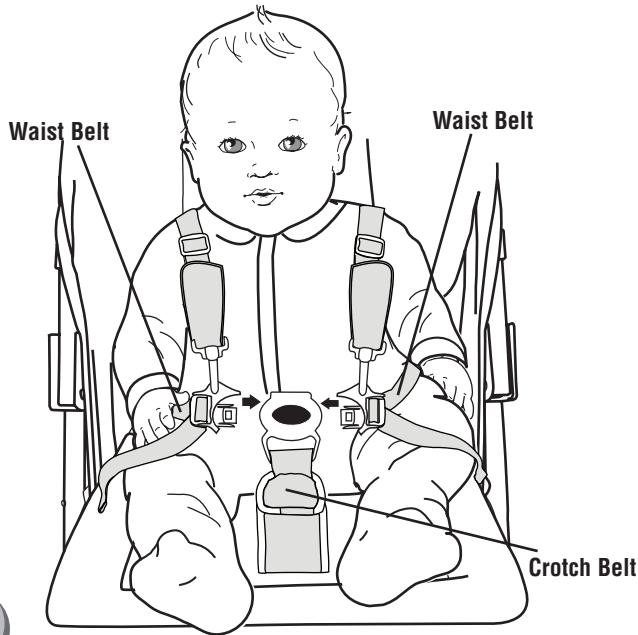

1


Securing Child

- Place your child in the stroller. Position the crotch belt between your child's legs.
- Pull shoulder straps over child's arm and shoulder and fasten **both** strap ends to the restraint system.
- Fasten **both** waist belts to the buckle on each side of the crotch belt. Make sure you hear a “**click**” on both sides.
- Check to be sure the restraint system is securely attached by pulling it away from your child. The restraint system should remain attached.



2

- Tighten each waist belt and shoulder strap so that the restraint system is snug against your child.
- Please refer to the next section for instructions to tighten the waist belts.

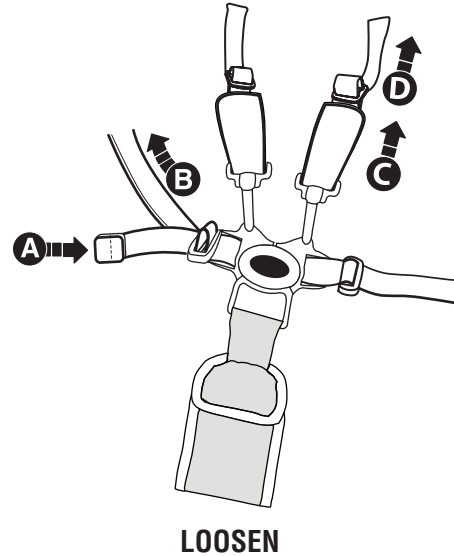

3

To tighten the waist belts and shoulder straps:

- Feed the anchored end of a waist belt up through the buckle to form a loop **A**. Pull the free end of the waist belt **B**.
- Repeat this procedure to tighten the other waist belt.
- Feed the top end of the shoulder strap through the plastic stay to form a loop **C**. Pull the bottom end down to tighten the strap **D**.
- Repeat this procedure to tighten the other shoulder strap.

To loosen the waist belts and shoulder straps:

- Feed the free end of the waist belt up through the buckle to form a loop **A**. Enlarge the loop by pulling on the end of the loop toward the buckle. Pull the anchored end of the waist belt to shorten the free end of the waist belt **B**.
- Repeat this procedure to loosen the other waist belt.
- Feed the bottom end of the shoulder strap through the plastic stay to form a loop **C**. Pull the top end up to loosen the strap **D**.
- Repeat this procedure to loosen the other shoulder strap.

Please note: After adjusting the restraint system to fit your child, make sure you pull on it to be sure it is securely fastened.

Setup and Use

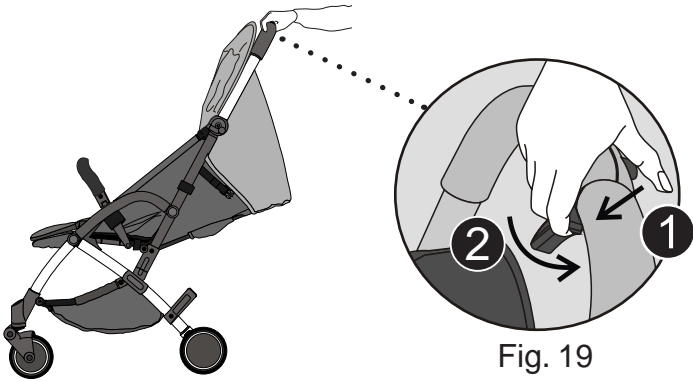


Fig. 19

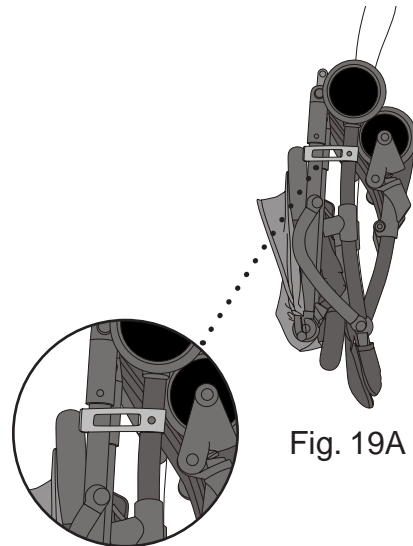
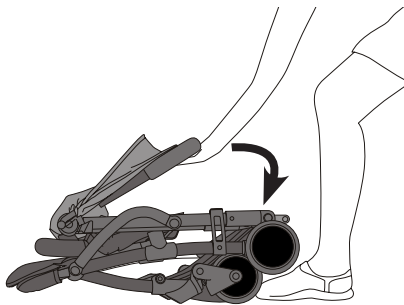
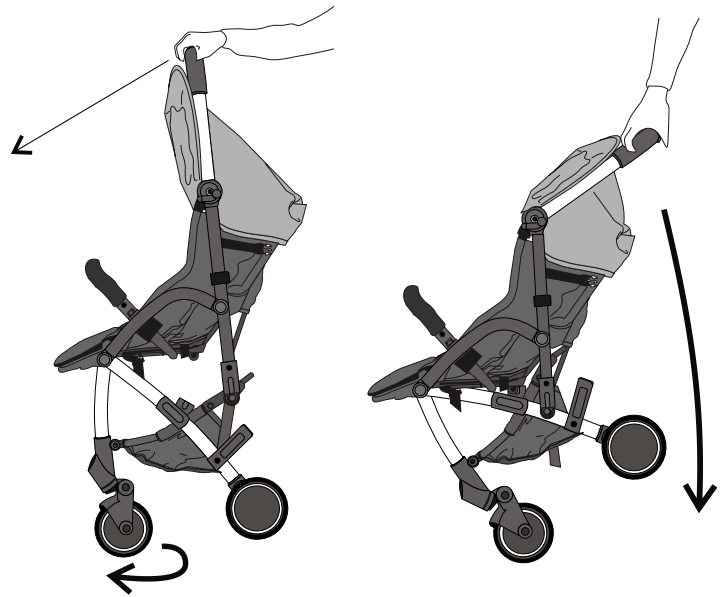


Fig. 19A

Auto Lock
Fig. 19B

19

Folding the Stroller

WARNING: Care must be taken when folding and unfolding the stroller to prevent finger entrapment.


NOTE: Make sure canopy is in it's fully closed position, seat is in a fully recline position before folding the stroller.

Folding the Stroller: Close the canopy as described on page 6 (Fig. 6A), position the seat to a recline position as described on page 5 (Fig. 5A). A dual action is needed to fold the stroller (Fig.19).

Action 1: Press the unlock tab with your thumb and hold. ①

Action 2: While pressing unlock tab, press the fold lever inward and push stroller forward, then downward. ②

Once the stroller begins to fold, release the unlock tab and push downward until stroller is in a fully folded position (Fig.19A). Folding latch (located on the left side of the stroller) will automatically lock once stroller is in a fully folded and locked position. (Fig. 19B).

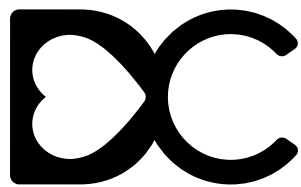

DELTACHILDREN

Delta Children's Products Corp.

114 West 26th Street
New York, NY 10001
646-435-8726
www.DeltaChildren.com