# GEMINI STROLLER



## **INSTRUCTION MANUAL**

ADULT ASSEMBLY REQUIRED STYLES AND COLORS MAY VARY

13598

Fits the following car seats with adapter # 10070-100, sold separately on www.deltachildren.com
Graco® SnugRide® Click Connect™ 30, 35, and 40 Infant Car Seat (not included)
Evenflo® Embrace™ Select Infant Car Seat (not included)
Evenflo® Nurture™ Infant Car Seat (not included)
Chicco® Keyfit 30™ Infant Car Seat (not included)
Britax® B-Safe 35™ Infant Car Seat (not included)



### **▲** WARNING: CHOKING HAZARD

Adult assembly required because of small parts. Keep assembly parts out of reach of children under 3 years.

Read all instructions BEFORE assembly and USE of product KEEP INSTRUCTIONS FOR FUTURE USE.

This stroller is not from, sponsored or endorsed by Graco Children's Products Inc.

This stroller is not from, sponsored or endorsed by Evenflo Company, Inc.

This stroller is not from, sponsored or endorsed by Artsana S.p.A.

This stroller is not from, sponsored or endorsed by Britax. All rights reserved.

**Customer Service:** 

email: gcs@DeltaChildren.com

www.DeltaChildren.com

DCP-IM-0724020

## **A WARNING**

**WARNING:** Please follow all of these instructions to ensure the safety of your child. Keep these instructions for future reference.

**WARNING:** Failure to follow these instructions could result in serious injury or death.

**WARNING:** Avoid serious injury from falling or sliding out. Always insure that the child is properly positioned by using the safety harness according to these instructions.

**WARNING:** Never leave children unattended.

WARNING: CHOKING HAZARD Adult assembly required because of small parts.

Keep (assembly parts) out of reach of children under 3 years.

**CAUTION:** Purses, shopping bags, parcels, diaper bags or accessory items may change the balance of the stroller and cause hazardous unstable conditions.

- The maximum weight that can be carried in the lower basket, and child tray, each is 3 lbs (1.36 kg).
   Excessive weight may cause a hazardous unstable condition to exist.
- Before allowing the children near the stroller, be certain the stroller is fully erect and latched in the open locked position.
- Use of the stroller with children weighing more than 50 pounds or over 42 inches tall, will cause
  excessive wear and stress on the stroller and may cause hazardous unstable condition to exist.
   NEVER use the stroller on stairways or escalators.
- NEVER use the stroller with roller skates or in-line skates.
   Never allow your stroller to be used as a toy.

#### To prevent injury:

Make sure all body parts are clear of the stroller when folding and unfolding.

## CARE AND MAINTENANCE

- To clean the plastic parts on stroller use a mild cleaning solution with warm water on a sponge or damp cloth. Hand wash fabric with damp cloth and air dry. Do not use bleach.
- To keep your stroller wheels from squeaking, use silicone or graphite based lubricant.
- Check your stroller for loose screws, worn parts, torn material or stitching on a regular basis. Replace or repair parts as needed.
- Discontinue use of stroller if it should become damaged or malfunctions.
- If you experience any difficulty with assembly, missing parts, or use, we may be able to assist you.
   Please contact our Customer Service Department at gcs@DeltaChildren.com



Delta Children's Products Corp. 114 West 26th Street New York, NY 10001 gcs@DeltaChildren.com www.DeltaChildren.com



## Before returning this product to the store! Let's see if we can assist you!

### Not sure how to assemble our product?

Visit our site for easy to follow instructions along with some Tricks and Tips assembly videos *https://www.deltachildren.com/pages/instructions* 

### • If you are missing a piece or have a damaged part

Please contact our Consumer Experience Center for assistance at gcs@DeltaChildren.com. To better assist you please have your Style# or Model# and Lot# available. This can be found on a white rectangular sticker on your product, on the registration card, and on the product's box.

### • In the event we do not have a replacement part available

You may need to return your product to the retailer for an exchange or refund.

### Warranty

In order to protect your investment, don't forget to register your product. You may also wish to consider purchasing our extended warranty. Visit *https://www.deltachildren.com/pages/extended-warranty* for more details.

#### Please note:

"All Final", "As Is" or Third Party/Liquidator sales are not covered under our Limited Manufacturer Warranty.



## LIMITED MANUFACTURER WARRANTY

This Delta product is warranted to be free from defects for a period of 90 days from the date of purchase under normal use. If a product is defective during this period, we will at our option repair or replace the defective part or product. This limited warranty extends only to the original retail purchaser and is valid only when supplied with proof of purchase, or if received as a gift, when the registration is on file with Delta. This limited warranty does not cover the following:

- Products purchased as floor models or samples.
- Items purchased on an "as-is" basis, as a second hand product, or as a resale product.
- Items purchased at a Final sale, a "Going out of Business" sale, or a Liquidation sale. This limited warranty gives you specific legal rights and you may also have other rights which vary from state to state.

This limited warranty gives you specific legal rights and you may also have other rights which vary from state to state.

**TO REGISTER YOUR PRODUCT** for important safety alerts and updates to your product please visit www.deltachildren.com

**TO REPORT A PROBLEM**, please log on to **www.deltachildren.com** and click the Consumer Care Tab, or contact us by email at gcs@DeltaChildren.com

## **EXTENDED WARRANTY**

### DON'T MISS YOUR CHANCE TO BE COVERED FOR ALL OF LIFE'S MISHAPS!

With Delta's Extended Warranty, you're covered for mechanical failure from normal use or if your item stops working due to normal wear and tear, plus all those unexpected surprises.

## 2 YEARS OF PROTECTION

For Additional Information:

Simply visit our Website, register your product, and add the Extended Warranty

https://www.deltachildren.com/pages/product-registration

Extended Warranty only available in the following States: Arkansas, Colorado, Delaware, District of Columbia, Georgia, Idaho, Illinois, Indiana, Iowa, Kansas, Kentucky, Louisiana, Maryland, Michigan, Mississippi, Missouri, Nebraska, Nevada, New Hampshire, New York, North Carolina, North Dakota, Pennsylvania, Rhode Island, South Dakota, Tennessee, Utah, West Virginia

**IMPORTANT!** Please remove all parts from the package and identify them before assembly.

**IMPORTANT!** Before assembly and each use, inspect this product for damaged hardware, loose joints, missing parts, or sharp edges. NEVER use if any parts are missing or broken. Contact manufacturer for replacement parts and instructions if needed. Never substitute parts. IMPORTANT! Adult assembly is required.



Stroller Frame







**Child Bar** 



Canopy

**Parent Organizer** 





**Shoulder Pads** 

**Crotch Pad** 





## **ASSEMBLY**

Remove stroller from box. The canopy, and child bar need to be installed prior to use.


WARNING: Care must be taken when folding and unfolding the stroller to prevent finger entrapment.

#### UNFOLDING STROLLER

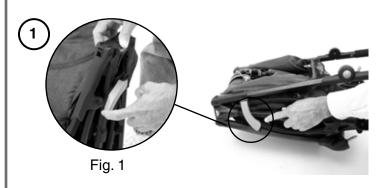

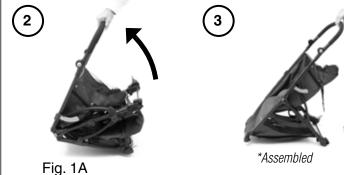

FOLDING STROLLER

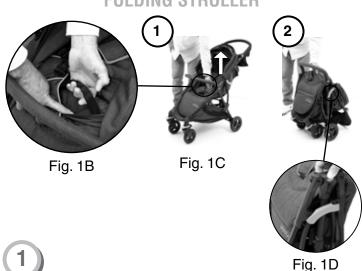


#### UNFOLDING THE STROLLER & INSTALLING STROLLER SEAT

- **To unfold stroller:** Release the locking latch clip located on the left side of the stroller (Fig. 1)
- Lift up the stroller by the handlebar and pull up and back until the stroller locks into place (Fig. 1A)
- **To fold stroller:** Locate folding belt under the center of stroller seat (Fig. 1B)
- Firmly pull the belt up and folder will collapse onto itself (Fig. 1C)
- Make sure auto latch is engaged (Fig. 1D)


WARNING: Care must be taken when folding and unfolding the stroller to prevent finger entrapment.

### **ASSEMBLY**

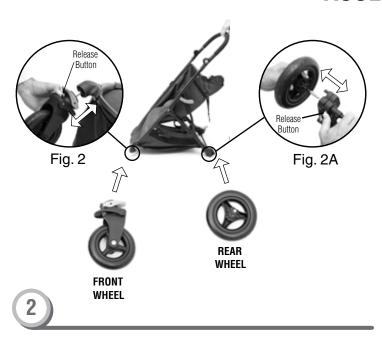


#### **INSTALLING & REMOVING FRONT & REAR WHEELS**

- To install front wheels: While holding release button, push each front wheel into the front wheel housing until you hear a 'CLICK'. Ensure it is securely attached to the stroller before use. (Fig. 2)
- To install rear wheels: While holding release button, push each rear wheel into the rear wheel housing until you hear a 'CLICK'. Ensure it is securely attached to the stroller before use. (Fig. 2)
- To remove the front wheels: Locate the release button which can be found on the wheel housing (Fig 2A).
- While pushing the release button, gently remove the wheel from housing (Fig. 2B).
- **To remove the rear wheels**: Locate the release button which can be found on the wheel housing (Fig 2A).
- While pushing the release button, gently remove the wheel from housing (Fig. 2B).

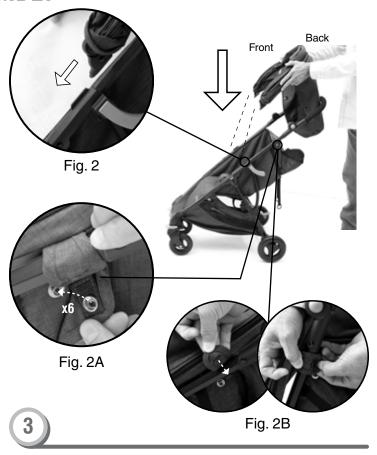

#### **INSTALLING & REMOVING CANOPY**


- **To install canopy:** Locate canopy grooves at sides of stroller frame, and slide both sides of canopy down until secure (Fig. 2).
- Locate button snaps along farthest edge of canopy and snap around all sides (Fig. 2A)
  - **NOTE:** There are a total of six (6) button snaps needed to fully secure canopy.
- Locate canopy slit and knob on frame and secure (Fig. 2B)
- To remove canopy: Follow these steps in reverse.

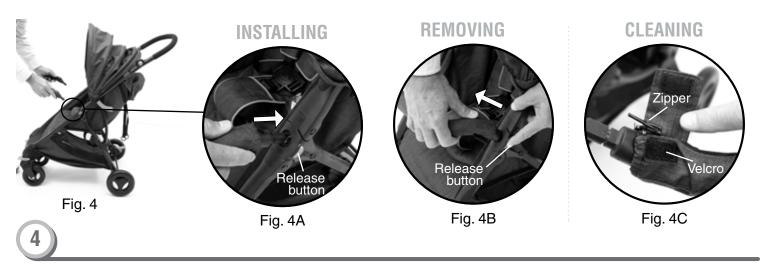

#### **INSTALLING & REMOVING CHILD BAR**

- **To install child bar:** Align the child bar with the socket on the frame (Fig. 4) and insert until you hear a 'CLICK'. Child bar is properly inserted when release buttons are in the raised position (Fig. 4A).
- To remove child bar: Push in release buttons located at child bar conneciton points (Fig. 4A) and pull the child bar away from the stroller frame.
- To remove fabric for cleaning: Undo velcro at end of child bar, unzip, and remove (Fig. 4C).

### **SETUP AND USE**

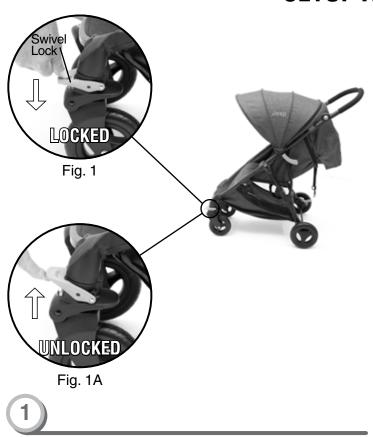




- To engage the lock, Align the wheels forward and push the lever located at the rear of the front wheel down towards the wheel (Fig. 1)
- To release the lock, pull the lever up away from the wheel (Fig. 1A)



#### **USING THE REAR WHEEL BRAKES**

- To engage brakes, apply a light downward pressure to the brake lever.
   Ensure that the brakes have been applied correctly and that the stroller will not move (Fig. 2).
- To release brakes, use foot to gently lift up the brake lever (Fig. 2A).

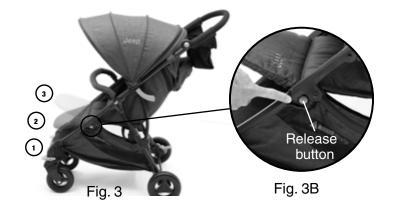



#### **ADJUSTING FOOTREST ANGLE**

- **To adjust footrest angle:** Press and hold release buttons located at either side of the leg rest joint (Fig. 3).
- While release buttons are held, adjust footrest angle to desired position and make sure buttons are in raised position before use. (Fig 3B)



#### **ADJUSTING SEAT INCLINE & RECLINE**

- **To incline:** Use finger to pull clip down (Fig. 4)
- **To recline:** While holding adjustment clip in one hand, use free hand to pull straps, which will increase seat height incline (Fig. 4A).

### **SECURING CHILD**

#### Before Placing your Child in Stroller:

Close Canopy. Press both brake pedals down until they "click" into the locked position.


#### Make sure the brake pedals are pressed down completely.

Always set both brake pedals when parking the stroller.




#### Securing Child


- Place your child in the stroller. Position the crotch belt between your child's legs.
- Pull shoulder straps over child's arm and shoulder and fasten both strap ends to the restraint system.
- Fasten **both** waist belts to the buckle on each side of the crotch belt. Make sure you hear a "**click**" on both sides.
- Check to be sure the restraint system is securely attached by pulling it away from your child. The restraint system should remain attached.

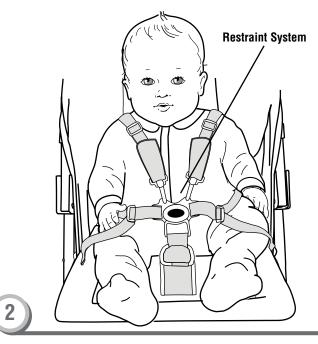

• Tighten each waist belt and shoulder strap so that the restraint system is snug against your child.

Please refer to the next section for instructions to tighten the waist belts.

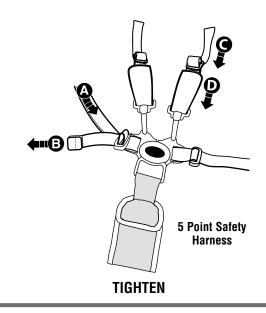

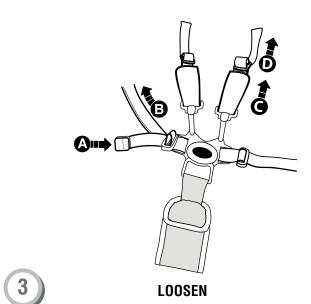

#### To tighten the waist belts and shoulder straps:

- Feed the anchored end of a waist belt up through the buckle to form a loop (A). Pull the free end of the waist belt (B).
- Repeat this procedure to tighten the other waist belt.
- Feed the top end of the shoulder strap through the plastic stay to form a loop **②**. Pull the bottom end down to tighten the strap **①**.
- Repeat this procedure to tighten the other shoulder strap.


#### To loosen the waist belts and shoulder straps:

- Feed the free end of the waist belt up through the buckle to form a loop . Enlarge the loop by pulling on the end of the loop toward the buckle. Pull the anchored end of the waist belt to shorten the free end of the waist belt.
- Repeat this procedure to loosen the other waist belt.
- Feed the bottom end of the shoulder strap through the plastic stay to form a loop ②. Pull the top end up to loosen the strap ②.
- Repeat this procedure to loosen the other shoulder strap.

**Please note:** After adjusting the restraint system to fit your child, make sure you pull on it to be sure it is securely fastened.


## **INSTALLING CAR SEAT ADAPTER CLIPS**

Adapter 10070-001 available separately at www.DeltaChildren.com

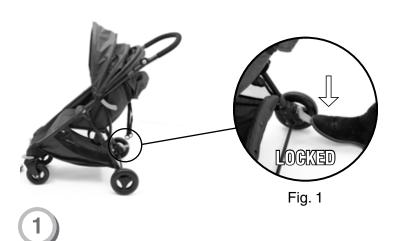

#### **LOCK THE REAR WHEELS**


To engage brakes, apply a light downward pressure to the brake lever.
 Ensure that the brakes have been applied correctly and that the stroller will not move (Fig. 1)

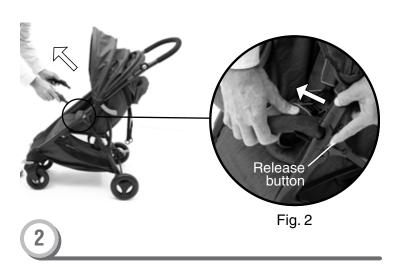

#### **REMOVE CHILD BAR**

 To remove child bar: Push in release buttons located at child bar connection points (Fig. 2) and pull the child bar away from the stroller frame.



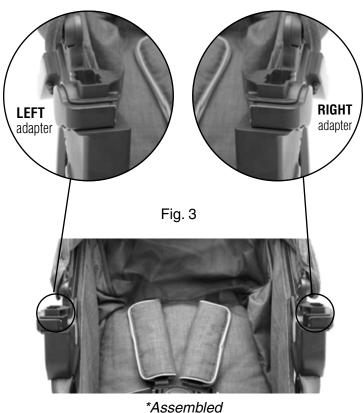

#### **INSTALL CAR SEAT ADAPTER CLIPS**

• To install car seat adapter clips: Insert adapter clips in correct left and right sockets as shown until you hear a "CLICK" (Fig. 3).

## ATTACHING CHICCO® CAR SEATS

Chicco® Keyfit 30™

Car seat adapter # 10070-100 available separately for purchase at www.DeltaChildren.com

#### **BEFORE YOU START**







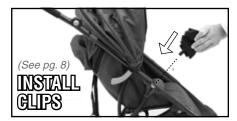


Fig. 1

Fig. 1A

Fig. 1B

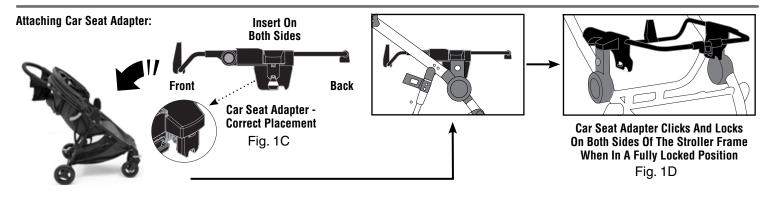


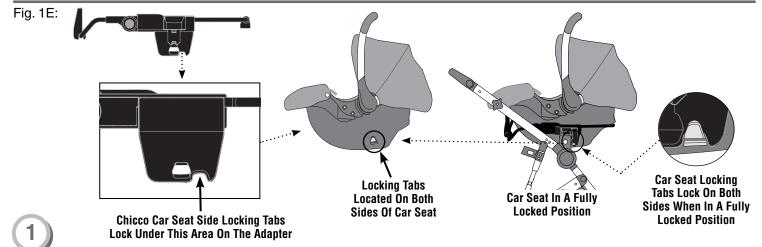

#### Attaching Chicco® Car Seats - Keyfit 30™:

**BEFORE YOU START:** Lock the rear wheels (Fig. 1). Remove child bar (Fig. 1A). Install Car Seat Adapter Clips -- see pg. 8 for full instructions (Fig. 1B). **ATTACHING CAR SEAT:** Attach the car seat adapter to the stroller frame (Fig. 1C) until it clicks into a fully locked position (Fig. 1D). Place car seat into car seat adapter until it "CLICKS" into a fully locked position. Chicco car seats "CLICK" and lock on both sides of the adapter when in a fully locked position (Fig. 1E). Make sure car seat is fully fastened by pulling upward.

#### Securing Car Seat With Velcro Straps:

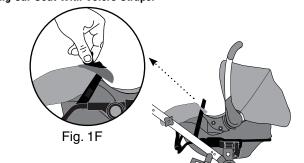

#### Securing Car Seat With Velcro Straps-

Final step to secure the footrest side of car seat onto stroller, use the straps with velcro to secure seat onto stroller. (Fig. 1F). Check that car seat is securely attached by pulling up on the car seat. To remove, undo latches and unlock car seat from adapter.

## ATTACHING GRACO® CAR SEATS

Graco SnugRide® Click Connect™ 30, 35, and 40 Car seat adapter # 10070-100 available separately for purchase at www.DeltaChildren.com

#### **BEFORE YOU START**







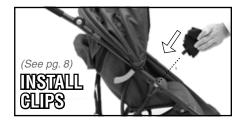


Fig. 2 Fig. 2A Fig. 2B

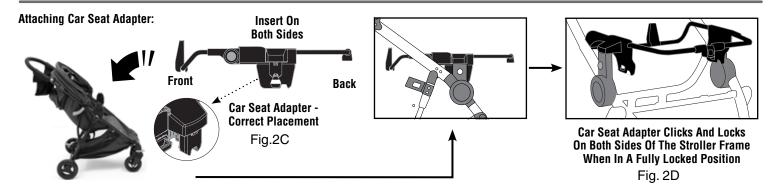


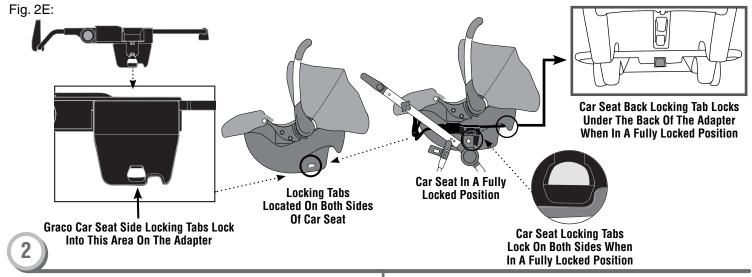

## Attaching Graco® Car Seats- SnugRide® Click Connect™ 30, 35 and 40:

**BEFORE YOU START:** Lock the rear wheels (Fig. 2). Remove child bar (Fig. 2A). Install Car Seat Adapter Clips -- see pg. 8 for full instructions (Fig. 2B). **ATTACHING CAR SEAT:** Attach the car seat adapter to the stroller frame (Fig. 2C) until it clicks into a fully locked position (Fig. 2D). Place car seat into car seat adapter until it "CLICKS" into a fully locked position. Graco car seats "CLICK" and lock on the back and both sides of the adapter when in a fully locked position (Fig. 2E). Make sure car seat is fully fastened by pulling upward.

#### Securing Car Seat With Velcro Straps:

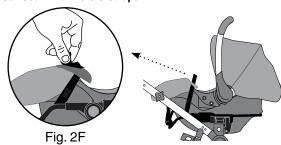

#### Securing Car Seat With Velcro Straps-

Final step to secure the footrest side of car seat onto stroller, use the straps with velcro to secure seat onto stroller. (Fig. 2F). Check that car seat is securely attached by pulling up on the car seat. To remove, undo latches and unlock car seat from adapter.

## ATTACHING EVENFLO® CAR SEATS

Evenflo® Nurture™ and Embrace™

Car seat adapter # 10070-100 available separately for purchase at www.DeltaChildren.com

#### **BEFORE YOU START**








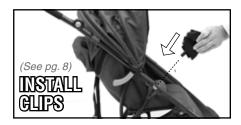


Fig. 3 Fig. 3A Fig. 3B

#### **Attaching Car Seat Adapter:**

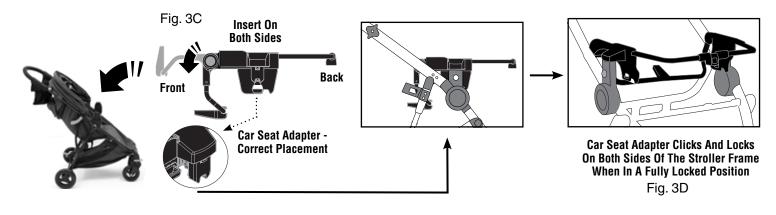

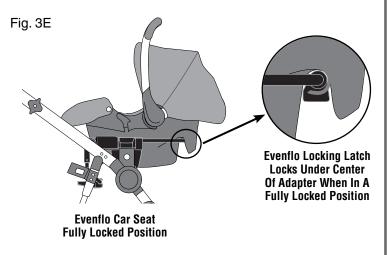

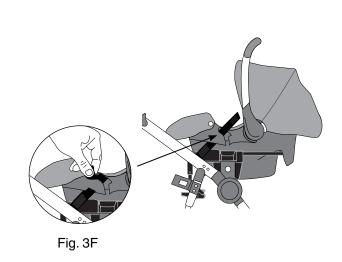

3

#### Attaching Evenflo® Car Seats - Evenflo® Nurture™ and Embrace™

**BEFORE YOU START:** Lock the rear wheels (Fig. 3). Remove child bar (Fig. 3A). Install Car Seat Adapter Clips — see pg. 8 for full instructions (Fig. 3B). **ATTACHING CAR SEAT:** Attach the car seat adapter to the stroller frame (Fig. 3C) until it clicks into a fully locked position (Fig.3D). Place car seat into car seat adapter until it "CLICKS" into a fully locked position. Evenflo car seats "CLICK" and lock on the back of the adapter when in a fully locked position (Fig. 3E). Make sure car seat is fully fastened by pulling upward.

#### Securing Car Seat With Velcro Straps-

Final step to secure the footrest side of car seat onto stroller, use the straps with velcro to secure seat onto stroller. (Fig. 3F). Check that car seat is securely attached by pulling up on the car seat. To remove, undo latches and unlock car seat from adapter.

## ATTACHING BRITAX® CAR SEATS

Britax® B-Safe 35™

Car seat adapter # 10070-100 available separately for purchase at www.DeltaChildren.com


#### **BEFORE YOU START**








Fig. 4 Fig. 4A Fig. 4B

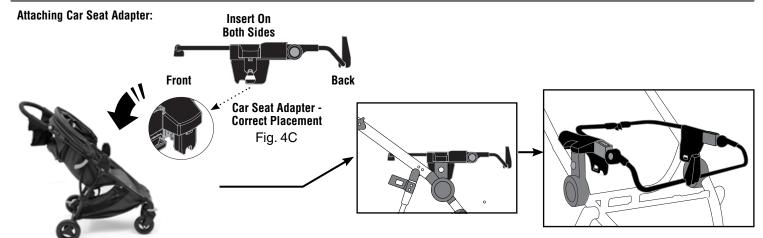

Car Seat Adapter Clicks And Locks On Both Sides Of The Stroller Frame When In A Fully Locked Position Fig. 4D

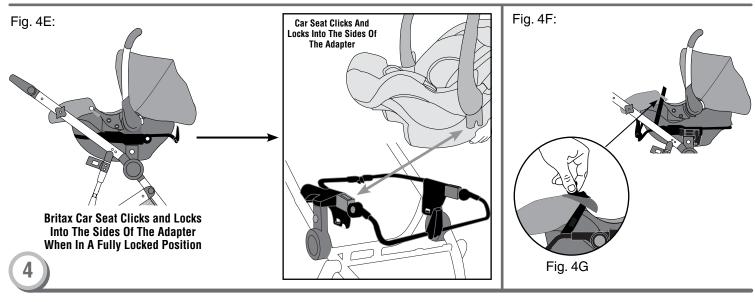


#### Attaching Britax® Car Seats - B-Safe 35™ -

**BEFORE YOU START:** Lock the rear wheels (Fig. 4). Remove child bar (Fig. 4A). Install Car Seat Adapter Clips -- see pg. 8 for full instructions (Fig. 4B). **ATTACHING CAR SEAT:** Attach car seat adapter to the stroller frame (Fig. 4C) until it clicks into a fully locked position (Fig. 4D). Place car seat into car seat adapter until it "CLICKS" into a fully locked position. Britax car seats "CLICK" and lock on the both sides of the adapter (Fig. 4E). Make sure car seat is fully fastened by pulling upward.


#### Securing Car Seats With Velcro Straps-

Final step to secure the footrest side of car seat onto stroller, use the straps with velcro to secure seat onto stroller. (Fig. 4F). Check that car seat is securely attached by pulling up on the car seat. To remove, undo latches and unlock car seat from adapter (Fig. 4G).

## Notes

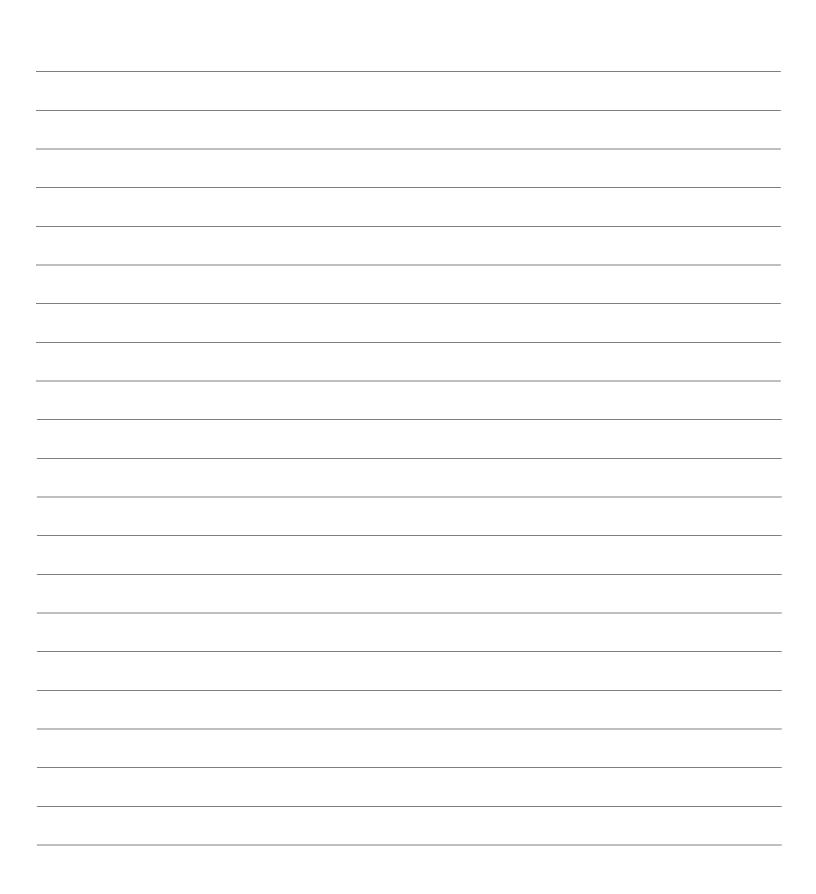

## **Notes**

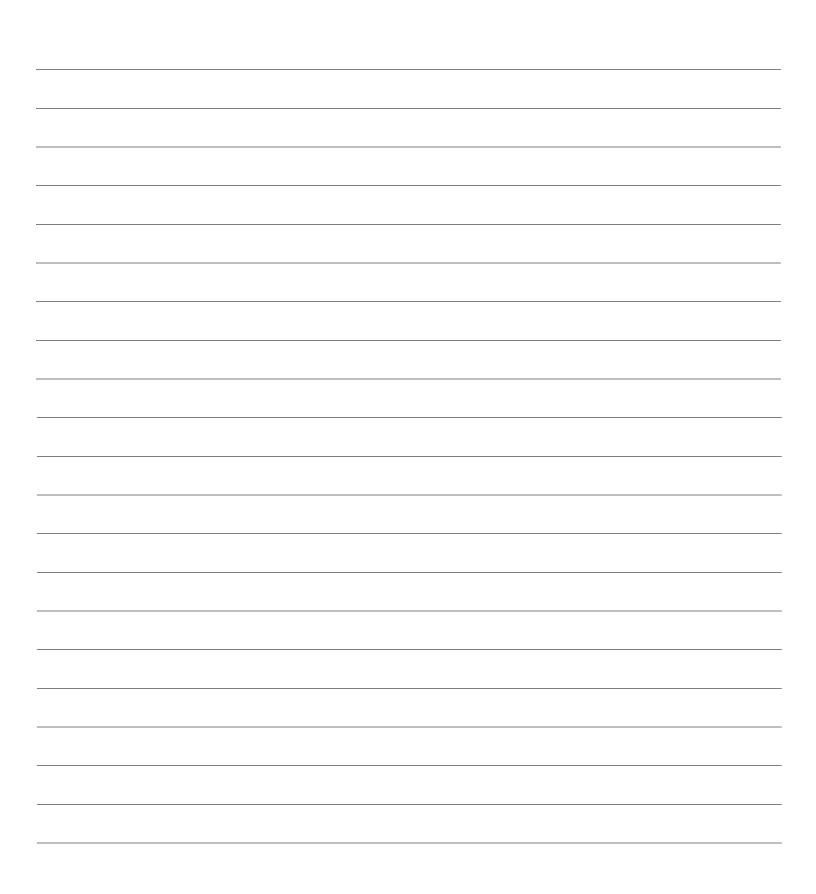



Delta Children's Products Corp. 114 West 26<sup>th</sup> Street New York, NY 10001 gcs@DeltaChildren.com www.DeltaChildren.com