

SWEET SLUMBER BASSINET



INSTRUCTION MANUAL

ADULT ASSEMBLY REQUIRED

25602

**▲ WARNING:
CHOKING HAZARD**

Adult assembly required because of small parts. Keep assembly parts out of reach of children under 3 years.

STYLES AND COLORS MAY VARY

**REQUIRED: 4 x AA Batteries
(not included)
Screwdriver
(not included)**



**Read all instructions BEFORE assembly and USE of product
KEEP INSTRUCTIONS FOR FUTURE USE.**

Customer Experience Center
phone: (646) 435-8726
email: gcs@DeltaChildren.com



www.DeltaChildren.com

DCP-IM-01242020-F7

Consumer Information



WARNING

Failure to follow these warnings and instructions could result in serious injury or death.

- **Read all instructions before assembling unit.**

KEEP INSTRUCTIONS FOR FUTURE USE.

DO NOT USE THIS UNIT IF THE INSTRUCTIONS CANNOT BE STRICTLY FOLLOWED.

- Before each usage or assembly, inspect unit for damaged hardware, loose joints, missing parts or sharp edges. NEVER use this product if there are any loose or missing fasteners, loose joints, broken parts, or torn mesh/fabric. Check before assembly and periodically during use. Contact Delta Children's Products Customer Service Department at 646-435-8726 for replacement parts, repair or instructions.
- **DO NOT** substitute parts.
- **FALL HAZARD**—For use from birth to 5 months or until your baby begins to push up on their hands and knees, whichever comes first.
- Use bassinet with only one child at a time.
- Strings can cause strangulation! **DO NOT** place items with a string around a child's neck, such as hood strings or pacifier cords. **DO NOT** suspend strings over a product or attach strings to toys.
- **SUFFOCATION HAZARD:** Infants can suffocate:
 - In gaps between an extra pad and side of the bassinet/criadle.
 - On soft bedding.
- Use **ONLY** the pad provided by the manufacturer. **NEVER** add a pillow, comforter or another mattress for padding.
- If a sheet is used with the pad, use only the one provided by the manufacturer or one specifically designed to fit the dimensions of the bassinet/criadle.
- To reduce the risk of SIDS, pediatricians recommend healthy infants be placed on their back to sleep, unless otherwise advised by your physician.
- Never use plastic shipping bags or other plastic film as a mattress covers not sold and intended for that purpose. They can cause suffocation.
- **DO NOT** place bassinet near a window where cords from blinds or drapes may strangle a child. Child may fall out of window.
- **DO NOT** place cords, straps or similar items that could become wound around a child's neck in or near the bassinet.

CARE AND MAINTENANCE

- The frame, mattress pad, storage basket, mobile arm may be wiped clean using a mild cleaning solution and a damp cloth. Do not use bleach. Do not use harsh or abrasive cleaners. Rinse clean with water to remove residue. Do not immerse the frame.
- The sheet is machine washable. Wash it separately in cold water on the gentle cycle. Do not use bleach. Tumble dry separately on low heat and remove promptly.
- Always store product in a clean and dry place.
- Before each usage or assembly, inspect unit for damaged hardware, loose joints, missing parts or sharp edges. NEVER use this product if there are any loose or missing fasteners, loose joints, broken parts, or torn mesh/fabric.



Before returning this product to the store! Let's see if we can assist you!

- **Not sure how to assemble our product?**

Visit our site for easy to follow instructions along with some Tricks and Tips assembly video's <https://www.deltachildren.com/pages/instructions>

- **If you are missing a piece or have a damaged part**

Please contact our Consumer Experience Center for assistance at 646-435-8726 or email gcs@DeltaChildren.com. To better assist you please have your Style# or Model# and Lot# available. This can be found on a white rectangular sticker on your product, on the registration card, and on the product's box.

- **In the event we do not have a replacement part available**

You may need to return your product to the retailer for an exchange or refund.

- **Warranty**

In order to protect your investment, don't forget to register your product. You may also wish to consider purchasing our extended warranty.

Visit <https://www.deltachildren.com/pages/extended-warranty> for more details.

- **Please note:**

"All Final", "As Is" or Third Party/Liquidator sales are not covered under our Limited Limited Manufacturer Warranty..



LIMITED MANUFACTURER WARRANTY

This Delta product is warranted to be free from defects for a period of 90 days from the date of purchase under normal use. This warranty extends only to the original retail purchaser and is valid only when supplied with proof of purchase, or if received as a gift, when the registration is on file with Delta. This limited manufacturer warranty does not cover the following:

- Products purchased as floor models or samples.
- Items purchased on an “as-is” basis, as a second hand product, or as a resale product.
- Items purchased at a Final sale, a “Going out of Business” sale, or a Liquidation sale.

TO REGISTER YOUR PRODUCT for important safety alerts and updates to your product please visit www.deltachildren.com

TO REPORT A PROBLEM, please log on to www.deltachildren.com and click the Consumer Care Tab, or contact us by phone at (646) 435-8726 or email gcs@DeltaChildren.com

Date of Purchase: _____ (you should also keep your receipt)

EXTENDED WARRANTY

DON'T MISS YOUR CHANCE TO BE COVERED FOR ALL OF LIFE'S MISHAPS!

With Delta's Extended Warranty, you're covered for mechanical failure from normal use or if your item stops working due to normal wear and tear, plus all those unexpected surprises.

2 YEARS OF PROTECTION

For Additional Information:

 
Simply visit our Website, register your product, and add the Extended Warranty

<https://www.deltachildren.com/pages/product-registration>


Extended Warranty only available in the following States: Arkansas, Colorado, Delaware, District of Columbia, Georgia, Idaho, Illinois, Indiana, Iowa, Kansas, Kentucky, Louisiana, Maryland, Michigan, Mississippi, Missouri, Nebraska, Nevada, New Hampshire, New York, North Carolina, North Dakota, Pennsylvania, Rhode Island, South Dakota, Tennessee, Utah, West Virginia

Parts


IMPORTANT! Please remove all parts from the package and identify them before assembly.

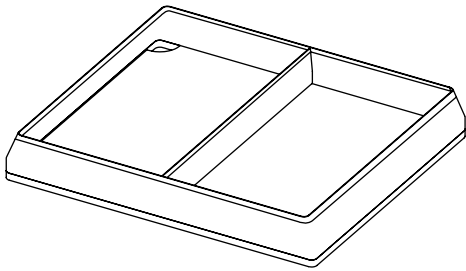


Storage Basket

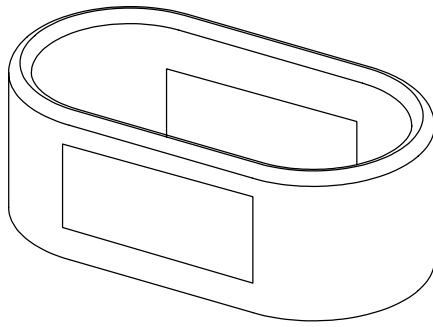 


Fabric Liner

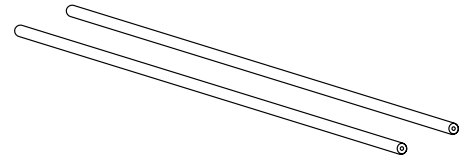 


Basket Support Tubes

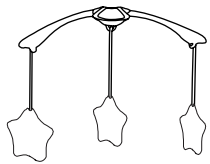 


Toys

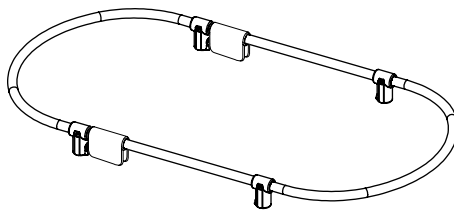 


Top Rail Frame

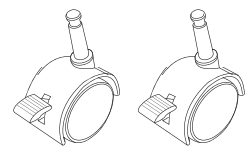 


Locking Casters (X2)

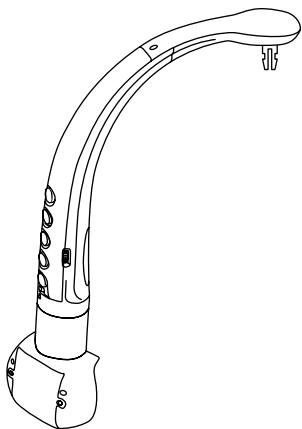 


Mobile arm

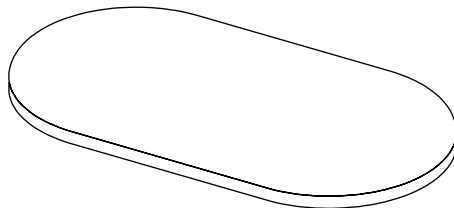 


Matress Pad

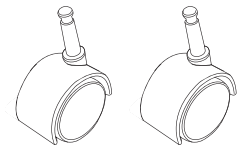 


Casters (X2)

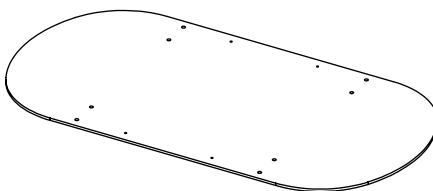 


Matress Support

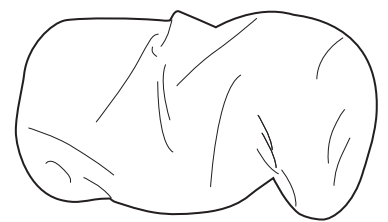 


Sheet

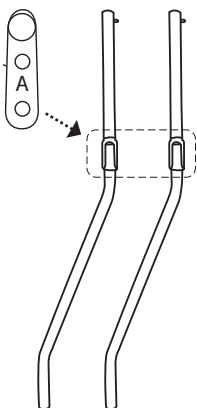 

Support Legs (A)

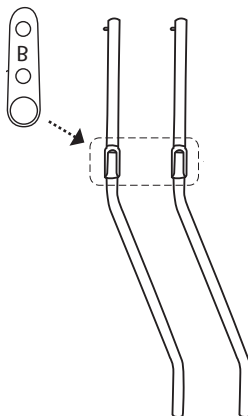 


Support Legs (B)

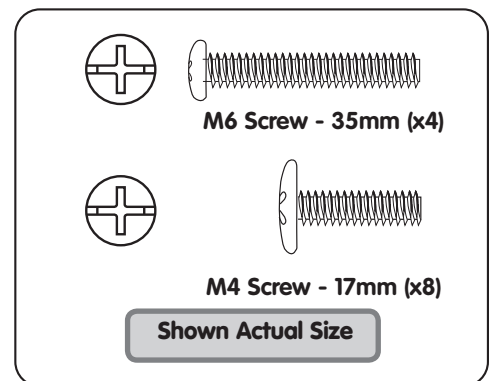 


Bassinet Frame Assembly

 Support Leg Insert

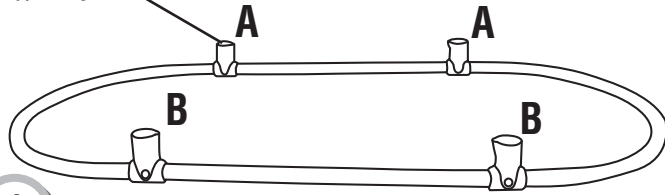

1

 
- Locate the top rail frame.
- Lay the top rail frame on the floor with the support leg inserts facing up.

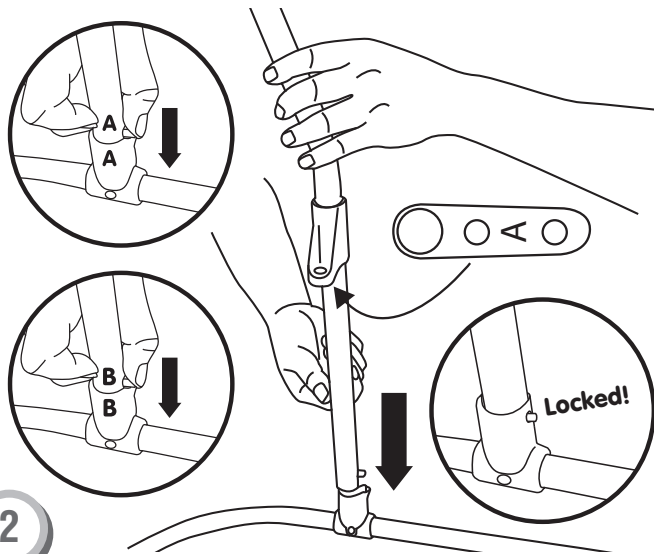

2


- Locate the four (4) support legs.
- Identify support legs labeled "A" and "B".
- Align leg "A" with leg support insert "A".
- Insert the support leg into the support leg insert and push the leg down until you hear it "click" into the locked position.
- Repeat for other support leg "A" and two support legs "B".

 Plastic mattress board supports

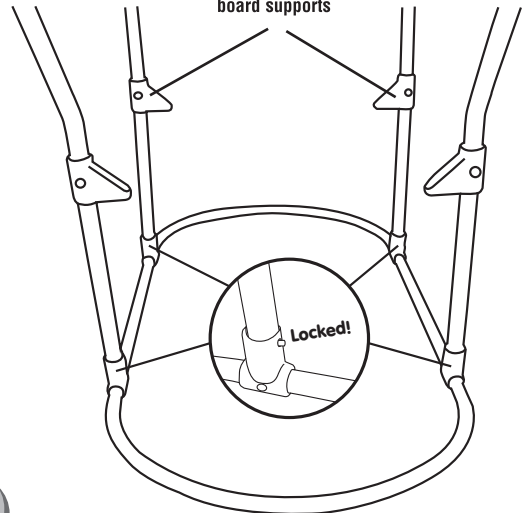


3

 - Make sure all plastic mattress board supports are facing inward.
- Confirm that all four support legs have been properly inserted into the support leg inserts as shown above.
- Pull upon all support legs to assure they are properly locked to the top frame.





Mattress Board

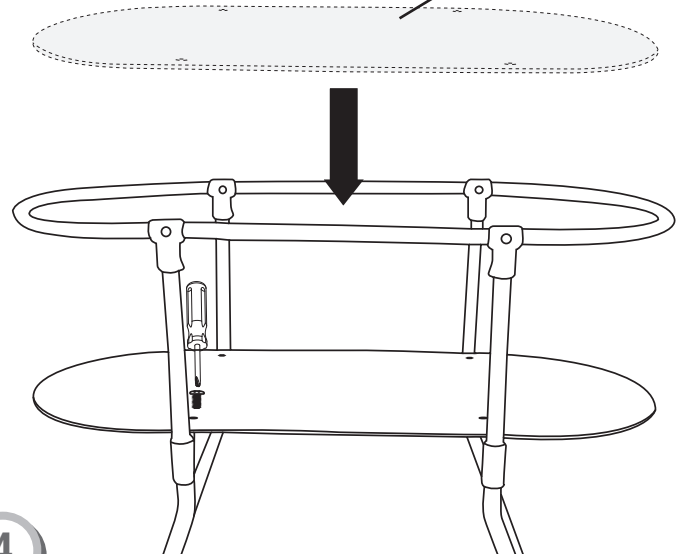 

4


- Locate the mattress board and eight (8) M4 screws.
- Place the mattress board into the frame lining up the four through holes with the plastic mattress board support nuts.
- Using a screw driver and four (4) M4 screws, tighten the mattress board onto the plastic mattress board supports.
- Repeat this procedure for the four (4) remaining screw holes.

  Storage Basket & Casters Assembly

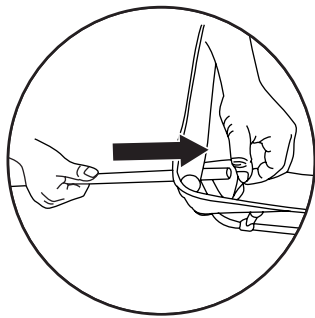


Slide Support Tube Into Fabric Storage Liner

 Fabric Storage Liner

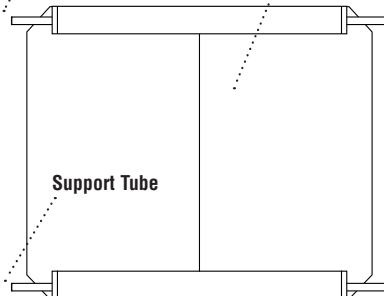


Support Tube

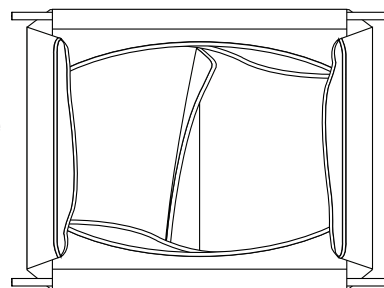 

Fabric Storage Liner Facing Upward


1

 - Locate the two (x2) support tubes, and the fabric storage liner.
- Slide the support tubes into fabric storage liner on both sides.
- Flip over the fabric storage liner with support tubes, facing upward.

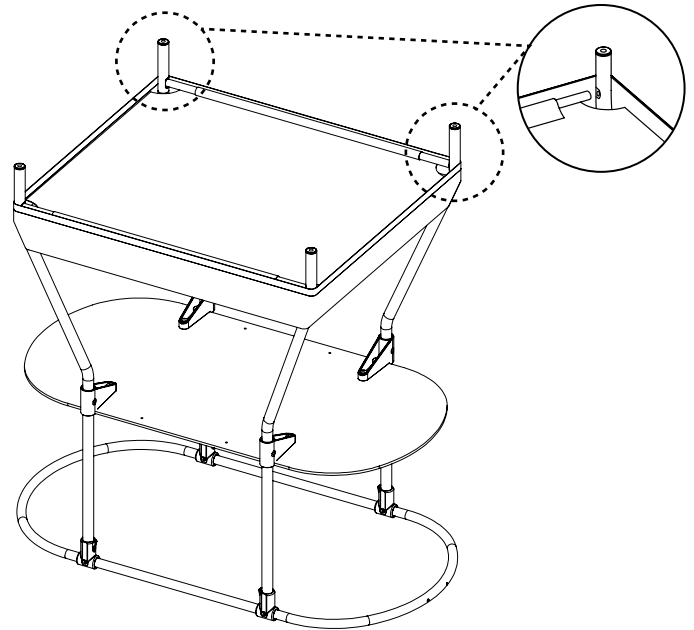


2

 - Align storage basket to bottom base legs.
- Insert each end of the support tubes to the entry hole of the base legs.

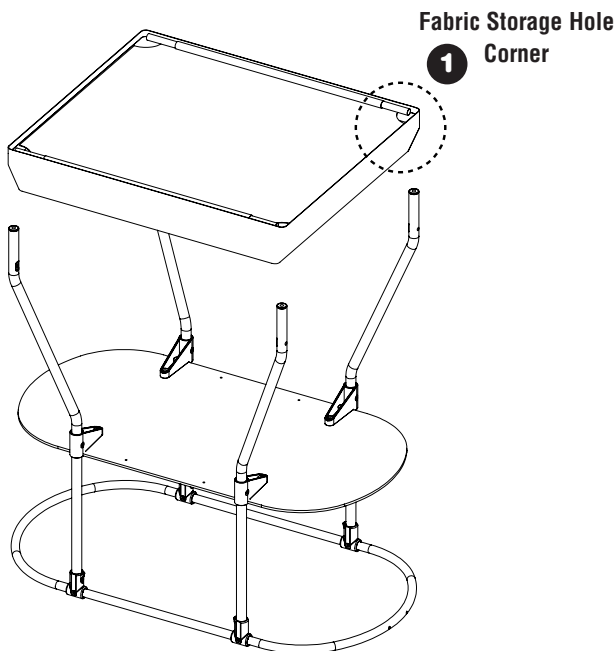

Fabric Storage Hole Corner

 1


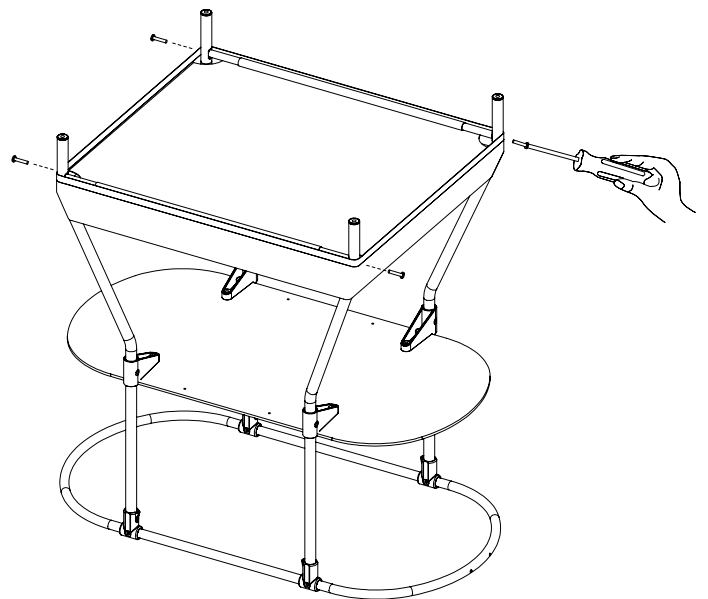


3


- Locate the four (x4) M6 x 1.7cm screws and a Phillips screwdriver
- Insert the (x4) M6 screws on both sides of the legs and use a Phillips screwdriver to tighten both screws on both sides.

NOTE: Pull side support tube to make sure it's fully fastened.

  Storage Basket & Locking Casters Assembly

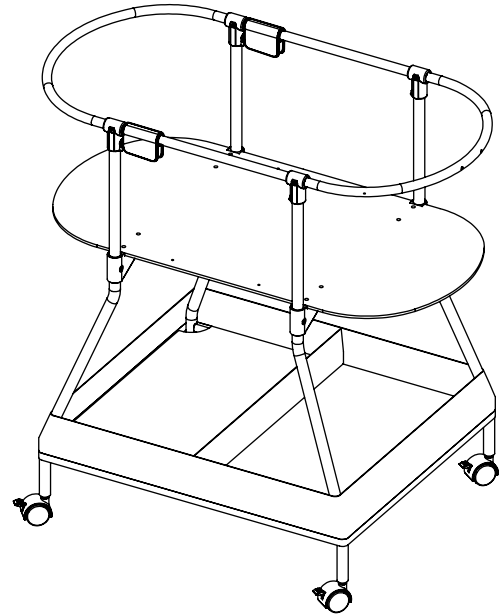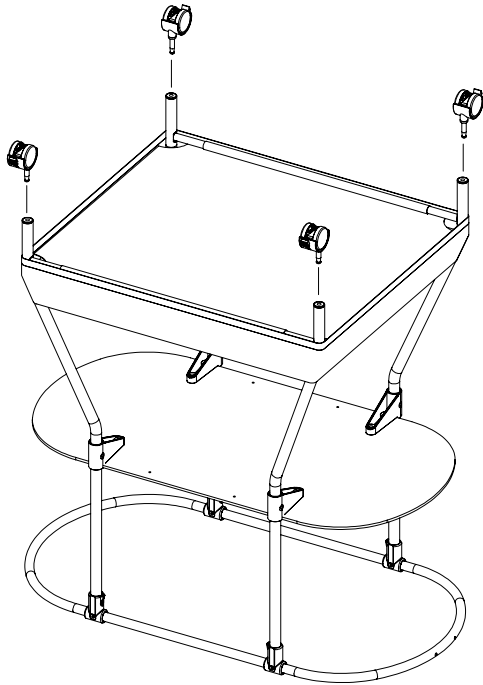

 
***Once casters are assembled,
turn the assembly bassinet upright.**

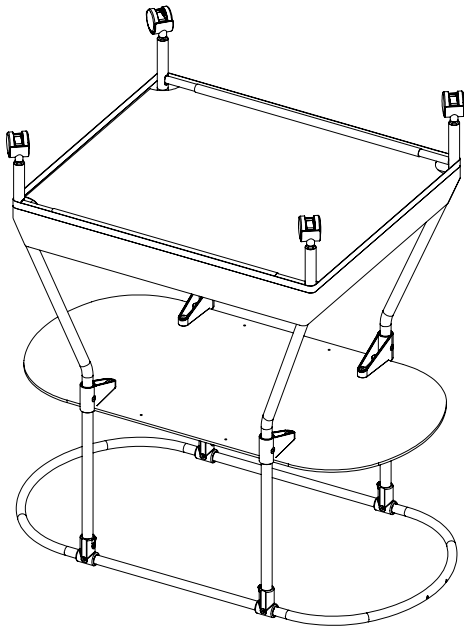

4

- Locate the four (x4) locking casters and insert into the bottom leg joints of the front base leg.
- Insert the casters into the base legs. Push down until you hear the caster “CLICK” into place.
- Pull upward on the caster to assure it is properly attached to the bassinet.

 Battery Compartment Cover




In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.
- When discarding batteries, be sure to dispose of them in the proper manner, according to your state and local regulations.

NOTE: We recommend using alkaline batteries for longer battery life. Make sure batteries are correctly installed.

- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

 Battery Installation

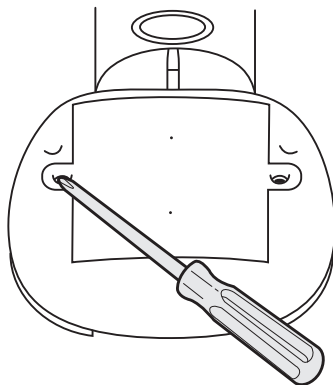




- Locate the battery compartment on the back of the mobile arm base.

Hint: We recommend using alkaline batteries for longer battery life.

- Loosen the screws in the battery compartment door with a Phillips screwdriver.
- Insert four "AA" (LR6) alkaline batteries into the battery compartment.
- Replace the battery compartment door and tighten the screws.

Note: Low battery power may cause product movement to slow, sound to become faint or product to turn off all together. If this should happen, replace the batteries with four, new alkaline "AA" (LR6) batteries.

   Mobile and Vibrations Unit Operation

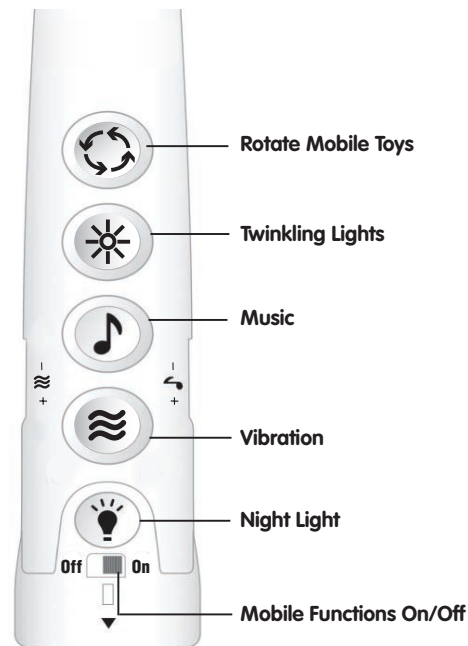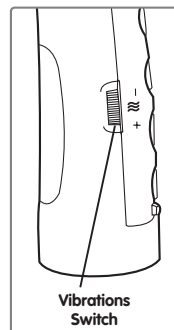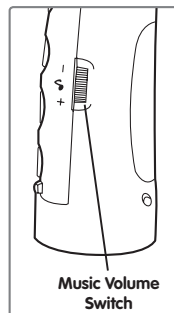

Mobile Functions On/Off Switch

- Push the Mobile Functions On/Off button at the base of the mobile arm to turn on power. This is the main power switch to the mobile arm and also turns on the power LED on the Night Light button. The LED will stay on in the dark.

Rotate Mobile Toys Button

- Press to begin a 5-minute cycle of rotation.
- Press again to stop the mobile.
- Press to start a new 5-minute cycle. If this button is pressed while mobile is operating, the rotation cycle will restart.

Twinkling Lights Button

- Press to start a 5-minute light show.
- Press again to stop the light show.

Music Button

- Press to start cycle of music.
- Press again to stop the music.

Vibration Button

- Press to start 5-minute cycle of vibration.
- Press again to stop vibration.

Night Light

- Press to turn on mobile light for 5 minutes.
- Press again to turn light off.

 
Vibration Switch

- Push toward + to increase vibration.
- Push toward – to decrease vibration.

Music Volume Switch


- Push toward + to increase volume.
- Push toward – to decrease volume.

Fabric & Mattress Pad Assembly

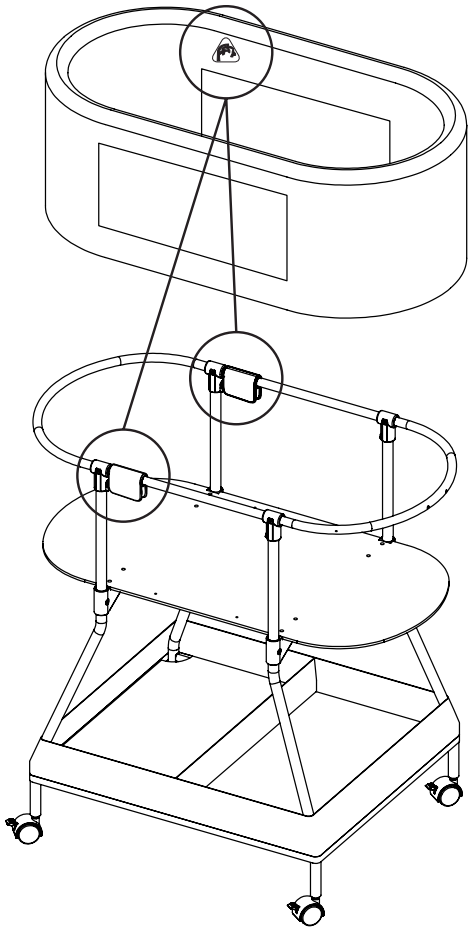


1

 - Place the liner onto frame. Make sure mobile arm icon is aligned with mobile arm joint.

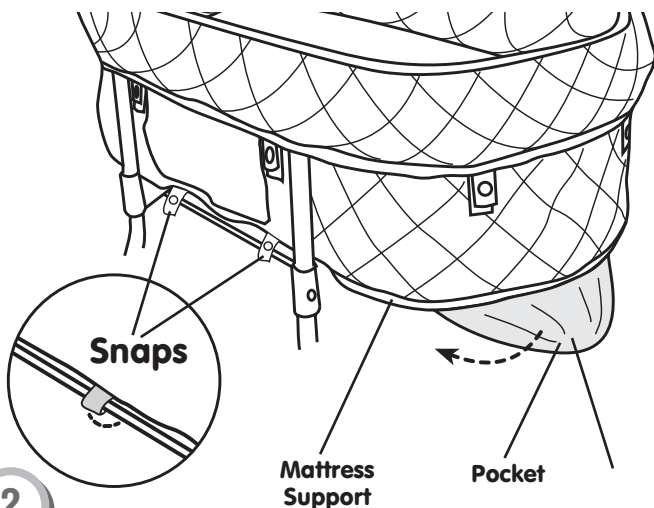

2

 
- Stretch the pockets bottom of the liner around the ends of the mattress support.

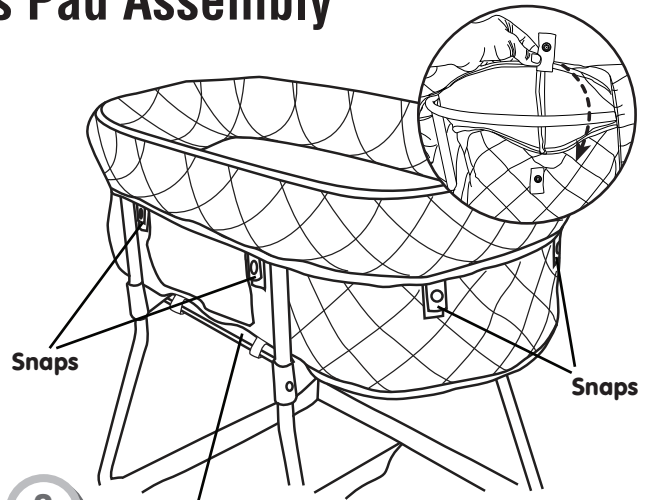

3


Mattress Support

 - Lift the skirt on the liner. Snap all 4 straps around the top of the side of the frame.
- Repeat this procedure to snap the other 4 straps around the top of the frame.

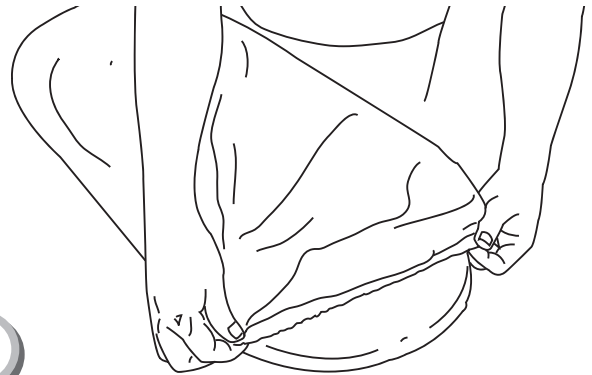

4

 
- Place the sheet over the mattress pad.

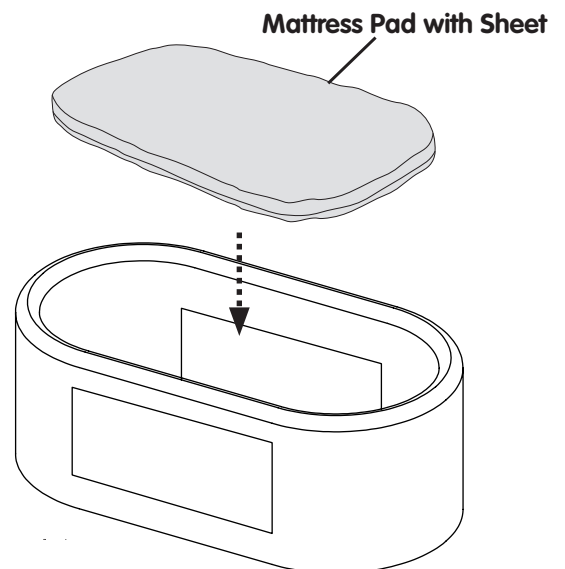


5


- Please place the mattress pad with sheet inside the bassinet for the safety and comfort of your baby.

 Mobile Arm Assembly

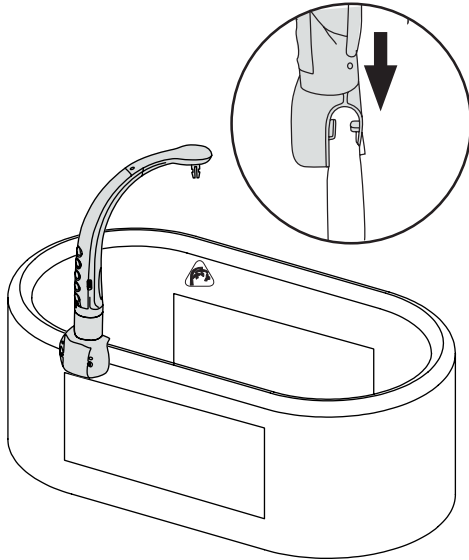


1

 - Place the mobile arm over the mobile icon  located on the side rails.
- Push down until you hear it “snap” into the bracket located inside the side rail.

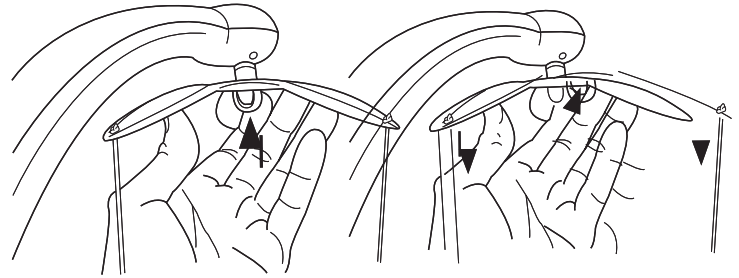

3

 
- Fit the mobile to the mobile arm. Push the mobile up firmly.
Hint: To disassemble the mobile for storage, press the tab on the mobile arm and pull the mobile down.

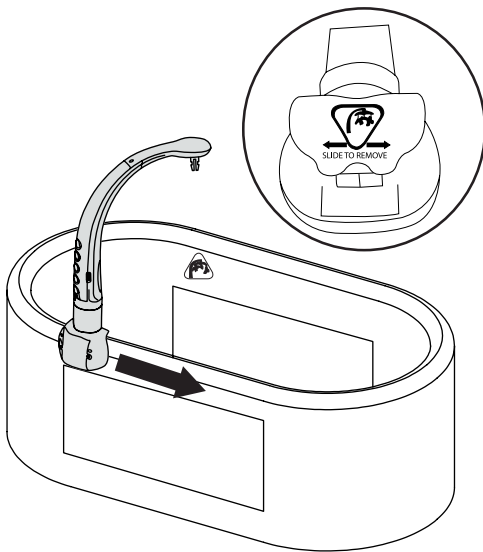

2

To Remove the Mobile Arm Assembly

 - First pull the latch on the base of the mobile arm out and then slide the mobile arm along the side rail.
- Lift the mobile arm off the top rail.

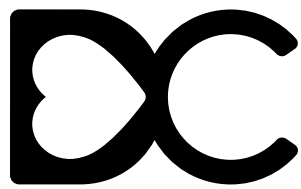

DELTACHILDREN

Delta Children's Products Corp.

114 West 26th Street
New York, NY 10001
646-435-8726
www.DeltaChildren.com